



DS3578

Quick Start Guide


<http://www.mbra.com/its3578>

See Product Reference Guide for more information

POST IN WORK AREA

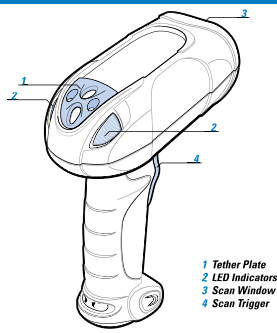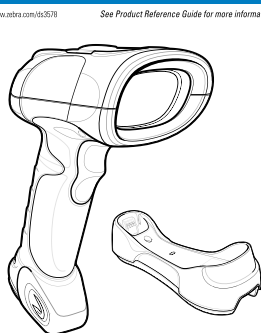


Cradle Insertion



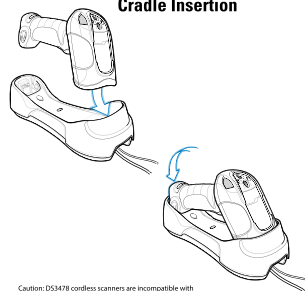


Caution: DS3478 cordless scanners are incompatible with STB3060/3578 cradles. DS3578 cordless scanners are incompatible with STB3400/3478 cradles.

BATTERY INSERTION/REMOVAL

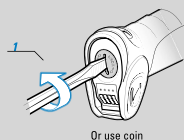

Or use coin



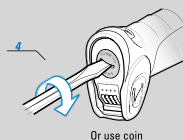
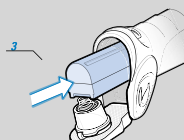
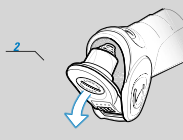


Or use coin

HOST INTERFACES

NOTE: Cables may vary depending on configuration. When using an external power supply, place the ferrite core on the power cable, insert the power supply cable into the cradle, then insert the host cable. Connect AC power last.

Cable Connection at Cradle

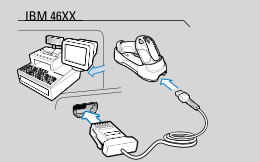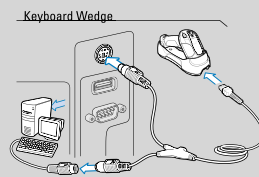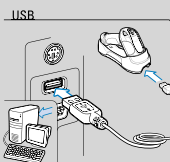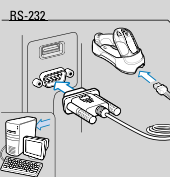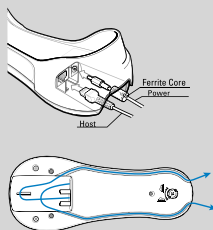

TROUBLESHOOTING

Please refer to the DS3578 Product Reference Guide Troubleshooting section for further information.

Scanner not working

No power to scanner

Check battery

End cap not secured correctly

Turn end cap to secure

Scanner decoding bar code, but data not transmitting to host

Scanner not paired to host-connected cradle

Pair the scanner to the cradle (using the PAIR bar code on the cradle)

Cradle not programmed for correct host interface

Check scanner host parameters or edit options

Interface cable is loose

Check for loose cable connections

If data is still not transmitting to host, it may be necessary to recycle power on the cradle.

Scanner not decoding bar code

Scanner not programmed for bar code type

Ensure scanner is programmed to read type of bar code being scanned

Bar code unreadable

Ensure bar code is not defaced; try scanning test bar code of same bar code type

Scanned data incorrectly displayed on host

Paired cradle host communication parameters do not match the host's parameters

Check cradle host parameters or edit options

DS3578 PROGRAMMING BAR CODES

Set Defaults

Note: The scanner connection to the cradle is dissolved when Set Defaults is scanned.



SET DEFAULTS

Unpairing/Disconnection



UNPAIR/DISCONNECT

USB Host Types



HID KEYBOARD EMULATION



IBM HAND-HELD USB

IBM 46XX Host Types



PORT 5B



PORT 5B

Keyboard Wedge Host Types



IBM PC/AT and IBM PC COMPATIBLE

Carriage Return/Line Feed



SCAN OPTIONS



<DATA>-<SUFFIX>



ENTER

Radio Communications Host Types



CRADLE HOST



SERIAL PORT PROFILE (SLAVE)



BLUETOOTH KEYBOARD EMULATION (HID SLAVE)



SERIAL PORT PROFILE (MASTER)

RS-232 Host Types



STANDARD RS-232



ICL RS-232



NIXDORF RS-232 MODE B



FUJITSU RS-232



NIXDORF RS-232 MODE A



OPDS/CPDS

