

Elf™ Quick Start Guide

THE PACKAGE

The Elf™ package includes the following items:

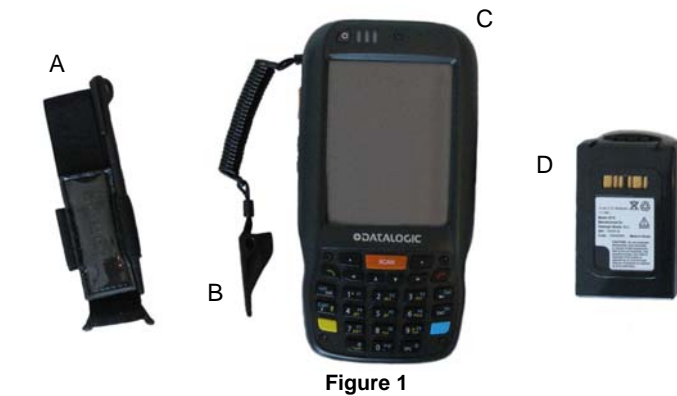


Figure 1

- A) Hand-strap with stylus holder
- B) Guitar Pick Stylus
- C) Elf™
- D) Rechargeable standard battery pack

THE TERMINAL



- A) Color Display*
- B) ON/OFF Power Key
- C) LEDs
- D) Front Scan Key
- E) Keyboard
- F) Guitar Pick Stylus
- G) Laser Safety Label
- H) Loudspeaker
- I) Headset Connector
- J) Product Label
- K) Reset Key (under battery)
- L) Micro-SD Card Slot (under battery)

* Remove protective film cover before use




- M) Side Scan Key (right)
- N) Push-to-talk Key
- O) Side Scan Key (left)
- P) Up/down Volume Keys




- Q) Data Capture/Laser Output Window
- R) Handylink Connector (host/slave)
- S) Micro USB Communication Connector (host/slave) for supplying power and data transfer

KEYPADS

Alphanumeric Keyboard

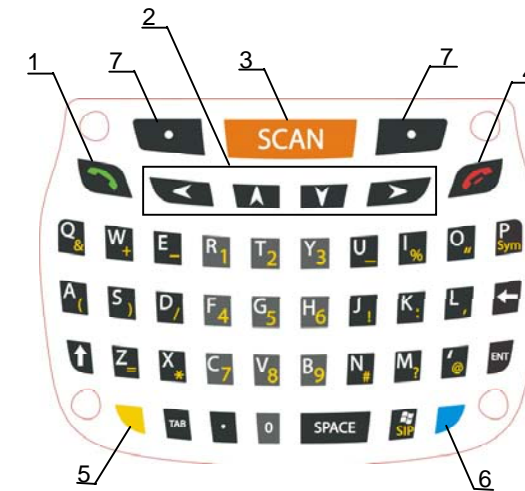

Numeric Keyboard

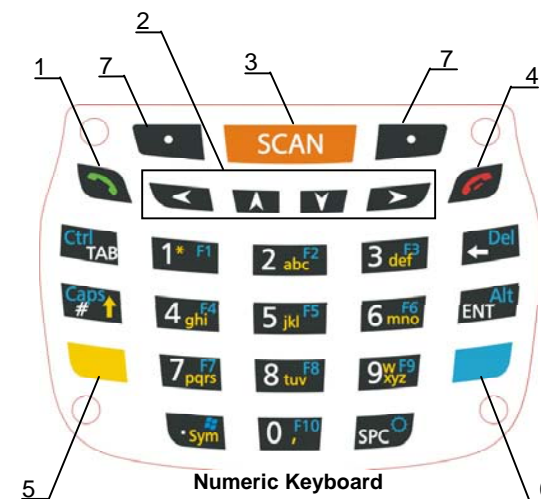

- 1. Call
- 2. Navigation
- 3. Scan Key
- 4. Hang Up
- 5. Yellow Modifier
- 6. Blue Modifier
- 7. Soft Key


GETTING STARTED

Insert the Battery

First insert the bottom side, then the upper (contacts) side of the battery pack into the slot and press it back until the battery latch is automatically closed:



Charge the Battery

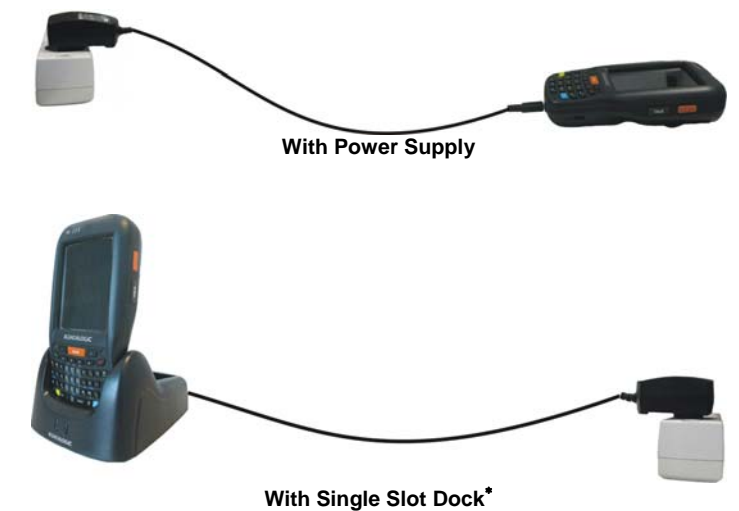

CAUTION Do not use the Elf™ until batteries are charged for minimum 4 hours.

SYNCHRONIZE YOUR DEVICE WITH THE PC

Set up Synchronization using Windows Mobile® Device Center

To establish a connection between the Elf™ and a host PC, start Windows Mobile® Device Center, which is pre-installed on the PDA, and follow the steps below:

- 1. Connect the Elf™ to the host PC. Windows Mobile® Device Center configures itself and then opens.
- 2. On the licence agreement screen, click Accept.
- 3. On the Windows Mobile Device Center's Home screen, click Set up your device.
- 4. Select the information types that you want to synchronize, then click Next.
- 5. Enter a device name and click Set Up.

When you finish the setup wizard, Windows Mobile Device Center synchronizes the PDA automatically. Microsoft® Office Outlook® emails and other information will appear on your device after synchronization.

Communicate with Host




INSTALLING A MICRO SD CARD/ SIM CARD

- 1. Turn off the Elf™.
- 2. Pull the battery latch down and remove the battery pack:




- 3. Shift the cardholder to the left and then pull it up:

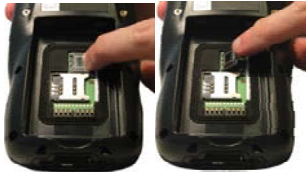

- 4. Insert the Micro SD card with the written part upward/ Insert the SIM card with the contacts downward:




- 5. Lock the card into place by pushing the cardholder down and then shifting it to the right:

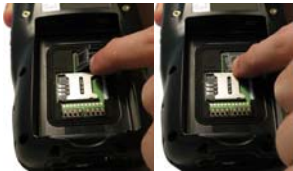


SCANNING AND IMAGING

Laser Data Capture

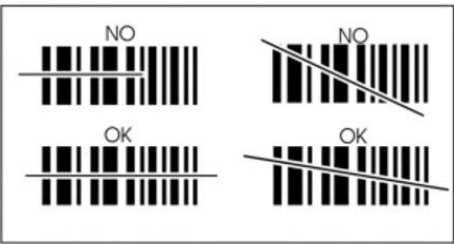


Imager Data Capture

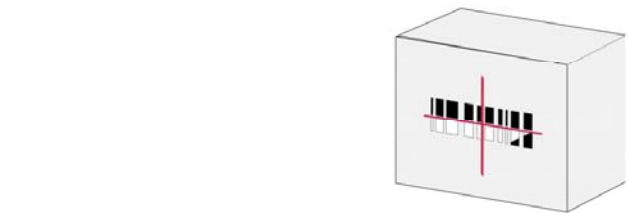

Linear barcode



2D Matrix symbol

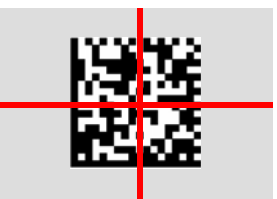

Relative Size and Location of Aiming System Pattern



REFERENCE DOCUMENTATION

For further information regarding Elf™ refer to the Elf™ User's Manual, available on www.mobile.datalogic.com.

For information regarding safety and regulatory refer to the Safety Recommendations Addendum and to the Elf™ Regulatory sheet, included in the box.

SERVICE AND SUPPORT

Datalogic provides several services as well as technical support through its website.

Log on to www.mobile.datalogic.com and click on the [links](#) indicated for further information including:

- **PRODUCTS**
Search through the links to arrive at your product page where you can download specific **Manuals** and **Software & Utilities**
- **SERVICES & SUPPORT**
 - **Datalogic Services** Warranty Extensions and Maintenance Agreements
 - **Authorised Repair Centres**
- **CONTACT US**
E-mail form and listing of Datalogic Subsidiaries

