

Technical Note

COVID-19: DISINFECTING RECOMMENDATIONS FOR DATALOGIC SCANNERS


To disinfect scanner surfaces, Datalogic recommends using one of the two following solutions:

- Isopropyl Alcohol (70% solution or above)
- Chlorine Bleach (8.25% solution) ½ cup bleach diluted in 1 gallon of water

Both options are recommended by the CDC as effective disinfecting solutions. Cleaning procedure is detailed below. For more generalized information, please visit:

<https://www.cdc.gov/coronavirus/2019-ncov/community/home/cleaning-disinfection.html>

Use a clean, paper towel dampened one of the above solutions to clean and disinfect scan window and exterior surfaces.

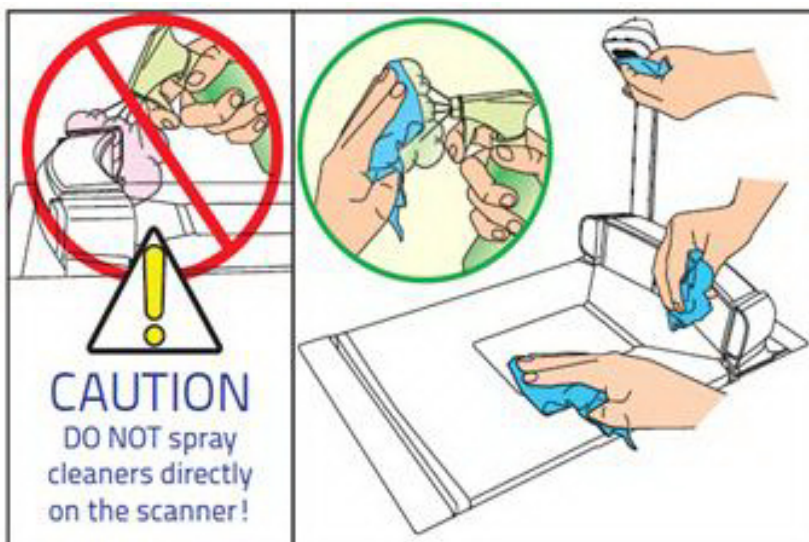

DO NOT use abrasive cleaning agents or abrasive pads to clean this product. Harsh chemicals, disinfectants, and cleansers can cause damage which will adversely affect scanning and weighing performance.

For more information please contact your local Datalogic representative or go to our website: Datalogic.com