



EOX 30W is the CO2 Laser for laser coding and marking applications.

EOX 30W offers high quality permanent marking on Wide range of organics materials (like wood) and it includes cardboard, ceramic, plastics and painted or anodized metal. Combining excellent laser beam quality and advanced control unit, EOX 30W is suitable for accurate Industrial Traceability as well as high productivity Coding applications. EOX 30W benefits of a compact Marking Head combined with a 19" Control Rack equipped with power supply and control unit. EOX 30W provide axys controls and Photocell/Encoder ports for Marking On Fly (MOF) typically required for Coding applications. Advanced MOF features allows complete synchronization between Marking head and object movement applicable even in accelerated or start-stop movement conditions. MOF increases production lines throughput with linear speed up to 75mt/min and 12.000 pcs/hour (about 8/10 pcs/sec – it depends by the speed of the roller).

EOX-30 implements Embedded Marking Controller (EMC) for complete system control in "Stand Alone Mode" or "Master-Slave Mode".

CO2 marking system is very attractive for Coding application thanks to Low cost operation as a result of almost to no maintenance and no requirement for expensive consumables. EOX 30W meets flexibility requirements thanks to extended marking area up to 140x140mm (focal lens depending). Reliable and safe, EOX 30W provides a clean technology with short return of investment and minimal maintenance.



LASER MARKING

FEATURES & BENEFITS

- Excellent marking performance
- Integrated diagnostics, easy communication and connectivity
- Flexible scan-head configurations
- Highly Customizable
- Extreme reliability and flexibility
- Lighter suite
- Embedded Marking Controller

APPLICATIONS

This product has been developed to satisfy the requirements of the following reference applications:

- Coding and marking applications in the food, pharma, and electronics industries



EOX 30W


CHARACTERISTICS

Nomination Power	30W
Wave Length	10.6 µm
Laser Source	CLASS 4, CO2 sealed laser tube
Head cable Length	3 m standard
Marking capabilities	Standing, Rotary axis, On the fly (marking in motion)
Integration	Up to 4 mechanical axis driving capabilities (stepper motor) Up to 10 digital inputs and 10 digital output fully programmable 1 dedicated connector for dual line high resolution encoder and 1 dedicated connector for photocell
Aiming Beam	3mW @ 635 nm
Focus Beam	3mW @ 635 nm
Temperature Range	Operative 15°C to 35°C Storing -10°C to 60°C
Cooling System	Integrated Fan cooled
Power Supply	100/240 VAC – 50/60 Hz
Resonator Dimension&Weight	180x185x634 mm kg 17
Rack Dimension&Weight	437x94x333 mm kg 9
Protection Grade	IP 21

All laser sources described in this product guide are Class 4 laser sources. Laser interaction with organic or inorganic material can cause TOXIC FUMES/PARTICLES. The OEM laser components described in this product guide is for sale solely to qualified manufacturers, who shall provide interlocks, indicators and other appropriate safety features in full compliance with applicable national and local regulations.


DIMENSIONS

Lens	100mm	200mm
Working distance	100	200
Working area	70x70 mm	140x140 mm

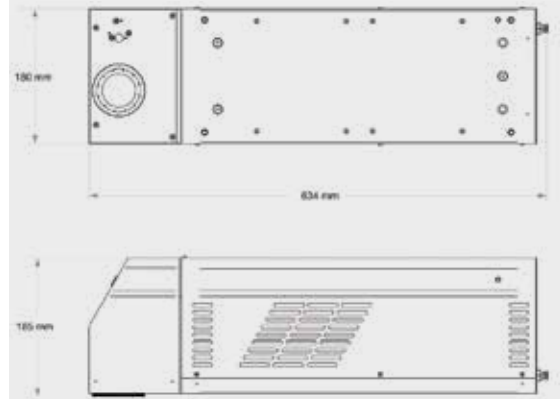

RESONATOR

DIMENSIONS

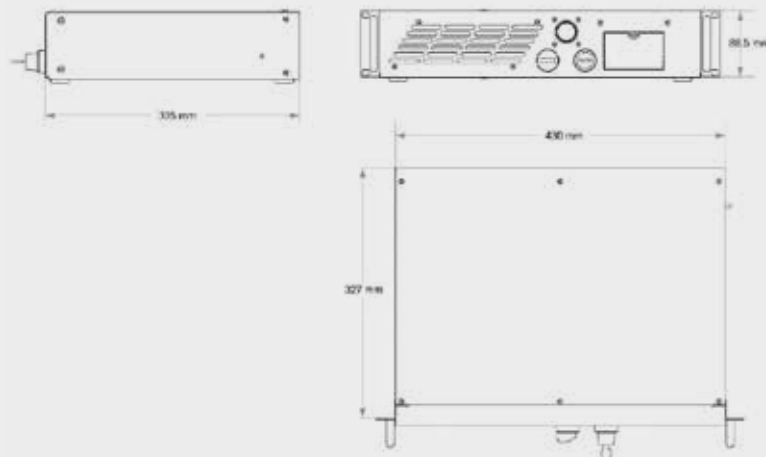

CONTROL UNIT (RACK)

MODEL SELECTION AND ORDER INFORMATION

MODEL	DESCRIPTION	ORDER N°
EOX 6302-1240 CO2 System	30W CO2 Laser Marker F-THETA 100	985140100
EOX 6302-1540 CO2 System	30W CO2 Laser Marker F-THETA 200	985140012

KUMAI

Immer eine ID besser



+49 711 901188-0
www.kumaident.de

Rev. 02, 04/2013



FDA
Conforming to
FDA regulations

www.datalogic.com

The company endeavours to continuously improve and renew its products; for this reason the technical data and contents of this catalogue may undergo variations without prior notice. For correct installation and use, the company can guarantee only the data indicated in the instruction manual supplied with the products. Product and Company names and logos referenced may be either trademarks or registered trademarks of their respective companies. We reserve the right to make modifications and improvements.