

# **PowerScan™ PD7100**

## **Industrial Corded Handheld Linear Imager Bar Code Reader**



## **Product Reference Guide**

## **Datalogic Scanning, Inc.**

959 Terry Street

Eugene, Oregon 97402

Telephone: (541) 683-5700

Fax: (541) 345-7140

An Unpublished Work - All rights reserved. No part of the contents of this documentation or the procedures described therein may be reproduced or transmitted in any form or by any means without prior written permission of Datalogic Scanning, Inc. or its subsidiaries or affiliates ("Datalogic" or "Datalogic Scanning"). Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website ([www.scanning.datalogic.com](http://www.scanning.datalogic.com)) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

### **Disclaimer**

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other brand and product names may be trademarks of their respective owners.

PowerScan is a registered trademark of Datalogic Scanning, Inc. in many countries, including the U.S.A. and the E.U.

This product may be covered by one or more of the following patents: 4603262 • 4639606 • 4652750 • 4672215 • 4699447 • 4709369 • 4749879 • 4786798 • 4792666 • 4794240 • 4798943 • 4799164 • 4820911 • 4845349 • 4861972 • 4861973 • 4866257 • 4868836 • 4879456 • 4939355 • 4939356 • 4943127 • 4963719 • 4971176 • 4971177 • 4991692 • 5001406 • 5015831 • 5019697 • 5019698 • 5086879 • 5115120 • 5144118 • 5146463 • 5179270 • 5198649 • 5200597 • 5202784 • 5208449 • 5210397 • 5212371 • 5212372 • 5214270 • 5229590 • 5231293 • 5232185 • 5233169 • 5235168 • 5237161 • 5237162 • 5239165 • 5247161 • 5256864 • 5258604 • 5258699 • 5260554 • 5274219 • 5296689 • 5298728 • 5311000 • 5327451 • 5329103 • 5330370 • 5347113 • 5347121 • 5371361 • 5382783 • 5386105 • 5389917 • 5410108 • 5420410 • 5422472 • 5426507 • 5438187 • 5440110 • 5440111 • 5446271 • 5446749 • 5448050 • 5463211 • 5475206 • 5475207 • 5479011 • 5481098 • 5491328 • 5493108 • 5504350 • 5508505 • 5512740 • 5541397 • 5552593 • 5557095 • 5563402 • 5565668 • 5576531 • 5581707 • 5594231 • 5594441 • 5598070 • 5602376 • 5608201 • 5608399 • 5612529 • 5629510 • 5635699 • 5641958 • 5646391 • 5661435 • 5664231 • 5666045 • 5671374 • 5675138 • 5682028 • 5686716 • 5696370 • 5703347 • 5705802 • 5714750 • 5717194 • 5723852 • 5750976 • 5767502 • 5770847 • 5786581 • 5786585 • 5787103 • 5789732 • 5796222 • 5804809 • 5814803 • 5814804 • 5821721 • 5822343 • 5825009 • 5834708 • 5834750 • 5837983 • 5837988 • 5852286 • 5864129 • 5869827 • 5874722 • 5883370 • 5905249 • 5907147 • 5923023 • 5925868 • 5929421 • 5945670 • 5959284 • 5962838 • 5979769 • 6000619 • 6006991 • 6012639 • 6016135 • 6024284 • 6041374 • 6042012 • 6045044 • 6047889 • 6047894 • 6056198 • 6065676 • 6069696 • 6073849 • 6073851 • 6094288 • 6112993 • 6129279 • 6129282 • 6134039 • 6142376 • 6152368 • 6152372 • 6155488 • 6166375 • 6169614 • 6173894 • 6176429 • 6188500 • 6189784 • 6213397 • 6223986 • 6230975 • 6230976 • 6244510 • 6259545 • 6260763 • 6266175 • 6273336 • 6276605 • 6279829 • 6290134 • 6290135 • 6293467 • 6303927 • 6311895 • 6318634 • 6328216 • 6332576 • 6332577 • 6343741 • 6454168 • 6478224 • 6568598 • 6578765 • 6705527 • 6857567 • 6974084 • 6991169 • 7051940 • 7170414 • 7172123 • 7201322 • 7204422 • 7215493 • 7224540 • 7234641 • 7243850 • 7374092 • 7407096 • 601 26 118.6 • AU703547 • D312631 • D313590 • D320011 • D320012 • D323492 • D330707 • D330708 • D349109 • D350127 • D350735 • D351149 • D351150 • D352936 • D352937 • D352938 • D352939 • D358588 • D361565 • D372234 • D374630 • D374869 • D375493 • D376357 • D377345 • D377346 • D377347 • D377348 • D388075 • D446524 • EP0256296 • EP0260155 • EP0260156 • EP0295936 • EP0325469 • EP0349770 • EP0368254 • EP0442215 • EP0498366 • EP0531645 • EP0663643 • EP0698251 • EP01330772 • GB2252333 • GB2284086 • GB2301691 • GB2304954 • GB2307093 • GB2308267 • GB2308678 • GB2319103 • GB2333163 • GB2343079 • GB2344486 • GB2345568 • GB2354340 • ISR107546 • ISR118507 • ISR118508 • JP1962823 • JP1971216 • JP2513442 • JP2732459 • JP2829331 • JP2953593 • JP2964278 • MEX185552 • MEX187245 • RE37166 • RE40.071 • Other Patents Pending

# Table of Contents

<b>Chapter 1. Introduction.....</b>	<b>1</b>
About this Guide .....	1
Manual Overview .....	1
Manual Conventions .....	2
References .....	2
Technical Support .....	3
Datalogic Website Support .....	3
Reseller Technical Support .....	3
Telephone Technical Support .....	3
<b>Chapter 2. Getting Started .....</b>	<b>5</b>
About the Reader .....	5
Unpacking .....	5
Setting Up the Reader .....	6
Install the Interface Cable .....	6
Programming .....	7
Using the Programming Barcodes .....	8
Select the Interface Type .....	8
Configure Interface Settings .....	8
Configure Other Features .....	8
Software Version Transmission .....	9
Resetting the Product Configuration to Defaults .....	9
<b>Chapter 3. Interfaces .....</b>	<b>11</b>
Interface Selection .....	11
Configuring the Interface .....	11
Global Interface Features .....	15
Host Commands — Obey/Ignore .....	15
USB Suspend Mode .....	16
<b>Chapter 4. General Features.....</b>	<b>17</b>
Double Read Timeout .....	17
Label Gone Timeout .....	19
Sleep Mode Timeout .....	21
LED and Beeper Indicators .....	23
Power On Alert .....	23
Good Read: When to Indicate .....	24
Good Read Beep Type .....	25
Good Read Beep Frequency .....	26
Good Read Beep Length .....	26
Good Read Beep Volume .....	28
Good Read LED Duration .....	29
Scanning Features .....	31
Scan Mode .....	31
Stand Mode Triggered Timeout .....	33
Scanning Active Time .....	35
Flash On Time .....	37
Flash Off Time .....	39
Stand Mode Sensitivity .....	41
Laser Pointer Control .....	42
Laser Pointer Period .....	43

Green Spot Duration .....	44
<b>Chapter 5. RS-232 ONLY Interface.....</b>	<b>45</b>
Introduction .....	45
RS-232 Standard Factory Settings .....	45
Baud Rate .....	45
Data Bits .....	47
Stop Bits .....	48
Parity .....	49
Handshaking Control .....	50
<b>Chapter 6. RS-232/USB-Com Interfaces .....</b>	<b>51</b>
Introduction .....	51
Standard Factory Settings .....	51
Intercharacter Delay .....	52
Beep On ASCII BEL .....	54
Beep On Not on File .....	54
ACK NAK Options .....	55
ACK Character .....	56
NAK Character .....	58
ACK NAK Timeout Value .....	60
ACK NAK Retry Count .....	62
ACK NAK Error Handling .....	64
Indicate Transmission Failure .....	65
Disable Character .....	66
Enable Character .....	68
<b>Chapter 7. Keyboard Interface.....</b>	<b>71</b>
Introduction .....	71
Standard Factory Settings .....	71
Scancode Tables .....	71
Country Mode .....	72
Caps Lock State .....	75
Numlock .....	75
Send Control Characters .....	76
Wedge Quiet Interval .....	77
Intercharacter Delay .....	79
Intercode Delay .....	81
USB Keyboard Speed .....	83
<b>Chapter 8. USB-OEM Interface.....</b>	<b>85</b>
Introduction .....	85
Standard Factory Settings .....	85
USB-OEM Device Usage .....	86
USB-OEM Interface Options .....	87
<b>Chapter 9. IBM 46XX Interface .....</b>	<b>89</b>
Introduction .....	89
IBM Standard Factory Settings .....	89
46xx Number of Host Resets .....	90
Transmit Labels in Code 39 Format .....	93
IBM 46XX Interface Options .....	94
<b>Chapter 10. Wand Emulation Interface.....</b>	<b>95</b>
Introduction .....	95
Wand Emulation Standard Factory Settings .....	95
Wand Idle State .....	95
Wand Polarity .....	96



Wand Signal Speed .....	97
Label Symbology Conversion .....	98
Transmit Noise .....	99
<b>Chapter 11. Data Editing .....</b>	<b>101</b>
Data Editing Overview .....	101
Please Keep In Mind... ..	102
Global Prefix/Suffix .....	102
Example: Setting a Prefix .....	102
Global AIM ID .....	104
GS1-128 AIM ID .....	106
Label ID .....	107
Label ID: Pre-loaded Sets .....	107
Label ID: Set Individually Per Symbology .....	110
Label ID Control .....	112
Label ID Symbology Selection .....	113
Case Conversion .....	121
Character Conversion .....	121
<b>Chapter 12. Symbologies .....</b>	<b>123</b>
Introduction .....	123
1D Symbologies .....	123
Standard Factory Settings for Symbologies .....	123
Disable All Symbologies .....	124
Coupon Control .....	125
UPC-A .....	126
UPC-A Enable/Disable .....	126
UPC-A Check Character Transmission .....	126
Expand UPC-A to EAN-13 .....	127
UPC-A Number System Character Transmission .....	127
In-Store Minimum Reads .....	128
UPC-E .....	129
UPC-E Enable/Disable .....	129
UPC-E Check Character Transmission .....	129
Expand UPC-E to EAN-13 .....	130
Expand UPC-E to UPC-A .....	130
UPC-E Number System Character Transmission .....	131
UPC-E Minimum Reads .....	132
GTIN Formatting .....	133
EAN 13 .....	134
EAN 13 Enable/Disable .....	134
EAN 13 Check Character Transmission .....	134
EAN-13 Flag 1 Character .....	135
EAN-13 ISBN Conversion .....	136
ISSN Enable/Disable .....	136
EAN 13 Minimum Reads .....	137
EAN 8 .....	138
EAN 8 Enable/Disable .....	138
EAN 8 Check Character Transmission .....	138
Expand EAN 8 to EAN 13 .....	139
EAN 8 Minimum Reads .....	140
UPC/EAN Global Settings .....	141
UPC/EAN Decoding Level .....	141
UPC/EAN Correlation .....	143
UPC/EAN Reconstruction .....	143
UPC/EAN Price Weight Check .....	144
UPC-A Minimum Reads .....	145
Add-Ons .....	146
Optional Add-ons .....	146

Optional Add-On Timer .....	148
Optional GS1-128 Add-On Timer .....	151
P2 Add-Ons Minimum Reads .....	154
P5 Add-Ons Minimum Reads .....	155
GS1-128 Add-Ons Minimum Reads .....	156
GS1 DataBar™ Omnidirectional .....	157
GS1 DataBar Omnidirectional Enable/Disable .....	157
GS1 DataBar Omnidirectional GS1-128 Emulation .....	157
GS1 DataBar Omnidirectional Minimum Reads .....	158
GS1 DataBar™ Expanded .....	159
GS1 DataBar Expanded Enable/Disable .....	159
GS1 DataBar Expanded GS1-128 Emulation .....	159
GS1 DataBar Expanded Minimum Reads .....	160
GS1 DataBar Expanded Length Control .....	161
GS1 DataBar Expanded Set Length 1 .....	162
GS1 DataBar Expanded Set Length 2 .....	164
GS1 DataBar™ Limited .....	166
GS1 DataBar Limited Enable/Disable .....	166
GS1 DataBar Limited GS1-128 Emulation .....	166
GS1 DataBar Limited Minimum Reads .....	167
Code 39 .....	168
Code 39 Enable/Disable .....	168
Code 39 Check Character Calculation .....	169
Code 39 Check Character Transmission .....	170
Code 39 Start/Stop Character Transmission .....	170
Code 39 Full ASCII .....	171
Code 39 Quiet Zones .....	172
Code 39 Minimum Reads .....	173
Code 39 Decoding Level .....	174
Code 39 Length Control .....	176
Code 39 Set Length 1 .....	177
Code 39 Set Length 2 .....	179
Code 39 Interdigit Ratio .....	181
Code 39 Character Correlation .....	183
Code 39 Stitching .....	184
Code 32 (Italian Pharmaceutical) .....	185
Code 32 Enable/Disable .....	185
Code 32 Feature Setting Exceptions .....	185
Code 32 Check Character Transmission .....	186
Code 32 Start/Stop Character Transmission .....	186
Code 39 CIP (French Pharmaceutical) .....	187
Code 39 CIP Enable/Disable .....	187
Code 128 .....	187
Code 128 Enable/Disable .....	187
Expand Code 128 to Code 39 .....	188
Code 128 Check Character Transmission .....	188
Code 128 Function Character Transmission .....	189
Code 128 Sub-Code Change Transmission .....	189
Code 128 Quiet Zones .....	190
Code 128 Minimum Reads .....	191
Code 128 Decoding Level .....	192
Code 128 Length Control .....	194
Code 128 Set Length 1 .....	195
Code 128 Set Length 2 .....	197
Code 128 Character Correlation .....	199
Code 128 Stitching .....	200
GS1-128 .....	201
GS1-128 Enable .....	201
Interleaved 2 of 5 (I 2 of 5) .....	202
I 2 of 5 Enable/Disable .....	202

I 2 of 5 Check Character Calculation .....	203
I 2 of 5 Check Character Transmission .....	204
I 2 of 5 Minimum Reads .....	205
2 of 5 Decoding Level .....	206
I 2 of 5 Length Control .....	208
I 2 of 5 Set Length 1 .....	209
I 2 of 5 Set Length 2 .....	211
I 2 of 5 Character Correlation .....	213
I 2 of 5 Stitching .....	214
Interleaved 2 of 5 CIP HR .....	215
Interleaved 2 of 5 CIP HR Enable/Disable .....	215
Datalogic 2 of 5 .....	215
Datalogic 2 of 5 Enable/Disable .....	215
Datalogic 2 of 5 Check Character Calculation .....	216
Datalogic 2 of 5 Minimum Reads .....	217
Datalogic 2 of 5 Decoding Level .....	217
Datalogic 2 of 5 Length Control .....	218
Datalogic 2 of 5 Set Length 1 .....	219
Datalogic 2 of 5 Set Length 2 .....	221
Datalogic 2 of 5 Interdigit Maximum Ratio .....	223
Datalogic 2 of 5 Character Correlation .....	225
Datalogic 2 of 5 Stitching .....	226
Codabar .....	227
Codabar Enable/Disable .....	227
Codabar Check Character Calculation .....	228
Codabar Check Character Transmission .....	229
Codabar Start/Stop Character Transmission .....	229
Codabar Start/Stop Character Set .....	230
Codabar Start/Stop Character Match .....	231
Codabar Quiet Zones .....	232
Codabar Minimum Reads .....	233
Codabar Decoding Level .....	234
Codabar Length Control .....	236
Codabar Set Length 1 .....	237
Codabar Set Length 2 .....	239
Codabar Interdigit Ratio .....	241
Codabar Character Correlation .....	243
Codabar Stitching .....	244
ABC Codabar .....	245
ABC Codabar Enable/Disable .....	245
ABC Codabar Concatenation Mode .....	245
ABC Codabar Dynamic Concatenation Timeout .....	246
ABC Codabar Force Concatenation .....	247
Code 11 .....	248
Code 11 Enable/Disable .....	248
Code 11 Check Character Calculation .....	249
Code 11 Check Character Transmission .....	250
Code 11 Minimum Reads .....	251
Code 11 Length Control .....	252
Code 11 Set Length 1 .....	253
Code 11 Set Length 2 .....	255
Code 11 Interdigit Ratio .....	257
Code 11 Decoding Level .....	259
Code 11 Character Correlation .....	261
Code 11 Stitching .....	262
Standard 2 of 5 .....	263
Standard 2 of 5 Enable/Disable .....	263
Standard 2 of 5 Check Character Calculation .....	264
Standard 2 of 5 Check Character Transmission .....	264
Standard 2 of 5 Minimum Reads .....	265

Standard 2 of 5 Decoding Level .....	265
Standard 2 of 5 Length Control .....	266
Standard 2 of 5 Set Length 1 .....	267
Standard 2 of 5 Set Length 2 .....	269
Standard 2 of 5 Character Correlation .....	271
Standard 2 of 5 Stitching .....	272
Industrial 2 of 5 .....	273
Industrial 2 of 5 Enable/Disable .....	273
Industrial 2 of 5 Check Character Calculation .....	273
Industrial 2 of 5 Check Character Transmission .....	274
Industrial 2 of 5 Length Control .....	275
Industrial 2 of 5 Set Length 1 .....	276
Industrial 2 of 5 Set Length 2 .....	278
Industrial 2 of 5 Minimum Reads .....	280
Industrial 2 of 5 Stitching .....	281
Industrial 2 of 5 Character Correlation .....	281
IATA .....	282
IATA Enable/Disable .....	282
IATA Check Character Transmission .....	282
ISBT 128 .....	283
ISBT 128 Concatenation .....	283
ISBT 128 Concatenation Mode .....	284
ISBT 128 Dynamic Concatenation Timeout .....	285
ISBT 128 Force Concatenation .....	286
ISBT 128 Advanced Concatenation Options .....	286
MSI .....	287
MSI Enable/Disable .....	287
MSI Check Character Calculation .....	288
MSI Check Character Transmission .....	289
MSI Length Control .....	289
MSI Set Length 1 .....	290
MSI Set Length 2 .....	292
MSI Minimum Reads .....	294
MSI Decoding Level .....	295
Plessey .....	297
Plessey Enable/Disable .....	297
Plessey Check Character Calculation .....	298
Plessey Check Character Transmission .....	299
Plessey Length Control .....	299
Plessey Set Length 1 .....	300
Plessey Set Length 2 .....	302
Plessey Minimum Reads .....	304
Plessey Decoding Level .....	305
Plessey Stitching .....	306
Plessey Character Correlation .....	307
Code 93 .....	307
Code 93 Enable/Disable .....	307
Code 93 Check Character Calculation .....	308
Code 93 Check Character Transmission .....	309
Code 93 Length Control .....	309
Code 93 Set Length 1 .....	310
Code 93 Set Length 2 .....	312
Code 93 Minimum Reads .....	314
Code 93 Decoding Level .....	315
Code 93 Quiet Zones .....	317
Code 93 Stitching .....	318
Code 93 Character Correlation .....	318
Codablock F .....	319
Codablock F Enable/Disable .....	319
Codablock F EAN Enable/Disable .....	320

Codablock F AIM Check .....	320
Codablock F Length Control .....	321
Codablock F Set Length 1 .....	322
Codablock F Set Length 2 .....	324
Code 4 .....	326
Code 4 Enable/Disable .....	326
Code 4 Check Character Transmission .....	327
Code 4 Hex to Decimal Conversion .....	327
Code 5 .....	328
Code 5 Enable/Disable .....	328
Code 5 Check Character Transmission .....	329
Code 5 Hex to Decimal Conversion .....	329
Code 4 and Code 5 Common Configuration Items .....	330
Code 4 and 5 Decoding Level .....	330
Code 4 and Code 5 Minimum Reads .....	332
Follett 2 of 5 .....	333
Follett 2 of 5 Enable/Disable .....	333
<b>Appendix A. Technical Specifications .....</b>	<b>335</b>
Standard Cable Pinouts .....	337
<b>Appendix B. Standard Defaults.....</b>	<b>339</b>
Default Exceptions .....	350
<b>Appendix C. LED and Beeper Indications.....</b>	<b>353</b>
LED and Beeper Indications .....	354
Error Codes .....	355
<b>Appendix D. Sample Barcodes.....</b>	<b>357</b>
UPC-A .....	357
Interleaved 2 of 5 .....	357
Codabar .....	358
Code 11 .....	358
GS1 DataBar (RSS) .....	359
GS1 DataBar-14 .....	359
<b>Appendix E. Keypad .....</b>	<b>361</b>
<b>Appendix F. Scancode Tables .....</b>	<b>365</b>
Control Character Emulation .....	365
Interface Type PC AT PS/2 or USB-Keyboard .....	366
Interface type PC AT PS/2 Alt Mode or USB-Keyboard Alt Mode .....	368
Digital Interface .....	370
IBM31xx 102-key .....	372
IBM XT .....	374
Microsoft Windows Codepage 1252 .....	376
<b>Index .....</b>	<b>379</b>



# Chapter 1

## Introduction

---

### About this Guide

This Product Reference Guide (PRG) is provided for users seeking advanced technical information, including connection, programming, maintenance and specifications. The Quick Reference Guide (QRG) and other publications associated with this product are downloadable free of charge from the website listed on the back cover of this manual.

Typically, units are factory-programmed for the most common terminal and communications settings. If you need to modify any programmable settings, custom configuration can be accomplished by scanning the programming barcodes within this guide.

Programming can alternatively be performed using the Datalogic Aladdin™ Configuration application which is downloadable from the Datalogic website listed on the back cover of this manual. This multi-platform utility program allows device configuration using a PC. It communicates to the device using a serial or USB cable and can also create configuration barcodes to print.

### Manual Overview

[Chapter 1, Introduction](#) provides a product overview, unpacking instructions, and cable connection information.

[Chapter 2, Getting Started](#) presents information about unpacking and setting up the reader.

[Chapter 3, Interfaces](#) consists of interface configuration barcodes and details.

[Chapter 4, General Features](#) includes programming barcodes for selecting common features for the reader and general use barcodes to customize how the data is transmitted to the host device.

[Chapter 5, RS-232 ONLY Interface](#) supplies information about setting up the reader for RS-232 operation.

[Chapter 6, RS-232/USB-Com Interfaces](#) features information about options involving both the RS-232 and USB-Com interfaces.

[Chapter 7, Keyboard Interface](#) discusses how to set up the reader for Keyboard Wedge operation.

[Chapter 8, USB-OEM Interface](#) explains how to set the reader up for USB operation.

[Chapter 9, IBM 46XX Interface](#) is a resource for setting up an IBM interface.

[Chapter 11, Data Editing](#) offers advanced configuration options for customization of scanned data output.

[Chapter 12, Symbolologies](#) defines options for all symbolologies and provides the programming barcodes necessary for configuring these features.

[Appendix A, Technical Specifications](#) lists physical and performance characteristics, as well as environmental and regulatory specifications. It also provides standard cable pin-outs.

[Appendix B, Standard Defaults](#) references common factory default settings for reader features and options.

[Appendix C, LED and Beeper Indications](#) supplies tables containing descriptions of the functions and behaviors of the reader's LED and Beeper indicators.

[Appendix D, Sample Barcodes](#) offers sample barcodes of several common symbolologies.

[Appendix E, Keypad](#) includes numeric barcodes to be scanned for certain parameter settings.

[Appendix F, Scancode Tables](#) lists control character emulation information for Wedge and USB Keyboard interfaces.

## Manual Conventions

The following conventions are used in this document:

The symbols listed below are used in this manual to notify the reader of key issues or procedures that must be observed when using the reader:



**Notes** contain information necessary for properly diagnosing, repairing and operating the reader.

**NOTE**



The **CAUTION** symbol advises you of actions that could damage equipment or property.

**CAUTION**

## References

Current versions of the Product Reference Guide (PRG), Quick Reference Guide (QRG), the Datalogic Aladdin™ Configuration application, and any other manuals, instruction sheets and utilities for this product can be downloaded from the website listed on the back cover of this manual. Alternatively, printed copies or product support CDs can be purchased through your Datalogic reseller.



# Technical Support

## Datalogic Website Support

The Datalogic website ([www.scanning.datalogic.com](http://www.scanning.datalogic.com)) is the complete source for technical support and information for Datalogic products. The site offers product support, product registration, warranty information, product manuals, product tech notes, software updates, demos, and instructions for returning products for repair.

## Reseller Technical Support

An excellent source for technical assistance and information is an authorized Datalogic reseller. A reseller is acquainted with specific types of businesses, application software, and computer systems and can provide individualized assistance.

## Telephone Technical Support

If you do not have internet or email access, you may contact Datalogic technical support at (541) 349-8283 or check the back cover of your manual for more contact information.

# NOTES

# Chapter 2

## Getting Started

---

### About the Reader

Advancements in the LED technology used in this reader significantly improve the illumination of the target field of view, resulting in higher scan efficiency. Whether used in Single Trigger or Continuous Mode, the ergonomic design of the reader will help to promote comfortable handling during extended periods of use.

See [Interface Selection on page 11](#) for a listing and descriptions of available interface sets by model type.

### Unpacking

Check carefully to ensure the reader and any accessories ordered are present and undamaged. If any damage occurred during shipment, contact [Technical Support on page 3](#).

KEEP THE PACKAGING. Should the unit ever require service, it should be returned in its original shipping container.

## Setting Up the Reader

Follow the steps provided in this section to connect and get your reader up and communicating with its host:

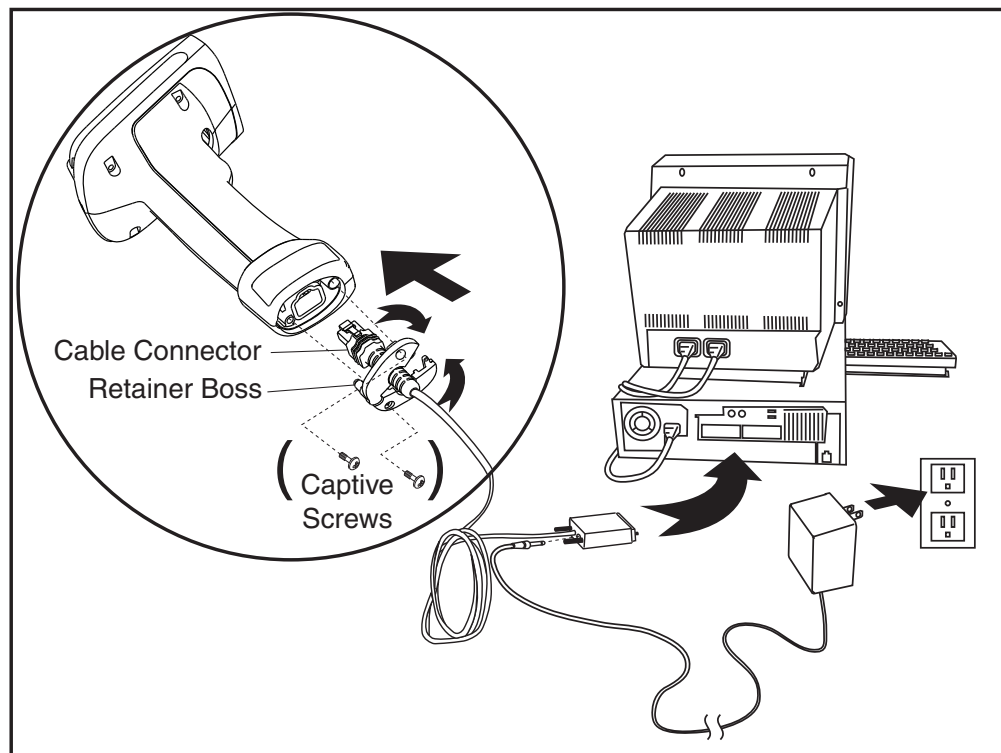
1. [Install the Interface Cable](#)
2. [Select the Interface Type](#)
3. [Configure Interface Settings](#) (only if not using factory settings for that interface)
4. [Configure Other Features](#) (if modifications are needed from factory settings)

### Install the Interface Cable

The reader cable connection is secured using the “clamshell” retainer referenced in the enlarged area of [Figure 1](#). Fit and clamp the retainer over the cable connector as shown in the illustration, then fully seat the cable assembly into the reader, aligning both the connector and the retainer boss with their respective openings. Secure the captive screws.

**RS-232 Serial Connection** — Turn off power to the terminal/PC and connect the reader to the terminal/PC serial port via the RS-232 cable as shown in [Figure 1](#). If the terminal will not support POT (Power Off the Terminal) to supply reader power, use the approved power supply (AC Adapter). Plug the AC Adapter barrel connector into the socket on the RS-232 cable connector and the AC Adapter plug into a standard power outlet.

**Figure 1. Connecting the Interface Cable/RS-232 Connection**



Other connection types are described below and illustrated in [Figure 2](#).

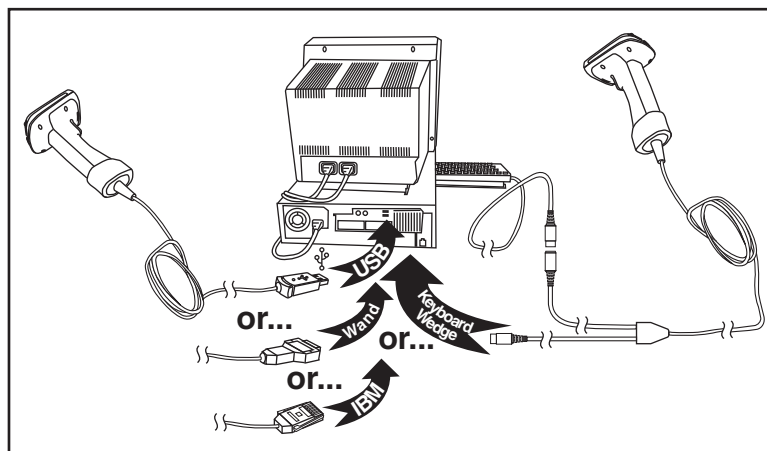
**USB Connection** — Connect the reader to a USB port on the terminal/PC using the correct USB cable for the interface type you ordered. Reference [Figure 2](#).

**IBM Connection** — Connect the reader to the IBM port on the terminal/PC using the correct IBM cable. Reference [Figure 2](#).

**Keyboard Wedge Connection** — The Keyboard Wedge cable has a ‘Y’ connection from the reader. Connect the female to the male end from the keyboard and the remaining end at the keyboard port at the terminal/PC. Reference [Figure 2](#).

**Wand Emulation Connection** — Connect the reader to the Wand Emulation port on the terminal/PC using the correct cable. Reference [Figure 2](#)

**Figure 2. Other Interface Connections**



#### NOTE

Specific cables are required for connection to different hosts. The connectors illustrated above are examples only. Actual connectors may vary from those illustrated, but the steps to connect the reader remain the same.

## Programming

The reader is factory-configured with a set of default features standard. After scanning the interface barcode from the [Interfaces](#) section, you can select other options and customize your reader through use of the instructions and programming barcodes available in the corresponding features section for your interface and also the Data Editing and Symbologies chapters of this manual.

## Using the Programming Barcodes

This manual contains feature descriptions and barcodes which allow you to reconfigure your reader. Some programming barcode labels, like the [Resetting the Product Configuration to Defaults on page 9](#), require only the scan of that single label to enact the change. Most of the programming labels in this manual, however, require the reader to be placed in Programming Mode prior to scanning them. Scan an ENTER/EXIT barcode once to enter Programming Mode. Once the reader is in Programming Mode, you can scan a number of parameter settings before scanning the ENTER/EXIT barcode a second time, which will then accept your changes, exit Programming Mode and return the reader to normal operation.



### NOTE

There are some exceptions to the typical programming sequence described above. Please read the description and setting instructions carefully when configuring each given programmable feature.

## Select the Interface Type

Upon completing the physical connection between the reader and its host, proceed directly to [Interfaces on page 11](#) for information and programming for the interface type the reader is connected to (for example: RS-232, Keyboard Wedge, USB, etc.) and scan the appropriate barcode in that section to select your system's correct interface type.

## Configure Interface Settings

If after scanning the interface barcode from the [Interfaces](#) section, your installation requires you to select options to further customize your reader, turn to the appropriate section for your interface type as listed below:

- [RS-232 ONLY Interface, starting on page 45](#)
- [Keyboard Interface, starting on page 71](#)
- [USB-OEM Interface, starting on page 85](#)
- [IBM 46XX Interface, starting on page 89](#)
- [Wand Emulation Interface, starting on page 95](#)

## Configure Other Features

If your installation requires different programming than the standard factory default settings, the following sections of this manual allow configuration of non-interface-specific settings you might require:

**General Features** — General Features includes programming for scanning, beeper and LED indicators and other such universal settings.

**Symbologies** — Includes options concerning the barcode label types (symbologies). These settings allow you to enable/disable symbologies, set label lengths, require check digit, etc.

## Software Version Transmission

The software version of the device can be transmitted over the RS-232 and Keyboard interfaces by scanning the following label.



Transmit Software Version


## Resetting the Product Configuration to Defaults

If you aren't sure what programming options are in your imager, or you've changed some options and want to restore the Custom Default Configuration that may have been saved in the imager, scan the [Restore Custom Default Configuration](#) barcode below. This will restore the custom configuration for the currently active interface.




### NOTE

Custom defaults are based on the interface type. Configure the imager for the correct interface before scanning this label.



Restore Custom Default Configuration

If you aren't sure what programming options are in your imager, or you've changed some options and want to restore the Factory Configuration, you have two options. You can scan the [Restore USA Factory Configuration](#) bar code or the [Restore EU Factory Configuration](#) bar code below. Both labels restore the imager configuration to the factory settings including the interface type. The USA label restores Label IDs to those historically used in the USA. The EU label restores Label IDs to those historically used in Europe. The Label ID sets for USA and EU are shown in the Label ID section of this manual.



Restore USA Factory Configuration



Restore EU Factory Configuration

The programming section lists the factory default settings for each of the menu commands (indicated by shaded blocks and bold text) on the following pages.

# NOTES



# Chapter 3

## Interfaces

---

### Interface Selection

Each reader model will support one of the following sets of host interfaces:

#### General Purpose Models (5 volt supply)

RS-232  
RS-232 OPOS  
USB  
Keyboard Wedge  
Wand Emulation

#### Retail Point of Sale Models (4 to 14 volt supply)

RS-232  
RS-232 OPOS  
USB  
IBM 46XX

### Configuring the Interface

Scan the programming barcode from this section which selects the appropriate interface type matching the system the reader will be connected to. Next, proceed to the corresponding chapter in this manual (also listed in [Table 1](#)) to configure any desired settings and features associated with that interface.



#### NOTE

Unlike some other programming features and options, interface selections require that you scan only one programming barcode label. DO NOT scan an ENTER/EXIT barcode prior to scanning an interface selection barcode.

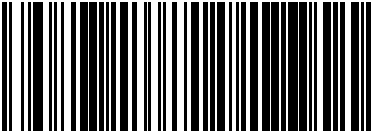
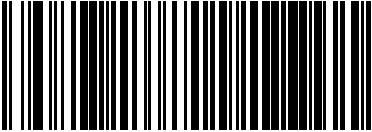

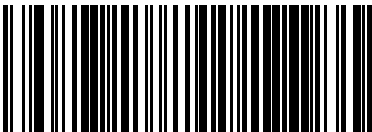
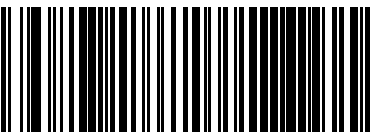

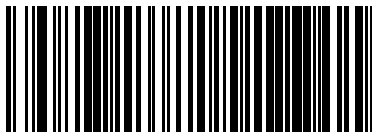
Some interfaces require the scanner to start in the disabled state when powered up. If additional scanner configuration is desired while in this state, pull the trigger and hold it for five seconds. The scanner will change to a state that allows programming with barcodes.

**Table 1. Available Interfaces**

RS-232		FEATURES
RS-232 standard interface	 Select RS232-STD	Set RS-232 Interface Features starting on page 45
 Select RS232-WN	RS-232 Wincor-Nixdorf	
RS-232 for use with OPOS/UPOS/JavaPOS	 Select RS-232 OPOS	
 Select USB-COM-STD <sup>a</sup>	USB Com to simulate RS-232 standard interface	
IBM		FEATURES
 Select IBM-P5B	IBM-46xx Port 5B reader interface	Set IBM Interface Features starting on page 89
IBM-46xx Port 9B reader interface	 Select IBM-P9B	
USB-OEM		FEATURES
 Select USB-OEM	USB-OEM (can be used for OPOS/UPOS/JavaPOS)	Set USB-OEM Interface Features starting on page 85

a. Download the correct USB Com driver from [www.datalogic.com](http://www.datalogic.com)

KEYBOARD	FEATURES
<p>AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 &amp; 95 w/Standard Key Encoding</p>  <p>Select KBD-AT</p>	<p>Set KEYBOARD WEDGE Interface Features starting on page 71</p>
 <p>Select KBD-AT-NK</p> <p>Keyboard Wedge for IBM AT PS2 with standard key encoding but without external keyboard</p>	
<p>AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 &amp; 95 w/Alternate Key</p>  <p>Select KBD-AT-ALT</p>	
 <p>Select KBD-AT-ALT-NK</p> <p>Keyboard Wedge for IBM AT PS2 with alternate key encoding but without external keyboard</p>	
<p>PC/XT w/Standard Key Encoding</p>  <p>Select KBD-XT</p>	
 <p>Select KBD-IBM-3153</p> <p>Keyboard Wedge for IBM Terminal 3153</p>	

KEYBOARD — cont.		FEATURES
Keyboard Wedge for IBM Terminals 31xx, 32xx, 34xx, 37xx make only keyboard	 Select KBD-IBM-M	Set KEYBOARD WEDGE Interface Features starting on page 71
 Select KBD-IBM-MB	Keyboard Wedge for IBM Terminals 31xx, 32xx, 34xx, 37xx make break keyboard	
Keyboard Wedge for DIGITAL Terminals VT2xx, VT3xx, VT4xx	 Select KBD-DIG-VT	
 Select USB Keyboard	USB Keyboard with standard key encoding	
USB Keyboard with alternate key encoding	 Select USB Alternate Keyboard	
 Select USB-KBD-APPLE	USB Keyboard for Apple computers	
WAND EMULATION		FEATURES
Wand Emulation	 Select WAND	Set WAND Interface Features starting on page 95

# Global Interface Features

The following interface features are configurable by all interface types. To set features specific to your interface, turn to that section of this manual:

- [RS-232 ONLY Interface on page 45](#)
- [Keyboard Interface on page 71](#)
- [USB-OEM Interface on page 85](#)
- [IBM 46XX Interface on page 89](#)

## Host Commands — Obey/Ignore

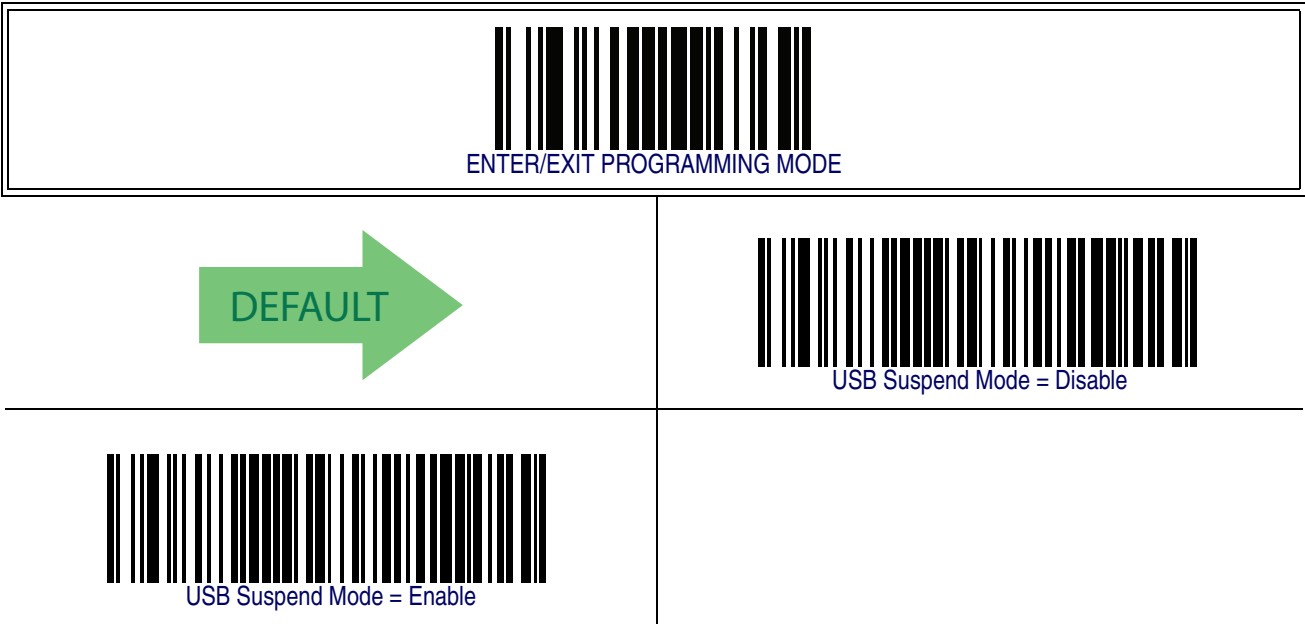
This option specifies whether the reader will obey or ignore host commands. When set to ignore, the reader will ignore all host commands except for those necessary for:

- service mode
- flash programming mode
- keeping the interface active
- transmission of labels.



# USB Suspend Mode

This setting enables/disables the ability of USB interfaces to enter suspend mode.



# Chapter 4

## General Features

### Double Read Timeout

To prevent a double read of the same label, the Double Read Timeout sets the minimum time allowed between reads of labels of the same symbology and data. If the unit reads a label and sees the same label again within the Double Read Timeout, the second read of the label will be ignored. Double Read Timeout does not apply to scan modes that require a trigger pull for each label that is read.

 ENTER/EXIT PROGRAMMING MODE	
	 Double Read Timeout = 0.1 Second
 Double Read Timeout = 0.2 Second	
	 Double Read Timeout = 0.3 Second
 Double Read Timeout = 0.4 Second	

# Double Read Timeout — continued

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Double Read Timeout = 0.5 Second</div></div>
<div><div></div><div>Double Read Timeout = 0.6 Second</div></div>	
	<div><div></div><div>Double Read Timeout = 0.7 Second</div></div>
<div><div></div><div>Double Read Timeout = 0.8 Second</div></div>	
	<div><div></div><div>Double Read Timeout = 0.9 Second</div></div>
<div><div></div><div>Double Read Timeout = 1 Second</div></div>	



## Label Gone Timeout

This feature sets the time after the last label segment is seen before the reader prepares for a new label. The timeout can be set within a range of 10 milliseconds to 2,550 milliseconds (2.55 seconds) in 10ms increments. Label Gone Timeout does not apply to scan modes that require a trigger pull for each label that is read.

Follow these instructions to set this feature:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT LABEL GONE TIMEOUT SETTING.
5. Scan the appropriate three alpha-numeric characters from the keypad in [Appendix E, Keypad](#) representing the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

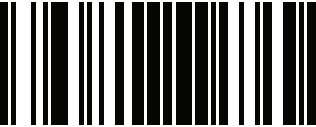
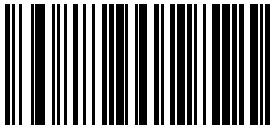
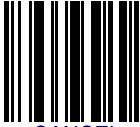
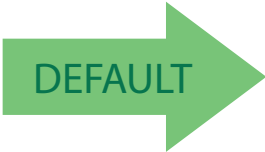
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 2](#) for some examples of how to set this feature.

**Table 2. Timeout Setting Examples**

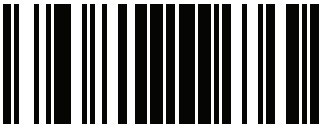

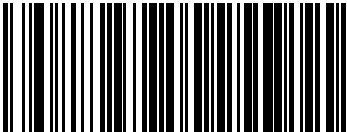
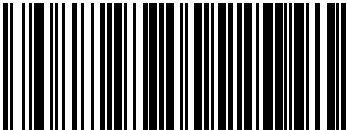
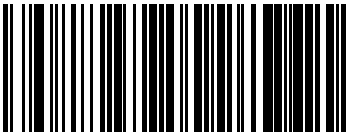
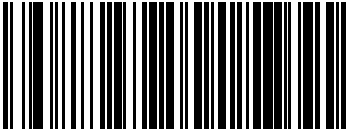
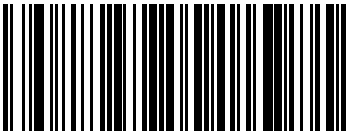
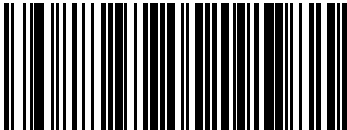
STEP	ACTION	EXAMPLES			
1	Desired Setting	50ms	150ms	1800ms (1.8 sec.)	2550ms (2.55 sec.)
2	Divide by 10 (and pad with leading zeroes)	005	015	180	255
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT LABEL GONE TIMEOUT SETTING				
5	Scan Three Characters From <a href="#">Appendix E, Keypad</a>	'0', '0' and '5'	'0', '1' and '5'	'1', '8' and '0'	"2", '5' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Label Gone Timeout – cont.

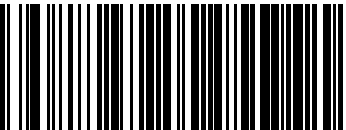
<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Label Gone Timeout Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>
<div><div> DEFAULT</div><div>016 = Timeout of 160 ms</div></div>	

# Sleep Mode Timeout

Specifies the timeout value for the reader to enter low power Sleep Mode.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div></div>	<div><div></div><div>Sleep Mode Timeout = Disable</div></div>
<div><div></div><div>Sleep Mode Timeout = 500ms</div></div>	
	<div><div></div><div>Sleep Mode Timeout = 1 Second</div></div>
<div><div></div><div>Sleep Mode Timeout = 2 Seconds</div></div>	
	<div><div></div><div>Sleep Mode Timeout = 3 Seconds</div></div>
<div><div></div><div>Sleep Mode Timeout = 4 Seconds</div></div>	

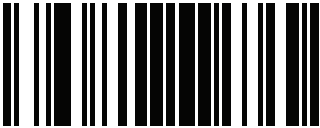
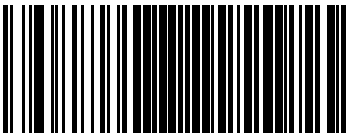
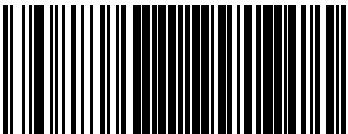

# Sleep Mode Timeout – continued

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Sleep Mode Timeout = 5 Seconds</div></div>
<div><div></div><div>Sleep Mode Timeout = 6 Seconds</div></div>	
	<div><div></div><div>Sleep Mode Timeout = 7 Seconds</div></div>
<div><div></div><div>Sleep Mode Timeout = 8 Seconds</div></div>	
	<div><div></div><div>Sleep Mode Timeout = 9 Seconds</div></div>
<div><div></div><div>Sleep Mode Timeout = 9.9 Seconds (9,900ms max.)</div></div>	

# LED and Beeper Indicators

## Power On Alert

Disables or enables the indication (from the Beeper) that the reader is receiving power.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Power On Alert = Disable (No Audible Indication)</div>
<div> Power On Alert = Four Beeps</div>	<div> DEFAULT</div>

Good Read: When to Indicate

This feature specifies when the reader will provide indication (beep and/or flash its green LED) upon successfully reading a barcode. Choices are:

- Good Read = Indicate after decode
- Good Read = Indicate after transmit
- Good Read = Indicate after CTS goes inactive, then active



This option, which uses CTS, is only valid for RS-232 interfaces.

NOTE

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> Indicate Good Read = After Decode</div>
<div> Indicate Good Read = After Transmit</div>	
	<div> Indicate Good Read = After CTS Goes Inactive, Then Active</div>

Good Read Beep Type

Specifies whether the good read beep has a mono or bitonal beep sound.



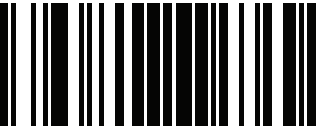
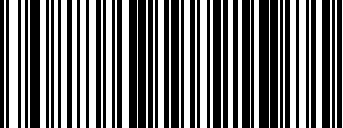
### Good Read Beep Frequency

Adjusts the good read beep to sound at a selectable low, medium or high frequency, selectable from the list below. (Controls the beeper’s pitch/tone.)

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Good Read Beep Frequency = Low</div></div>
<div><div></div><div>Good Read Beep Frequency = Medium</div></div>	
<div><div></div></div>	<div><div></div><div>Good Read Beep Frequency = High</div></div>

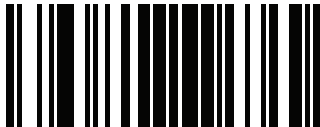
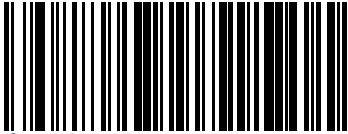

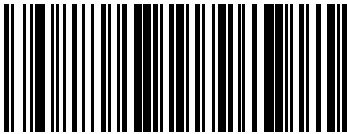
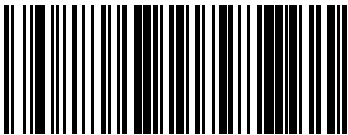
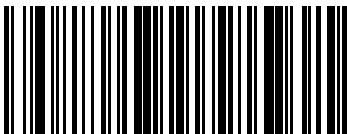
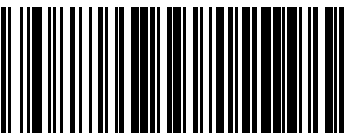
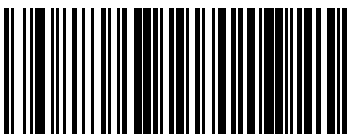
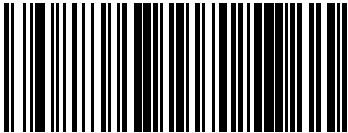
### Good Read Beep Length

Specifies the duration of a good read beep.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Good Read Beep Length = 60 msec</div></div>



Good Read Beep Length — continued

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Good Read Beep Length = 80 msec</div></div>	<div></div>
	<div><div></div><div>Good Read Beep Length = 100 msec</div></div>
<div><div></div><div>Good Read Beep Length = 120 msec</div></div>	
	<div><div></div><div>Good Read Beep Length = 140 msec</div></div>
<div><div></div><div>Good Read Beep Length = 160 msec</div></div>	
	<div><div></div><div>Good Read Beep Length = 180 msec</div></div>
<div><div></div><div>Good Read Beep Length = 200 msec</div></div>	

# Good Read Beep Volume

Selects the beeper volume (loudness) upon a good read beep. There are three selectable volume levels.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Good Read Beep Volume = Beeper Off</p></div>
<div><p>Good Read Beep Volume = Low</p></div>	
	<div><p>Good Read Beep Volume = Medium</p></div>
<div><p>Good Read Beep Volume = High</p></div>	<div></div>

## Good Read LED Duration

This feature specifies the amount of time that the Good Read LED remains on following a good read. The good read LED on time can be set within a range of 100 milliseconds to 25.5 seconds (0.1 to 25.5 seconds) in 100ms increments.

Follow these instructions to set this feature:

1. Determine the desired setting in milliseconds. A setting of 0 means that the good read LED stays on until the next time the trigger is pulled.
2. Divide the desired setting by 100 (setting is in 100ms increments). Pad the result with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT GOOD READ LED DURATION SETTING.
5. Scan the appropriate three digits from the keypad in [Appendix E, Keypad](#) representing the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

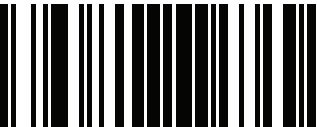
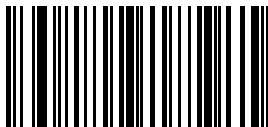
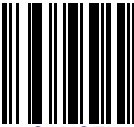
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

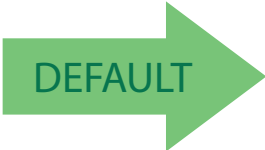
This completes the procedure. See [Table 3](#) for some examples of how to set this feature.

**Table 3. Good Read LED Duration Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	Good Read LED stays on until next trigger pull (000)	200ms	1500ms	2500ms (2.50 sec.)
2	Divide by 100 (and pad with leading zeroes)	000	002	015	025
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT LABEL GONE TIMEOUT SETTING				
5	Scan Three Characters From <a href="#">Appendix E, Keypad</a>	'0', '0' and '0'	'0', '0' and '2'	'0', '1' and '5'	'0', '2' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Good Read LED Duration – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Good Read LED Duration Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>



020 = Good Read LED stays on for 2 seconds.



NOTE

Indicators are dimmed during sleep.

# Scanning Features

## Scan Mode

Selects the scan operating mode for the reader. Selections are:

**Trigger Single** — When the trigger is pulled, scanning is activated until one of the following occurs:

- [Scanning Active Time](#) has elapsed
- a label has been read
- the trigger is released

This mode is associated with typical handheld reader operation: when the trigger is pulled, scanning starts and the product scans until the trigger is released, or a label is read, or the maximum [Scanning Active Time](#) has elapsed.

**Trigger Hold Multiple** — When the trigger is pulled, scanning starts and the product scans until the trigger is released or [Scanning Active Time](#) has elapsed. Reading a label does not disable scanning. [Double Read Timeout](#) prevents undesired multiple reads of the same label while in this mode.

**Trigger Pulse Multiple** — When the trigger is pulled, continuous scanning is activated until [Scanning Active Time](#) has elapsed or the trigger has been released and pulled again. [Double Read Timeout](#)<sup>1</sup> prevents undesired multiple reads of the same label while in this mode.

**Flashing** — The reader flashes<sup>1</sup> on and off regardless of the trigger status. Flash rate is controlled by [Flash On Time](#) and [Flash Off Time](#). When Flash is ON the reader reads continuously, when Flash is OFF scanning is deactivated.

**Always On** — No trigger pull is required to read a barcode. Scanning is continually on. If the trigger is pulled, the reader acts as if it is in [Trigger Single Mode](#). [Double Read Timeout](#)<sup>1</sup> prevents undesired multiple reads of the same label while in this mode.

**Stand Mode** — No trigger pull is required to read a barcode. Scanning is turned on automatically when an item is placed in reader's field of view. If the trigger is pulled, the reader acts as if it is in single read mode. [Double Read Timeout](#)<sup>1</sup> prevents undesired multiple reads of the same label while in this mode.

**Trigger Object Sense** — This mode is similar to Stand Mode, except that a trigger pull is required to activate the decoder.

---

<sup>1</sup>. Controlled by [Flash On Time](#).

Scan Mode — continued

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Scan Mode = Trigger Single</div></div>	<div></div>
	<div><div></div><div>Scan Mode = Trigger Hold Multiple</div></div>
<div><div></div><div>Scan Mode = Trigger Pulse Multiple</div></div>	
	<div><div></div><div>Scan Mode = Flashing</div></div>
<div><div></div><div>Scan Mode = Always On</div></div>	
	<div><div></div><div>Scan Mode = Stand Mode</div></div>
<div><div></div><div>Scan Mode = Trigger Object Sense</div></div>	

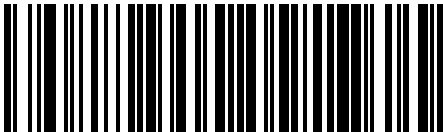
Stand Mode Triggered Timeout

This feature specifies the time to remain in **Trigger Single** mode after the trigger is pulled while in **Stand Mode**.



This timeout is only used when the Scan Mode is configured as **Stand Mode**.

NOTE

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Stand Mode Triggered Timeout = 0.5 Seconds</div>	<div></div>
	<div> Stand Mode Triggered Timeout = 1.5 Seconds</div>
<div> Stand Mode Triggered Timeout = 2 Seconds</div>	
	<div> Stand Mode Triggered Timeout = 3 Seconds</div>
<div> Stand Mode Triggered Timeout = 4 Seconds</div>	

Stand Mode Triggered Timeout – continued

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Stand Mode Triggered Timeout = 6 Seconds</div></div>
<div><div></div><div>Stand Mode Triggered Timeout = 8 Seconds</div></div>	
	<div><div></div><div>Stand Mode Triggered Timeout = Switch back to Trigger Single on trigger pull</div></div>



## Scanning Active Time

This setting specifies the amount of time that the reader stays in scan ON state once the state is entered. The range for this setting is from 1 to 255 seconds in 1-second increments.

Follow these instructions to set this feature:

1. Determine the desired setting.
2. Pad the result with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT SCANNING ACTIVE TIME SETTING.
5. Scan the appropriate three digits from the keypad in [Appendix E, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

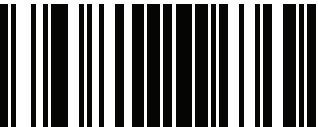
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 4](#) for some examples of how to set this feature.


**Table 4. Scanning Active Time Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	1 Second	90 Sec. (1.5 min.)	180 Sec. (3 min.)	255 Seconds (4.25 min.)
2	Pad leading zero(es)	001	090	180	255
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT SCANNING ACTIVE TIME SETTING				
5	Scan Three Characters From <a href="#">Appendix E, Keypad</a>	'0', '0' and '1'	'0', '9' and '0'	'1', '8' and '0'	'2', '5' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Scanning Active Time – cont.




ENTER/EXIT PROGRAMMING MODE




Select Scanning Active Time Setting

Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.



CANCEL



DEFAULT

005 = Scanning is active for 5 Seconds

## Flash On Time

This feature specifies the ON time for the indicator LED while in Flash Mode. The selectable range is 100 to 9,900 milliseconds (0.1 to 9.9 seconds), in 100 millisecond increments.

Follow these instructions to set this feature.

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 100 (setting is in 100ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT FLASH ON TIME SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#) representing the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

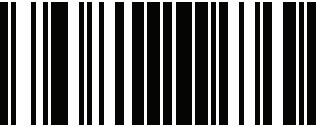
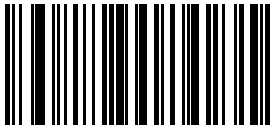

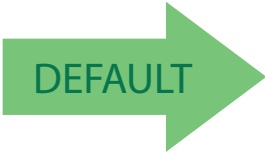
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 5](#) for some examples of how to set this feature.

**Table 5. Flash On Time Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	500ms	1,000ms (1 sec.)	5200ms (5.2 sec.)	9,900ms (9.9 sec.)
2	Divide by 100 (and pad with leading zeroes to yield two digits)	05	10	52	99
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT FLASH OFF TIME SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '5'	'1' and '0'	'5' and '2'	'9' and '9'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Flash On Time – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Flash ON Time Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>
<div><div> DEFAULT</div><div>10 = Flash is ON for 1 Second</div></div>	

## Flash Off Time

This feature specifies the OFF time for the indicator LED while in Flash Mode. The selectable range is 100 to 9,900 milliseconds (0.1 to 9.9 seconds), in 100 millisecond increments.

Follow these instructions to set this feature.

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 100 (setting is in 100ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT FLASH OFF TIME SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

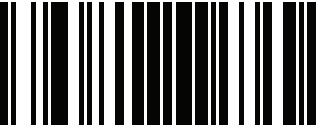
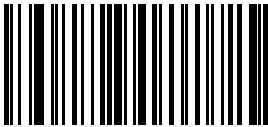

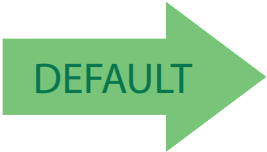
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 6](#) for some examples of how to set this feature.

**Table 6. Flash Off Time Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	500ms	1,000ms (1 sec.)	5200ms (5.2 sec.)	9,900ms (9.9 sec.)
2	Divide by 100 (and pad with leading zeroes to yield two digits)	05	10	52	99
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT FLASH OFF TIME SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '5'	'1' and '0'	'5' and '2'	'9' and '9'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Flash Off Time — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Flash OFF Time Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>
<div><div> DEFAULT</div><div>06 = Flash is OFF for 600ms</div></div>	

# Stand Mode Sensitivity

Sets the sensitivity level for stand mode wakeup. Choices are low, medium and high.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Stand Mode Sensitivity = Low</p></div>
<div><p>Stand Mode Sensitivity = Medium</p></div>	<div></div>
	<div><p>Stand Mode Sensitivity = High</p></div>

# Laser Pointer Control



The Laser Pointer is a value-added option which might not have been included when your reader was ordered.

**NOTE**

Specifies the amount of time that the laser pointer is turned on preliminary to scanning. When the trigger is pressed in Trigger Single Mode, the laser pointer will be activated for the time period configured by this feature. Immediately following this, the reader will start scanning.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>➔</div><div>DEFAULT</div></div>	<div><div></div><div>Laser Pointer Control = 0 msec (No preliminary pointer — i.e. start scanning immediately after trigger)</div></div>
<div><div></div><div>Laser Pointer Control = 100 msec</div></div>	
	<div><div></div><div>Laser Pointer Control = 200 msec</div></div>
<div><div></div><div>Laser Pointer Control = 300 msec</div></div>	
	<div><div></div><div>Laser Pointer Control = 400 msec</div></div>
<div><div></div><div>Laser Pointer Control = 500 msec</div></div>	



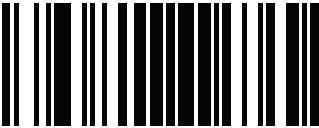
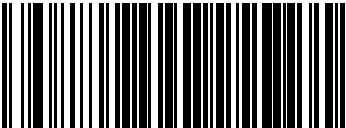
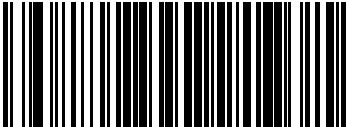

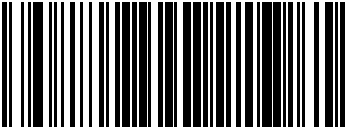
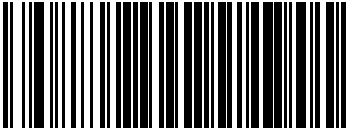
Laser Pointer Period

This option specifies the period of the laser pointer blink during scanning. The laser pointer will be activated for the time specified by [Laser Pointer Control](#) then start blinking OFF then ON at a 50% duty cycle and a repeating period set by [Laser Pointer Period](#).

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Laser Pointer Period = Laser Pointer Blinking Off</p></div>
<div><p>Laser Pointer Period = 500 ms</p></div>	<div><p>DEFAULT</p></div>
	<div><p>Laser Pointer Period = 1 Second</p></div>
<div><p>Laser Pointer Period = 1.5 Seconds</p></div>	
	<div><p>Laser Pointer Period = 2 Seconds</p></div>

# Green Spot Duration

Specifies the duration of the good read pointer beam after a good read.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Green Spot Duration = Disable (Green Spot is Off)</p></div>
<div><p>Green Spot Duration = Short (300 msec)</p></div>	<div></div>
	<div><p>Green Spot Duration = Medium (500 msec)</p></div>
<div><p>Green Spot Duration = Long (800 msec)</p></div>	

# Chapter 5

## RS-232 ONLY Interface

### Introduction

Use the programming barcodes in this chapter if modifications to the standard RS-232 interface settings are necessary to meet your system's requirements. Additional settings which apply to both the RS-232 and USB interfaces are available in [Chapter 6, RS-232/USB-Com Interfaces](#).

### RS-232 Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

### Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the reader's baud rate to match the baud rate setting of the host device. With an improper baud rate setting, data may not reach the host correctly.

 ENTER/EXIT PROGRAMMING MODE	
	 Baud Rate = 1200
 Baud Rate = 2400	
	 Baud Rate = 4800

Baud Rate — continued

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Baud Rate = 9600</div></div>	<div></div>
	<div><div></div><div>Baud Rate = 19,200</div></div>
<div><div></div><div>Baud Rate = 38,400</div></div>	
	<div><div></div><div>Baud Rate = 57,600</div></div>
<div><div></div><div>Baud Rate = 115,200</div></div>	

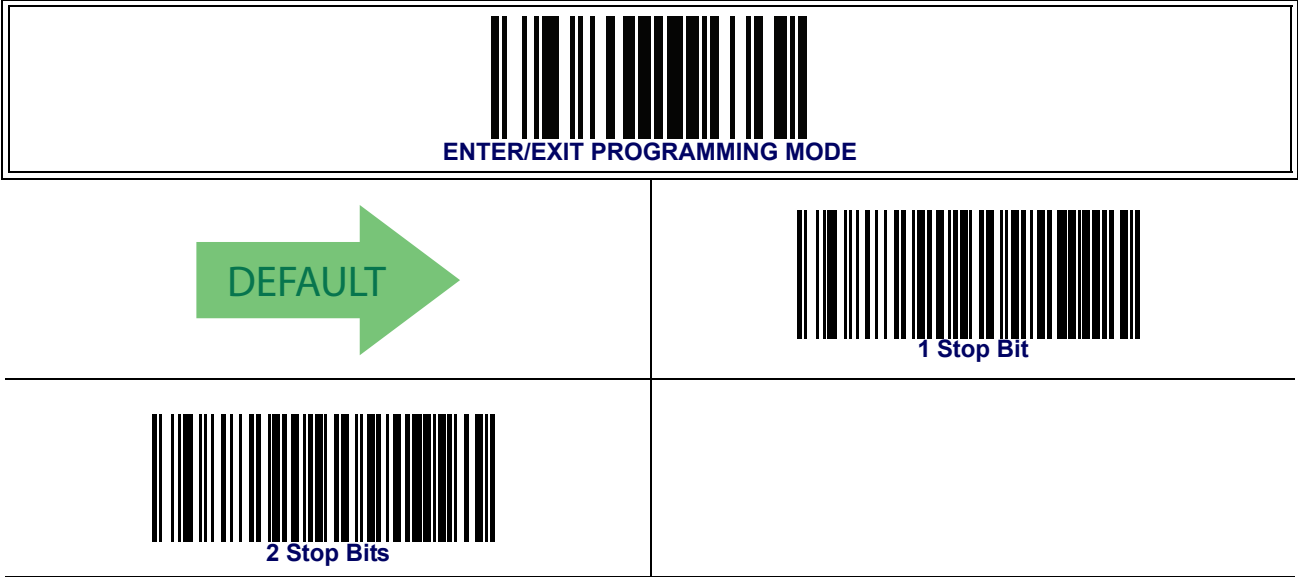
# Data Bits

This parameter allows the reader to interface with devices requiring a 7-bit or 8-bit ASCII protocol for sending and receiving data.



# Stop Bits

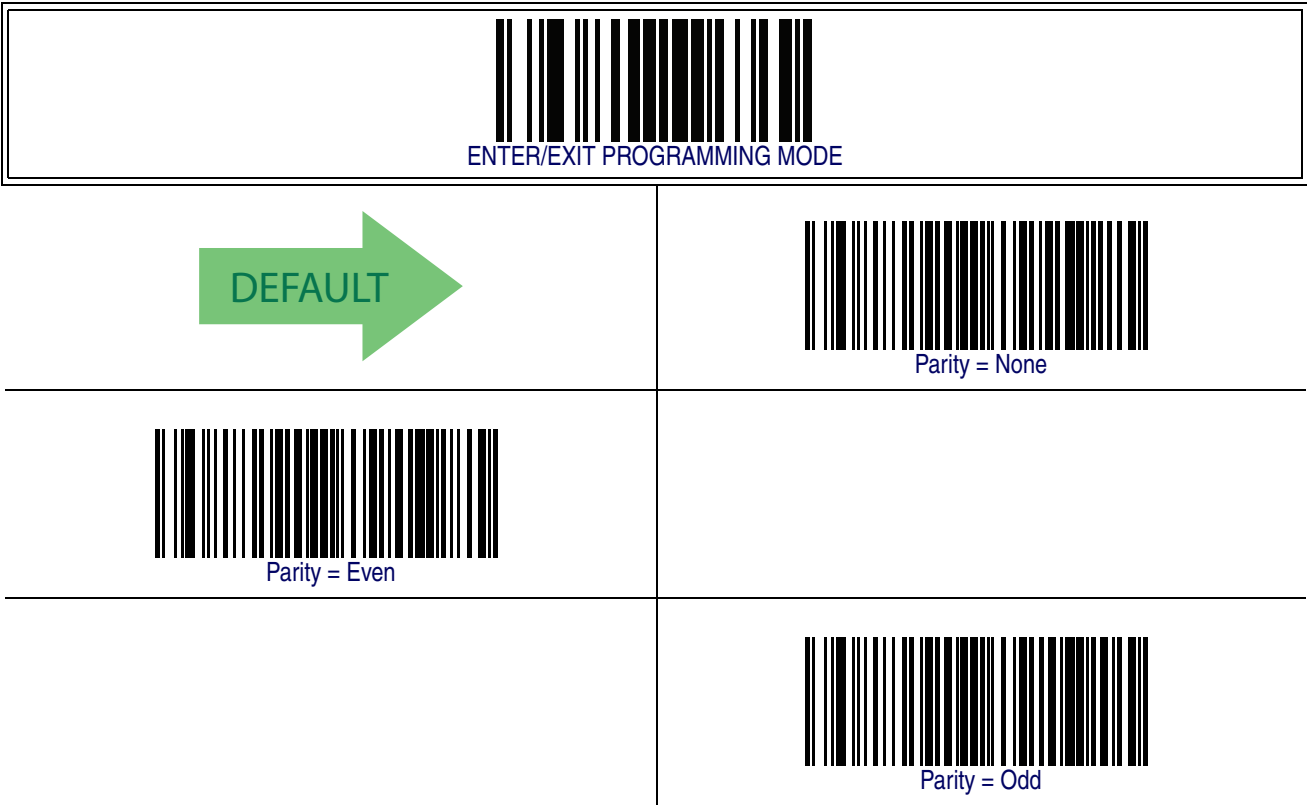
The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits selected (one or two) depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.



# Parity

This feature specifies parity required for sending and receiving data. A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

- Select None when no parity bit is required.
- Select Odd parity and the parity bit value is set to 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.
- Select Even parity and the parity bit value is set to 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.



# Handshaking Control

The data interface consists of an RS-232 port designed to operate either with or without the hardware handshaking lines, *Request to Send* (RTS), and *Clear to Send* (CTS). Handshaking Control includes the following options:

- RTS — RTS is asserted during transmissions. CTS is ignored.
- RTS/CTS — RTS is asserted during transmissions. CTS gates transmissions.
- RTS/XON/XOFF — RTS is asserted during transmissions. CTS is ignored. XON and XOFF gate transmissions.
- RTS On/CTS — RTS is always asserted. CTS gates transmissions.
- RTS/CTS Scan Control — RTS is asserted during transmissions. CTS gates transmissions and controls enable and disable state of scanner.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Handshaking Control = RTS</div></div>
<div><div></div><div>Handshaking Control = RTS/CTS</div></div>	
	<div><div></div><div>Handshaking Control = RTS/XON/XOFF</div></div>
<div><div></div><div>Handshaking Control = RTS On/CTS</div></div>	
	<div><div></div><div>Handshaking Control = RTS/CTS Scan Control</div></div>



# Chapter 6

## RS-232/USB-Com Interfaces

---

### Introduction

The programming barcodes in this chapter allow modifications to the standard RS-232 and USB-Com interfaces.

### Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

# Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay.

To set the delay:

- 1. Determine the desired setting in milliseconds.
- 2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
- 3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT INTERCHARACTER DELAY SETTING.
- 5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

NOTE





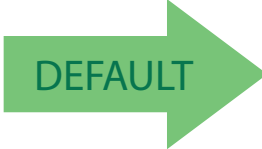
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 7](#) for some examples of how to set this feature.

Table 7. Intercharacter Delay Setting Examples

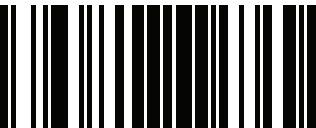
STEP	ACTION	EXAMPLES			
1	Desired Setting	50ms	150ms	600ms	850ms
2	Divide by 10 (and pad with leading zeroes to yield two-digits)	05	15	60	85
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT INTERCHARACTER DELAY SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '5'	'5' and '0'	0' and '0'	'8' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

## Intercharacter Delay — cont.

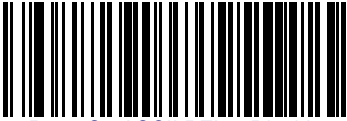
 ENTER/EXIT PROGRAMMING MODE	
	 Intercharacter Delay = No Delay
 Select Intercharacter Delay Setting	
Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.	 CANCEL
 00 = No Intercharacter Delay	

## Beep On ASCII BEL


When this parameter is enabled, the reader issues a beep when a <BEL> character is detected on the RS-232 serial line. <BEL> is issued to gain a user's attention to an illegal entry or other important event.



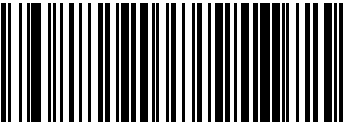
ENTER/EXIT PROGRAMMING MODE



Beep On ASCII BEL = Disable



DEFAULT



Beep On ASCII BEL = Enable

## Beep On Not on File

This option enables/disables the action of the reader to sound a three beep sequence upon receiving a Not-On-File (NOF) host command.



ENTER/EXIT PROGRAMMING MODE



Beep On Not On File = Disable



DEFAULT



Beep On Not On File = Enable

## ACK NAK Options

This enables/disables the ability of the reader to support the RS-232 ACK/NAK protocol. When configured, the reader and/or host sends an “ACK” when it receives data properly, and sends “NAK” when the data is in error.

Options are:

- Disable
- Enable for label transmission — The reader expects an ACK/NAK response from the host when a label is sent.
- Enable for host-command acknowledge — The reader will respond with ACK/NAK when the host sends a command.
- Enable for label transmission and host-command acknowledge

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> ACK/NAK Protocol = Disable ACK/NAK</div>
<div> ACK/NAK Protocol = Enable for label transmission</div>	
	<div> ACK/NAK Protocol = Enable for host-command acknowledge</div>
<div> ACK/NAK Protocol = Enable for label transmission and host-com- mand acknowledge</div>	

# ACK Character

This setting specifies an ASCII character or hex value to be used as the ACK character. ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Data Bits](#) has been set as 7 Data Bits.

To set this feature:

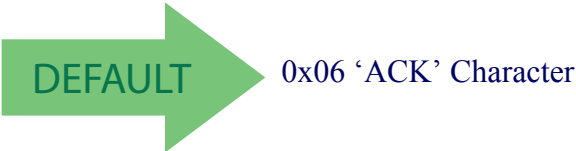
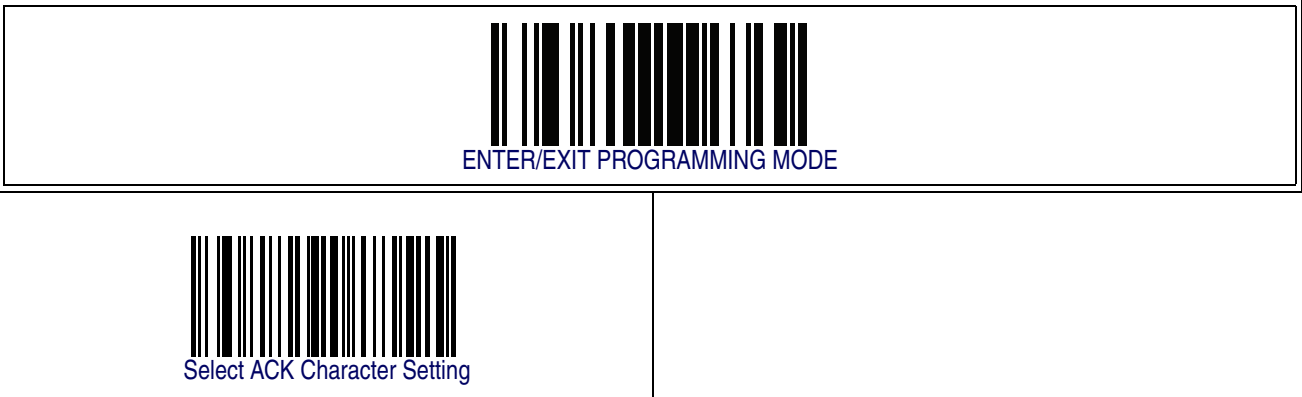
- 1. Determine the desired character or value.
- 2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
- 3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT ACK CHARACTER SETTING.
- 5. Scan the appropriate two alpha-numeric characters from the keypad in [Appendix E, Keypad](#), that represent the desired character/value in step 1 above. The second character will cause a two-beep indication.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 8](#) for some examples of how to set this feature.

Table 8. ACK Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Character/Value	ACK	\$	@	>
2	Hex equivalent	0x06	0x24	0x40	0x3E
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ACK CHARACTER SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '6'	'2' and '4'	'4' and '0'	'3' AND 'E'
6	Scan ENTER/EXIT PROGRAMMING MODE				

ACK Character — cont.



# NAK Character

This setting specifies an ASCII character or hex value to be used as the NAK character. ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Data Bits](#) has been set as 7 Data Bits.

To set this feature:

- 1. Determine the desired character or value.
- 2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
- 3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT NAK CHARACTER SETTING.
- 5. Scan the appropriate two alpha-numeric characters from the keypad in [Appendix E, Keypad](#), that represent the desired character/value in step 1 above. The second character will cause a two-beep indication.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

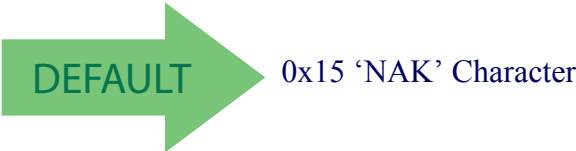
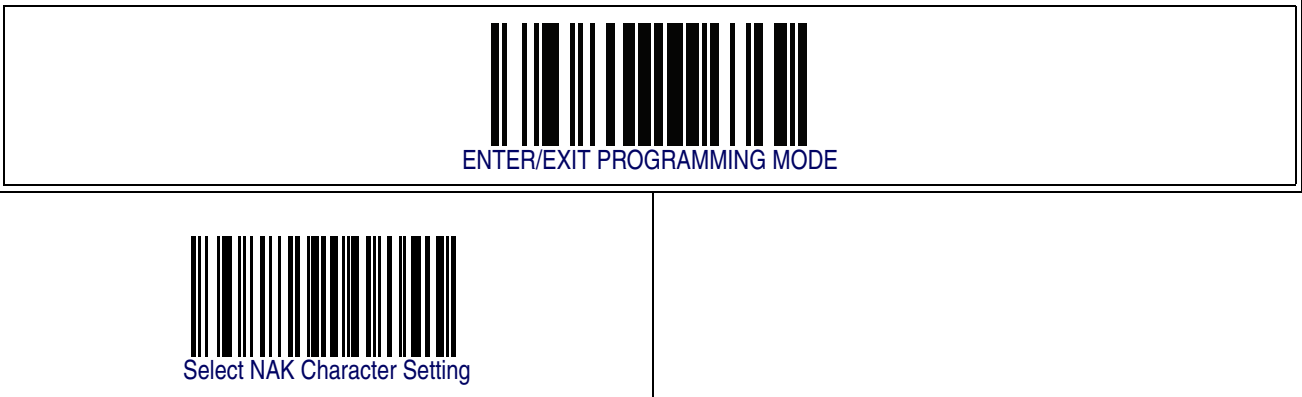
This completes the procedure. See [Table 9](#) for some examples of how to set this feature.

Table 9. NAK Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired Character/Value	NAK	\$	@	>
2	Hex equivalent	0x15	0x24	0x40	0x3E
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ACK CHARACTER SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'1' and '5'	'2' and '4'	'4' and '0'	'3' AND 'E'
6	Scan ENTER/EXIT PROGRAMMING MODE				



NAK Character — cont.



# ACK NAK Timeout Value

This option specifies the amount of time the reader waits for an ACK character from the host following label transmission. The selectable timeout range is 200 milliseconds to 15,000ms (15 seconds) in 200ms increments. A selection of 0 disables the timeout.

To set this value:

- 1. Determine the desired setting in milliseconds.
- 2. Divide the desired setting by 200 (setting is in 200ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
- 3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT ACK NAK TIMEOUT VALUE SETTING.
- 5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 10](#) for some examples of how to set this feature.

**Table 10. ACK NAK Timeout Value Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	200ms	1,000ms (1 sec.)	5200ms (5.2 sec.)	15,000ms (1 sec.)
2	Divide by 200	01	05	26	75
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ACK NAK TIMEOUT VALUE SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '1'	'0' and '5'	'2' and '6'	'7' and '5'
7	Scan ENTER/EXIT PROGRAMMING MODE				

ACK NAK Timeout Value — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select ACK NAK Timeout Value Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

DEFAULT

01 ACK NAK Timeout value is 200ms

## ACK NAK Retry Count

This feature specifies the number of times the reader retries a label transmission due to a retry condition. The selectable range is from 1 to 254 retries. A selection of 0 disables the count, and a selection of 255 specifies unlimited retries.

To set this feature:

1. Determine the desired setting.
2. Pad the number with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT ACK NAK RETRY COUNT SETTING.
5. Scan the appropriate three digits from the keypad in [Appendix E, Keypad](#), that represent the number which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

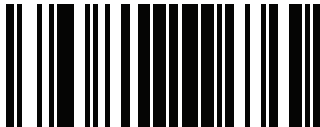
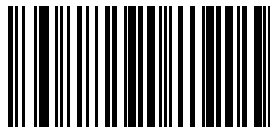
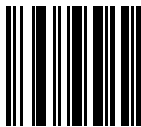
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 11](#) for some examples of how to set this feature.

**Table 11. ACK NAK Retry Count Setting Examples**

STEP	ACTION	EXAMPLES			
		Disable Retry Count	3 Retries	54 Retries	Unlimited Retries
1	Desired Setting				
2	Pad with leading zero(es)	000	003	054	255
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT ACK NAK RETRY COUNT SETTING				
5	Scan Three Characters From <a href="#">Appendix E, Keypad</a>	'0', '0' and '0'	'0', '0' and '3'	'0', '5' and '4'	'2', '5' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

ACK NAK Retry Count — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select ACK NAK Retry Count Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

DEFAULT

003 = 3 Retries

ACK NAK Error Handling

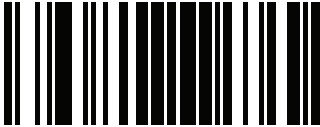
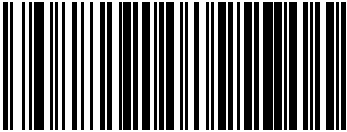
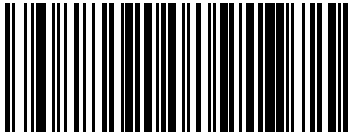

This feature specifies the method the reader uses to handle receive errors detected while waiting for an ACK character from the host.  
Options are:

- Ignore errors detected
- Process error as valid ACK character
- Process error as valid NAK character



# Indicate Transmission Failure

This option enables/disables the reader’s ability to sound an error beep to indicate a transmission failure while in ACK/NAK mode.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Indicate Transmission Failure = Disable Indication</p></div>
<div><p>Indicate Transmission Failure = Enable Indication</p></div>	<div></div>

# Disable Character

Specifies the value of the RS-232 host command used to disable the reader. ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Data Bits](#) has been set as 7 Data Bits.

To set the value:

- 1. Determine the desired character or value. A setting of 0xFF indicates the the Disable Character is not used (not available).
- 2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
- 3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT DISABLE CHARACTER SETTING.
- 5. Scan the appropriate two alpha-numeric characters from the keypad in [Appendix E, Keypad](#), that represent the desired character/value in step 1 above. The second character will cause a two-beep indication.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

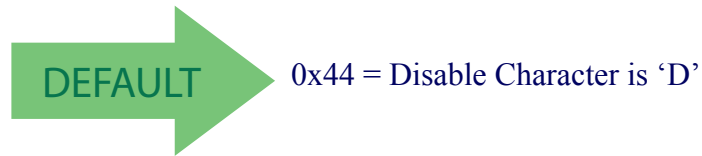
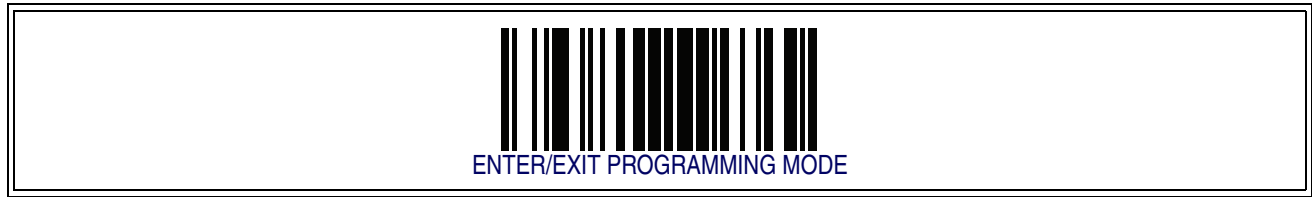
This completes the procedure. See [Table 12](#) for some examples of how to set this feature.

Table 12. Disable Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired character/value	'd'	'j'	'D'	Disable Command Not Used
2	Hex equivalent	0x64	0x7D	0x44	0xFF
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT DISABLE CHARACTER VALUE SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'6' and '4'	'7' and 'D'	'4' and '4'	'F' AND 'F'
6	Scan ENTER/EXIT PROGRAMMING MODE				



## Disable Character — cont.



# Enable Character

Specifies the value of the RS-232 host command used to enable the reader. ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE

Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option [Data Bits](#) has been set as 7 Data Bits.

To set this feature:  
Determine the desired character or value. A setting of 0xFF indicates the the Enable Character is not used (not available).

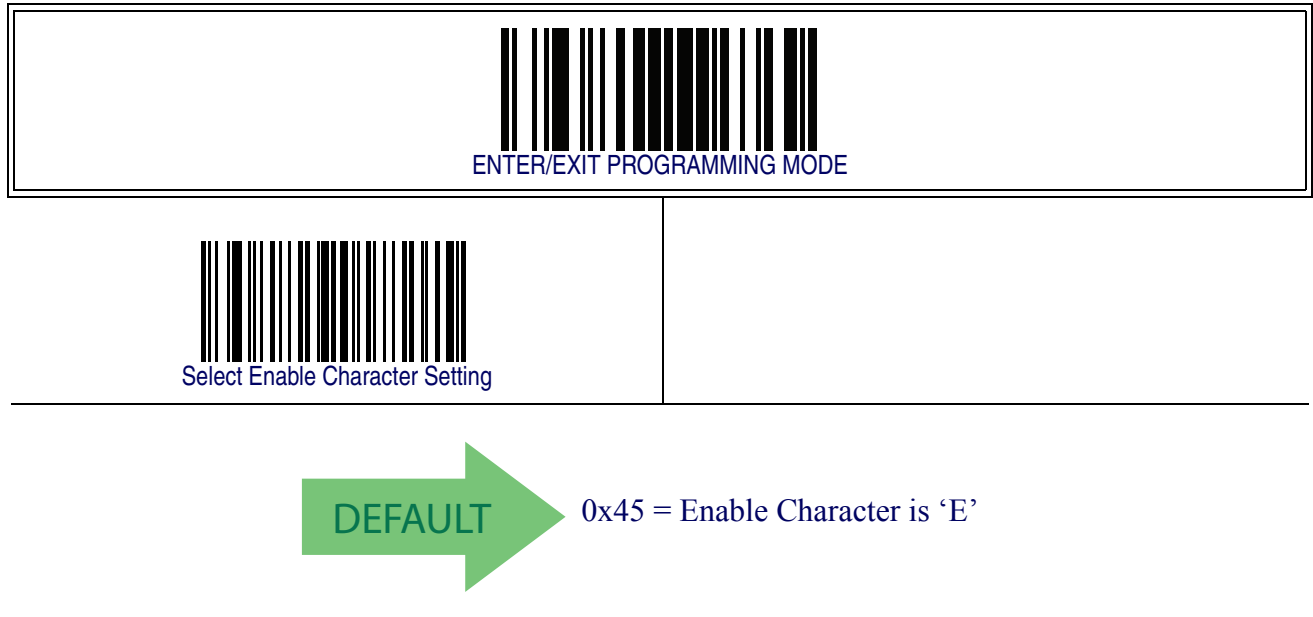
- 1. Determine the desired character or value.
- 2. Use the [ASCII Chart](#) on the inside back cover of this manual to find the hex equivalent for the desired character/value.
- 3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 4. Scan the barcode: SELECT ENABLE CHARACTER SETTING.
- 5. Scan the appropriate two alpha-numeric characters from the keypad in [Appendix E, Keypad](#), that represent the desired character/value in step 2 above. The second character will cause a two-beep indication.
- 6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 13](#) for some examples of how to set this feature.

Table 13. Enable Character Setting Examples

STEP	ACTION	EXAMPLES			
1	Desired character/value	'e'	'}'	'E'	Enable Command Not Used
2	Hex equivalent	0x65	0x7D	0x45	0xFF
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT DISABLE CHARACTER VALUE SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'6' and '5'	'7' and 'D'	'4' and '5'	'F' AND 'F'
6	Scan ENTER/EXIT PROGRAMMING MODE				

## Enable Character — cont.



## NOTES

# Chapter 7

## Keyboard Interface

---

### Introduction

Use the programming barcodes in this chapter to select options for USB Keyboard and Wedge Interfaces.

### Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

### Scancode Tables

Information about control character emulation which applies to keyboard interfaces is listed in [Appendix F, Scancode Tables](#).

# Country Mode

This feature specifies the country/language supported by the keyboard.  
Only the following interfaces support ALL Country Modes.

- USB Keyboard (without alternate key encoding)
- AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 w/Std Key Encoding
- Keyboard Wedge for IBM AT PS2 with standard key encoding but without external keyboard
- AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 without Alternate Key
- Keyboard Wedge for IBM AT PS2 without alternate key encoding but without external keyboard

All other interfaces support ONLY the following Country Modes: U.S., Belgium, Britain, France, Germany, Italy, Spain, Sweden.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Country Mode = U.S.</div></div>
<div><div></div><div>Country Mode = Belgium</div></div>	
	<div><div></div><div>Country Mode = Britain</div></div>
<div><div></div><div>Country Mode = Croatia</div></div>	Supports only the interfaces listed in theCountry Mode feature description.
Supports only the interfaces listed in theCountry Mode feature description.	<div><div></div><div>Country Mode = Czechoslovakia</div></div>

## Country Mode — continued

 <p>ENTER/EXIT PROGRAMMING MODE</p>	
 <p>Country Mode = Denmark</p>	Supports only the interfaces listed in theCountry Mode feature description.
	 <p>Country Mode = France</p>
 <p>Country Mode = Germany</p>	
Supports only the interfaces listed in theCountry Mode feature description.	 <p>Country Mode = Hungary</p>
 <p>Country Mode = Italy</p>	
Supports only the interfaces listed in theCountry Mode feature description.	 <p>Country Mode = Japanese 106-key</p>
 <p>Country Mode = Norway</p>	Supports only the interfaces listed in theCountry Mode feature description.

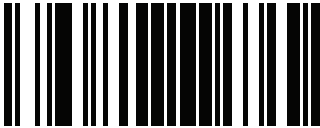
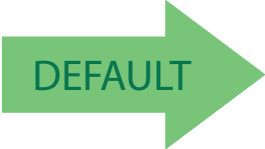
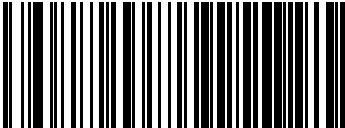
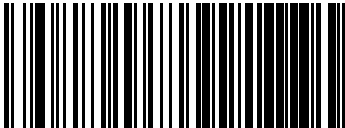
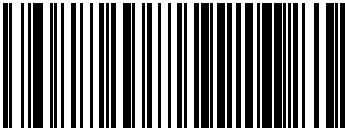
# Country Mode – continued

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
<div><p>Country Mode = Poland</p></div>	Supports only the interfaces listed in theCountry Mode feature description.
Supports only the interfaces listed in theCountry Mode feature description.	<div><p>Country Mode = Portugal</p></div>
<div><p>Country Mode = Romania</p></div>	Supports only the interfaces listed in theCountry Mode feature description.
Supports only the interfaces listed in theCountry Mode feature description.	<div><p>Country Mode = Slovakia</p></div>
<div><p>Country Mode = Spain</p></div>	
	<div><p>Country Mode = Sweden</p></div>
<div><p>Country Mode = Switzerland</p></div>	Supports only the interfaces listed in theCountry Mode feature description.



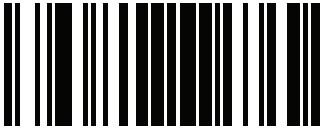
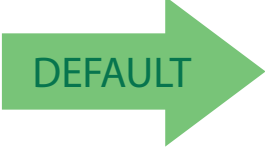
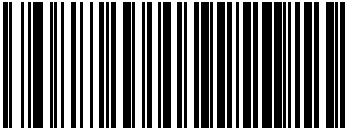
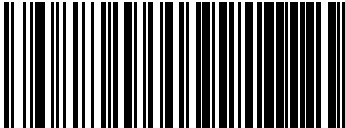
## Caps Lock State

This option specifies the format in which the reader sends character data. This applies to keyboard wedge interfaces. This does not apply when an alternate key encoding keyboard is selected.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> Caps Lock State = Caps Lock OFF</div>
<div> Caps Lock State = Caps Lock ON</div>	
	<div> Caps Lock State = AUTO Caps Lock Enable</div>

## Numlock

This option specifies the setting of the Numbers Lock (Numlock) key while in keyboard wedge interface. This only applies to alternate key encoding interfaces. It does not apply to USB keyboard.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> Numlock = Numlock key unchanged</div>
<div> Numlock = Numlock key toggled</div>	

# Send Control Characters

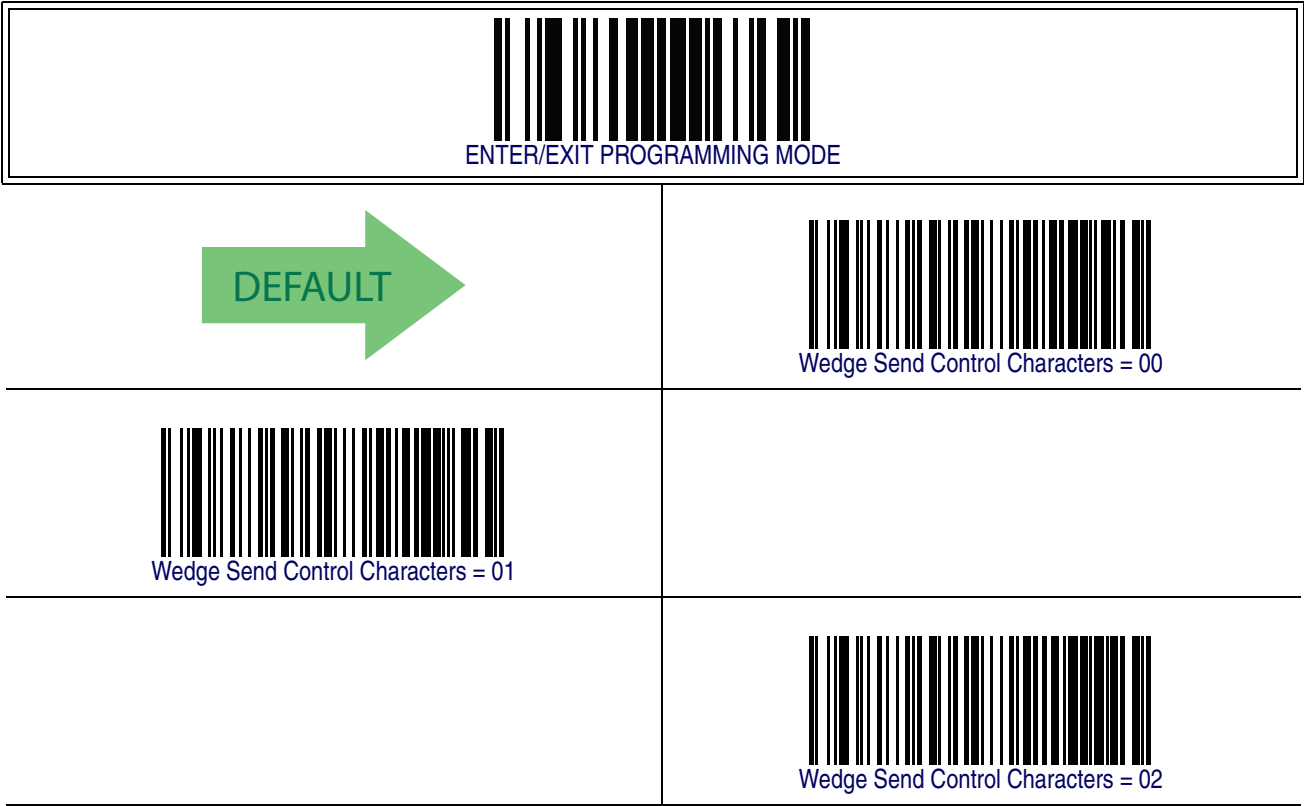
This feature Specifies how the reader transmits ASCII control characters to the host. Reference [Appendix F, Scancode Tables](#) for more information about control characters.

Options are as follows:

**Control Character 00** — Characters from 00 to 0x1F are sent as control character Ctrl+Keys, special keys are located from 0x80 to 0xA1.

**Control Character 01** — Characters from 00 to 0x1F are sent as control character Ctrl+Capital Key, special keys are located from 0x80 to 0xA1.

**Control Character 02** — Special keys are located from 00 to 0x1F and characters from 0x80 to 0xFE are intended as an extended ASCII table (Microsoft Windows Codepage 1252 — see [Microsoft Windows Codepage 1252 on page 376](#)).



## Wedge Quiet Interval

This option specifies the amount of time to look for keyboard activity before the reader breaks the keyboard connection in order to transmit data to host. The selectable range for this feature is from 0 to 990ms in 10ms increments.



This feature applies **ONLY** to the Keyboard Wedge interface.

### NOTE

Follow these instructions to set this feature:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT WEDGE QUIET INTERVAL SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

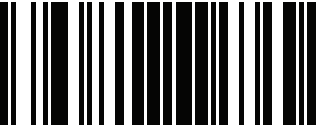
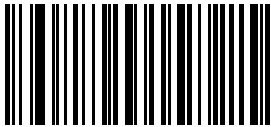

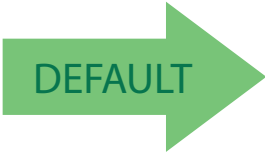
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure to set the Wedge Quiet Interval. See [Table 14](#) for some examples of how to set this feature.

**Table 14. Timeout Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	10ms	150ms	600ms	850ms
2	Divide by 10 (and pad with leading zeroes)	01	15	60	85
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT WEDGE QUIET INTERVAL SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '1'	'1' and '5'	'6' and '0'	'8' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

# Wedge Quiet Interval – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Wedge Quiet Interval Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>
<div><div> DEFAULT</div><div>10 = Quiet Interval of 100 ms</div></div>	

## Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay.



This feature applies **ONLY** to the Keyboard Wedge interface.

### NOTE

To set the delay:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT INTERCHARACTER DELAY SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

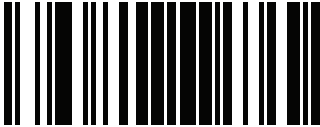

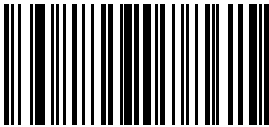

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 14](#) for some examples of how to set this feature.

**Table 15. Intercharacter Delay Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	50ms	150ms	600ms	850ms
2	Divide by 10 (and pad with leading zeroes to yield two-digits)	05	15	60	85
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT INTERCHARACTER DELAY SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '5'	'1' and '5'	'6' and '0'	'8' and '5'
6	Scan ENTER/EXIT PROGRAMMING MODE				

# Intercharacter Delay – cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Intercharacter Delay = No Delay</div></div>
<div><div></div><div>Select Intercharacter Delay Setting</div></div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div><div></div><div>CANCEL</div></div>

DEFAULT

00 = No Intercharacter Delay

## Intercode Delay

Specifies the delay between labels transmitted to the host for this interface. The selectable range for this feature is from 0 to 99 seconds.

Follow these instructions to set this feature:

1. Determine the desired setting.
2. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT INTERCODE DELAY SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

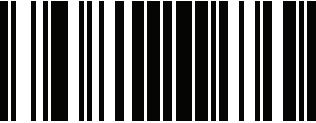
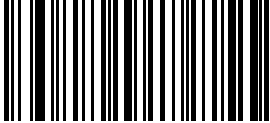
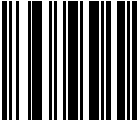
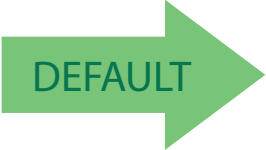
6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 16](#) for some examples of how to set this feature.

**Table 16. Wedge Intercode Delay Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	No Delay	5 Seconds	60 Seconds	99 Seconds
2	Pad with leading zero(es)	00	05	60	99
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT INTERCODE DELAY SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '5'	'6' and '0'	'9' AND '9'
7	Scan ENTER/EXIT PROGRAMMING MODE				

Intercode Delay – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Set Intercode Delay</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>
<div><div> DEFAULT</div><div>00 = No Wedge Intercode Delay</div></div>	



# USB Keyboard Speed

This option specifies the USB poll rate for a USB keyboard.



This feature applies **ONLY** to the USB Keyboard interface.

NOTE

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>➔</div><div>DEFAULT</div></div>	<div><div></div><div>USB Keyboard Speed = 1ms</div></div>
<div><div></div><div>USB Keyboard Speed = 2ms</div></div>	
	<div><div></div><div>USB Keyboard Speed = 3ms</div></div>
<div><div></div><div>USB Keyboard Speed = 4ms</div></div>	
	<div><div></div><div>USB Keyboard Speed = 5ms</div></div>

# USB Keyboard Speed – continued

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>USB Keyboard Speed = 6ms</div></div>	
	<div><div></div><div>USB Keyboard Speed = 7ms</div></div>
<div><div></div><div>USB Keyboard Speed = 8ms</div></div>	
	<div><div></div><div>USB Keyboard Speed = 9ms</div></div>
<div><div></div><div>USB Keyboard Speed = 10ms</div></div>	

# Chapter 8

## USB-OEM Interface

---

### Introduction

Feature settings for USB interfaces differ depending upon which host type the reader will be connected with. Use the feature settings in this chapter and [Chapter 9, IBM 46XX Interface](#) to specifically configure for the USB-OEM interface. Other USB interfaces are included in the appropriate chapter for their host type.

### Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

# USB-OEM Device Usage

The USB-OEM protocol allows for the reader to be identified as one of two different types of barcode scanners. Depending on what other scanners you may already have connected to a USB-OEM POS, you may need to change this setting to enable all devices to communicate.

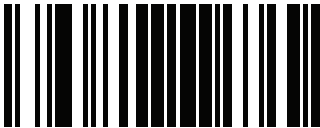
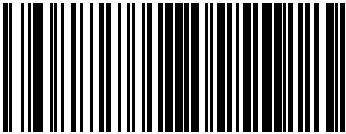
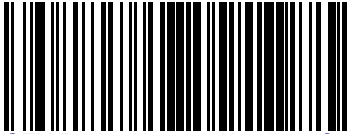

Options are:

- Table Top Scanner
- Handheld Scanner



It may be necessary to switch device usage when connecting two readers/scanners of the same type to a POS system.

NOTE

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> USB-OEM Device Usage = Table Top Scanner</div>
<div> USB-OEM Device Usage = Handheld Scanner</div>	<div></div>

## USB-OEM Interface Options

This setting provides for an interface specific control mechanism..  
Options are:

- Obey — Obey Scanner Configuration Host Commands
- Ignore — Ignore Scanner Configuration Host Commands



## NOTES

# Chapter 9

## IBM 46XX Interface

---

### Introduction

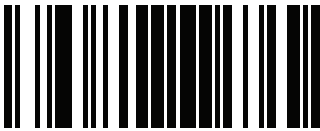
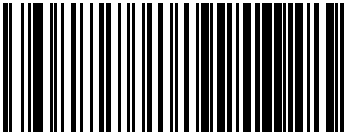
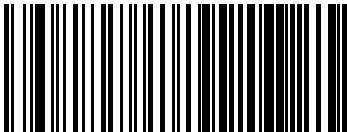
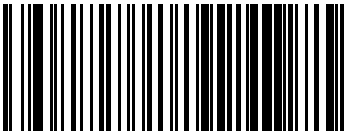
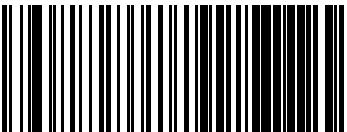
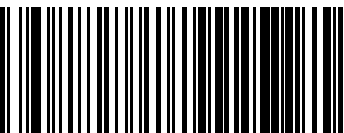
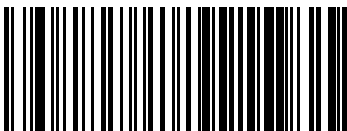

Use the barcodes in this section to configure programmable features for available IBM 46XX interfaces.

### IBM Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

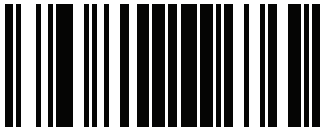
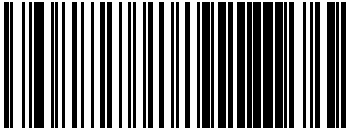
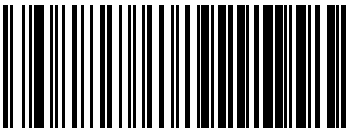
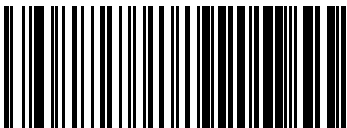

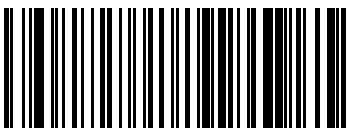

# 46xx Number of Host Resets

Specifies how many consecutive resets are processed before the reader starts a five-second period to allow the user to enter Programming Mode and configure the reader. The configurable range for this feature is 1 to 15 resets.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>46xx Number of Host Resets = 1</div></div>
<div><div></div><div>46xx Number of Host Resets = 2</div></div>	
	<div><div></div><div>46xx Number of Host Resets = 3</div></div>
<div><div></div><div>46xx Number of Host Resets = 4</div></div>	
	<div><div></div><div>46xx Number of Host Resets = 5</div></div>
<div><div></div><div>46xx Number of Host Resets = 6</div></div>	<div></div>



## 46xx Number of Host Resets — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> 46xx Number of Host Resets = 7</div>
<div> 46xx Number of Host Resets = 8</div>	
	<div> 46xx Number of Host Resets = 9</div>
<div> 46xx Number of Host Resets = 10</div>	
	<div> 46xx Number of Host Resets = 11</div>
<div> 46xx Number of Host Resets = 12</div>	

46xx Number of Host Resets – cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>46xx Number of Host Resets = 13</div></div>
<div><div></div><div>46xx Number of Host Resets = 14</div></div>	
	<div><div></div><div>46xx Number of Host Resets = 15</div></div>

# Transmit Labels in Code 39 Format

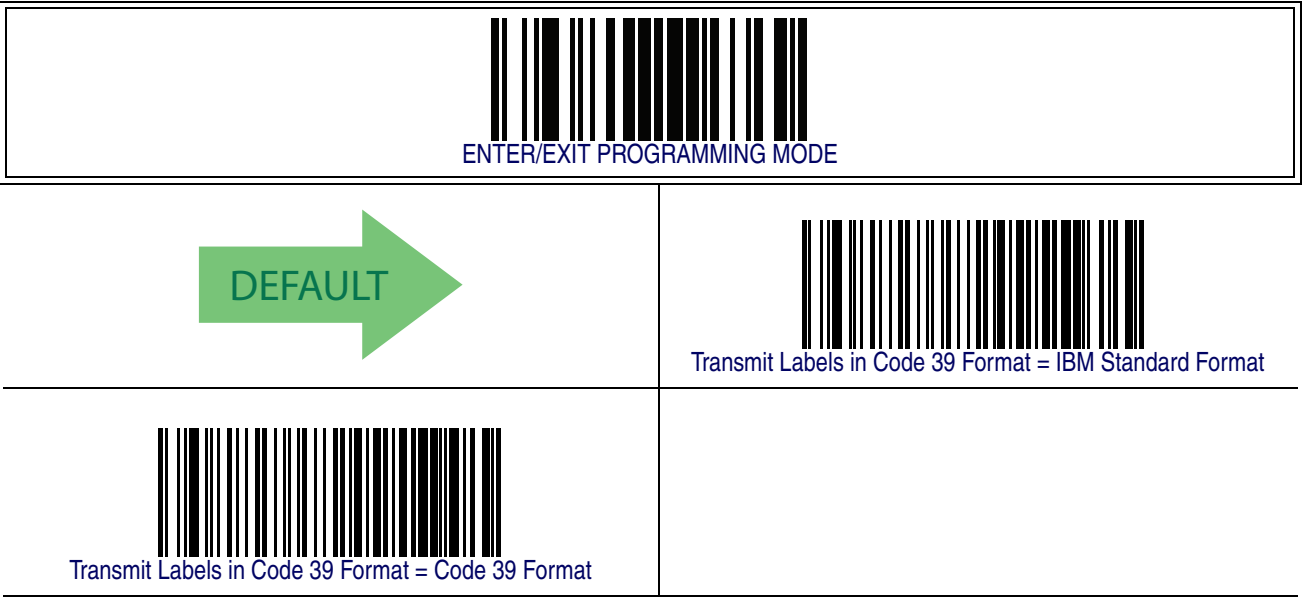
This feature enable/disables translation to Code 39 before transmitting label data to an IBM-46XX or a USB-OEM host. Only the symbology identifier is modified for the translation. The data is not converted to Code 39 or verified to be valid for Code 39.

Options are:

**IBM Standard Format** — Send labels in standard IBM format.

**Code 39 Format** — Translate the following symbologies to Code 39:

- USB-OEM: Code128, Code 93, and Codabar
- IBM-Port 5B: Code 128, Code 93, and Codabar
- IBM-Port 9B: Code 93 and Codabar



## IBM 46XX Interface Options

This setting provides for an interface specific control mechanism..

Options are:

- Obey — Obey Scanner Configuration Host Commands
- Ignore — Ignore Scanner Configuration Host Commands



# Chapter 10

## Wand Emulation Interface

### Introduction

This chapter provides feature/settings configuration for the Wand Emulation interface.

### Wand Emulation Standard Factory Settings

Reference [Appendix B, Standard Defaults](#) for a listing of standard factory settings.

### Wand Idle State

This feature specifies the level of the Wand output signal when the reader is idle.



NOTE

TTL logic levels:  
0V <= Low <= 0.7V  
2.4V <= High <= 5.25V

 ENTER/EXIT PROGRAMMING MODE	
	 Wand Idle State = Low
 Wand Idle State = High	

# Wand Polarity

This option specifies the polarity of the Wand output signal. Choices are:

- Quiet zones and spaces are high, bars are low
- Quiet zones and spaces are low, bars are high



NOTE

TTL logic levels:  
0V <= Low <= 0.7V  
2.4V <= High <= 5.25V

 ENTER/EXIT PROGRAMMING MODE	
	 Wand Polarity = Quiet Zones & Spaces High, Bars Low
 Wand Polarity = Quiet Zones & Spaces Low, Bars High	

## Wand Signal Speed

This feature specifies the speed of the Wand output signal per nominal bar or space. Choices are:

- 330 microseconds
- 660 microseconds

 ENTER/EXIT PROGRAMMING MODE	
	 Wand Signal Speed = 330ms
 Wand Signal Speed = 660ms	

# Label Symbology Conversion

When this feature is enabled for the Wand Emulation interface, all barcode labels are converted to a single symbology.

Options are:

- No conversion
- Convert to Code 39 symbology
- Convert to Code 39 Full ASCII
- Convert to Code 128 symbology





## Transmit Noise

This option specifies the leading/trailing noise for the Wand interface.  
Choices are:

- Disable (no leading/trailing noise)
- Enable leading noise
- Enable trailing noise
- Enable leading and trailing noise



# NOTES

# Chapter 11

## Data Editing

### Data Editing Overview



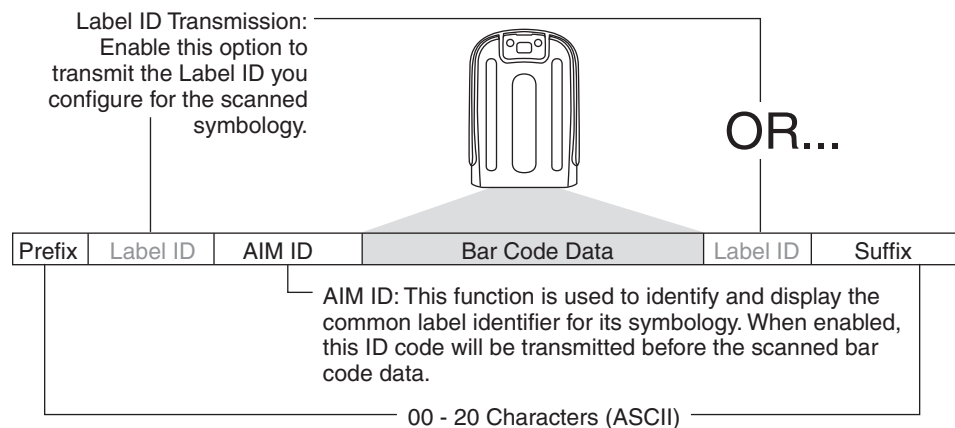
It is not recommended to use these features with IBM interfaces.

#### CAUTION

When a barcode is scanned, additional information can be sent to the host computer along with the barcode data. This combination of barcode data and supplementary user-defined data is called a “message string.” The features in this chapter can be used to build specific user-defined data into a message string.

There are several types of selectable data characters that can be sent before and after scanned data. You can specify if they should be sent with all symbologies, or only with specific symbologies. [Figure 3](#) shows the available elements you can add to a message string:

**Figure 3. Breakdown of a Message String**



#### NOTE

Additional advanced editing is available. See the Advanced Formatting features in the Datalogic Aladdin Configuration Application or contact [Technical Support](#) on page 3 for more information.

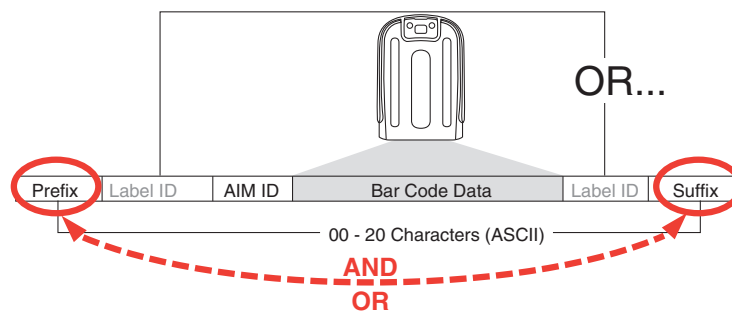
## Please Keep In Mind...

- Modifying a message string is not a mandatory requirement. Data editing is sophisticated feature allowing highly customizable output for advanced users. Factory default settings for data editing is typically set to NONE.
- A prefix or suffix may be applied (reference the [Symbolologies](#) chapter for these settings) across all symbolologies (set via the Global features in this chapter).
- You can add any character from the [ASCII Chart](#) (from 00-FF) on the inside back cover of this manual as a prefix, suffix or Label ID.
- Enter prefixes and suffixes in the order in which you want them to appear on the output.

## Global Prefix/Suffix

Up to 20 ASCII characters may be added as a prefix (in a position before the barcode data) and/or as a suffix (in a position following the barcode data) as indicated in [Figure 4](#).

**Figure 4. Prefix and Suffix Positions**



## Example: Setting a Prefix

In this example, we'll set a prefix for all symbolologies.

1. Determine which ASCII character(s) are to be added to scanned barcode data. In this example, we'll add a dollar sign ('\$') as a prefix.
2. Scan the ENTER/EXIT barcode.
3. Scan the SET GLOBAL PREFIX barcode.
4. Reference the ASCII Chart on the inside back cover of this manual, to find the hex value assigned to the desired character. The corresponding hex number for the '\$' character is 24. To enter this selection code, scan the '2' and '4' barcodes from [Appendix E, Keypad](#).



### NOTE

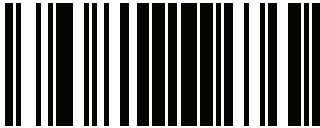
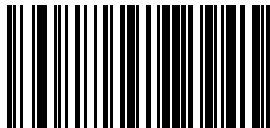
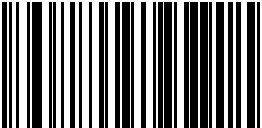
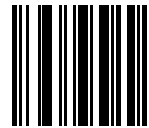
If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

5. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT barcode to terminate the string.
6. Scan the ENTER/EXIT barcode once again to exit Programming Mode.
7. The resulting message string would appear as follows:

Scanned barcode data:12345

Resulting message string output: \$12345

This option sets up to 20 characters each from the set of ASCII characters or any hex value from 00 to FF. To configure this feature, scan the ENTER/EXIT barcode to place the unit in Programming Mode, then the “Set Global Prefix” or “Set Global Suffix,” barcode followed by the digits (in hex) from the Alphanumeric characters in [Appendix E, Keypad](#) representing your desired character(s). If less than the expected string of 20 characters are selected, scan the ENTER/EXIT barcode to terminate the string. Reference the section, [Example: Setting a Prefix on page 102](#), for more information. Exit programming mode by scanning the ENTER/EXIT barcode once again.

 ENTER/EXIT PROGRAMMING MODE	
	 Set Global Prefix
 Set Global Suffix	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p> <div style="text-align: right; padding-right: 50px;">           CANCEL       </div>	



## Global AIM ID



This feature enables/disables addition of AIM IDs for all symbology types.

### NOTE

AIM label identifiers (as opposed to custom characters you select yourself as with label identifiers) can be included with scanned barcode data. AIM label identifiers consist of three characters as follows:

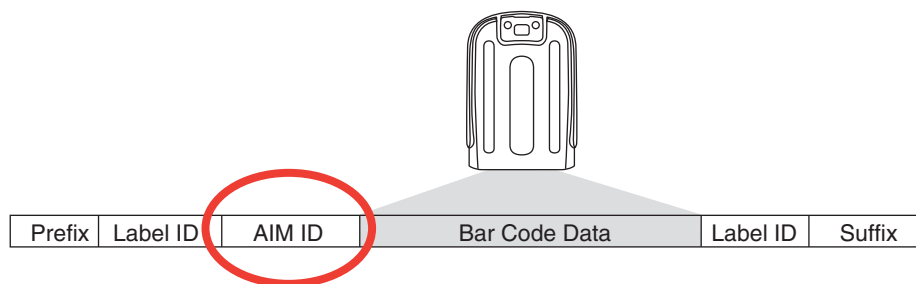
- A close brace character (ASCII '['), followed by...
- A code character (see the table below), followed by...
- A modifier character (the modifier character is symbol dependent).

SYMBOLGY	CHAR	SYMBOLGY	CHAR
UPC/EAN	E <sup>a</sup>	Code 128/GS1-128	C
Code 39 and Code 32	A	GS1 DataBar Omnidirectional, GS1 DataBar Expanded	e
Codabar	F	Standard 2 of 5	S
Interleaved 2 of 5	I	ISBN	X <sup>b</sup>
Code 93	G	Code 11	H

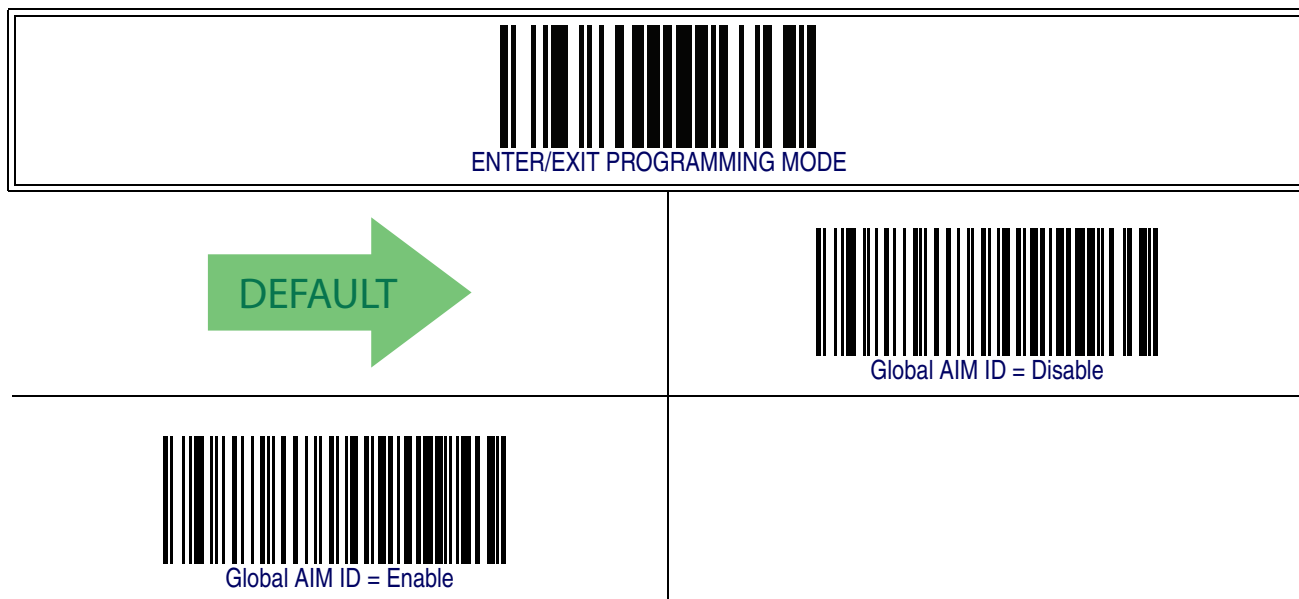
a. UPC-A and UPC-E labels are converted to EAN 13 when adding AIM IDs.

b. ISBN (X with a 0 modifier character)

**Figure 5. AIM ID**



## Global AIM ID — continued



# GS1-128 AIM ID

If Global AIM ID is disabled, the AIM ID for GS1-128 can be enabled/disabled independently. The AIM ID for GS1-128 is a ]C1, ]C2 or ]C3.

AIM IDs for other symbologies can be enabled/disabled independently as well. Contact Customer Support for assistance.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> GS1-128 AIM ID = Disable</div>
<div> GS1-128 AIM ID = Enable</div>	<div> DEFAULT</div>



# Label ID

A Label ID is a customizable code of up to three ASCII characters (each can be one of hex 0x01-0xFF), used to identify a barcode (symbology) type. It can be appended previous to or following the transmitted barcode data depending upon how this option is enabled. This feature provides options for configuring custom Label IDs as a pre-loaded set (see [Label ID: Pre-loaded Sets on page 107](#)) or individually per symbology (see [Label ID: Set Individually Per Symbology on page 110](#)). If you wish to program the reader to always include an industry standard label identifier for ALL symbology types, see the previous feature [Global AIM ID on page 104](#).

## Label ID: Pre-loaded Sets

The reader supports two pre-loaded sets of Label IDs. [Table 17](#) shows the USA set and the EU set.



CAUTION

When changing from one Label ID set to another, all other imager configuration settings, including the host interface type, will be erased and set to the factory defaults. Any custom configuration or custom defaults will be lost.



**Table 17. Label ID Pre-loaded Sets**

Symbology	USA Label ID set		EU Label ID set	
	ASCII character	Hex value	ASCII character	Hexadecimal value
ABC Codabar	S	530000	S	530000
Anker Plessey	o	6F0000	o	6F0000
CODABAR	%	250000	R	520000
Codablock F	l	6C0000	m	6D0000
Code 39 CIP	Y	590000	Y	590000
Code 93	&	260000	U	550000
CODE11	CE	434500	b	620000
CODE128	#	230000	T	540000
CODE32	A	410000	X	580000
CODE39	*	2A0000	V	560000
CODE4	4	340000	4	340000
CODE5	j	6A0000	j	6A0000
CODE93	&	260000	U	550000
DATALOGIC 2OF5	s	730000	s	730000
EAN13	F	460000	B	420000
EAN13 P2	F	460000	L	4C0000
EAN13 P5	F	460000	M	4D0000
EAN13 P8	F	460000	#	230000
EAN8	FF	464600	A	410000
EAN8 P2	FF	464600	J	4A0000
EAN8 P5	FF	464600	K	4B0000
EAN8 P8	FF	464600	*	2A0000
FOLLETT 2OF5	O	4F0000	O	4F0000
GS1 DATABAR EXPANDED	RX	525800	t	740000
GS1 DATABAR LIMITED	RL	524C00	v	760000
GS1 DATABAR OMNIDIRECTIONAL	R4	523400	u	750000
GS1-128		000000	k	6B0000
GTIN	G	470000	\$A	244100
GTIN2	G2	473200	\$B	244200

Symbology	USA Label ID set		EU Label ID set	
GTIN5	G5	473500	\$C	244300
GTIN8	G8	473800	\$D	244400
I2OF5	i	690000	N	4E0000
IATA	IA	494100	&	260000
Industrial 2 of 5	W	570000	W	570000
Interleaved 2 of 5 CIP HR	e	650000	e	650000
ISBN	l	490000	@	400000
ISBT128	f	660000	f	660000
ISSN	n	6E0000	n	6E0000
MSI	@	400000	Z	5A0000
Plessey	a	610000	a	610000
S25	s	730000	P	500000
UPCA	A	410000	C	430000
UPCA P2	A	410000	F	460000
UPCA P5	A	410000	G	470000
UPCA P8	A	410000	Q	510000
UPCE	E	450000	D	440000
UPCE P2	E	450000	H	480000
UPCE P5	E	450000	I	490000
UPCE P8	E	450000	E	450000

## Label ID: Set Individually Per Symbology

To configure a Label ID individually for a single symbology:

1. Scan the ENTER/EXIT barcode.
2. Select Label ID position as either BEFORE (Enable as Prefix) or AFTER (Enable as suffix) by scanning the appropriate barcode in the section [Label ID Control on page 112](#). Reference [Figure 6](#) for Label ID positioning options if multiple identification features are enabled.
3. Scan a barcode to select the symbology for which you wish to configure a custom Label ID from the section [Label ID Symbology Selection, starting on page 113](#).
4. Determine the desired character(s) (you may choose up to three) which will represent the Label ID for the selected symbology.
5. Turn to the [ASCII Chart](#) on the inside back cover of this manual and find the equivalent hex digits associated with your choice of Label ID. For example, if you wish to select an equal sign (=) as a Label ID, the chart indicates its associated hex characters as 3D. Turn to [Keypad, starting on page 361](#) and scan the barcodes representing the hex characters determined. For the example given, the characters '3' and 'D' would be scanned. More examples of Label ID settings are provided in [Table 18](#).



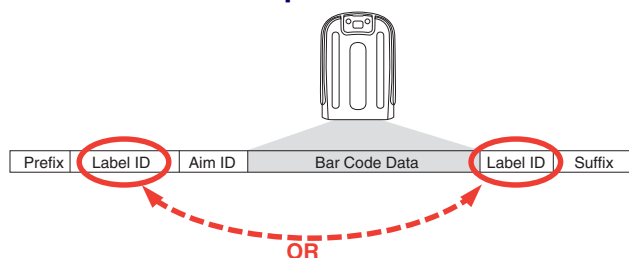
If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

### NOTE

6. Scan the ENTER/EXIT barcode to exit Label ID entry.
7. Scan the ENTER/EXIT barcode once again to exit Programming Mode.

This completes the steps to configure a Label ID for a given symbology.

**Figure 6. Label ID Position Options**



## Label ID — continued

**Table 18. Label ID Examples**

STEP	ACTION	EXAMPLES			
1.	Scan the ENTER/EXIT barcode	(Scanner enters Programming Mode)			
2.	Determine placement of the Label ID characters BEFORE or AFTER with regard to scanned data using <a href="#">Label ID Control on page 112</a>	Enable as Prefix	Enable as Suffix	Enable as Prefix	Enable as Suffix
3.	Scan the barcode selecting the symbology type you wish to designate label ID characters for using <a href="#">Label ID Symbology Selection, starting on page 113</a> .	GS1 DataBar Omnidirectional	Code 39	Interleaved 2 of 5	Code 32
4.	Custom Label ID example (desired characters):	D B *	= C 3	+	P H
5.	Find hex equivalents from the ASCII table (inside back cover), then scan in these digits/ characters using the barcodes in the section: <a href="#">Keypad, starting on page 361</a> . f you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.	44 42 2A	3D 43 33	2B	50 48
6.	Scan theENTER/EXIT barcode	(Scanner exits Label ID entry)			
7.	Scan the ENTER/EXIT barcode once again	(Scanner exits Programming Mode)			
Result:		DB*[barcode data]	[barcode data]=C3	+[barcode data]	[barcode data]PH

# Label ID — continued

## Label ID Control

This option controls whether a Label ID is disabled, or sent as a prefix or suffix for a given symbology type.



ENTER/EXIT PROGRAMMING MODE



DEFAULT

 <p>Label ID Transmission = Disable</p>	
 <p>Label ID Transmission = Enable as Prefix</p>	
	 <p>Label ID Transmission = Enable as Suffix</p>



CANCEL

Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

## Label ID — continued

### Label ID Symbology Selection

This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

 ENTER/EXIT PROGRAMMING MODE	
	 Set UPC-A Label ID Character(s)
 Set UPC-A/P2 Label ID Character(s)	
	 Set UPC-A/P5 Label ID Character(s)
 Set UPC-A/GS1-128 Label ID Character(s)	
	 Set UPC-E Label ID Character(s)
 Set UPC-E/P2 Label ID Character(s)	

# Label ID — continued

## Label ID Symbology Selection — continued

This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Set UPC-E/P5 Label ID Character(s)</div></div>
<div><div></div><div>Set UPC-E/GS1-128 Label ID Character(s)</div></div>	
	<div><div></div><div>Set EAN 13 Label ID Character(s)</div></div>
<div><div></div><div>Set EAN 13/P2 Label ID Character(s)</div></div>	
	<div><div></div><div>Set EAN 13/P5 Label ID Character(s)</div></div>
<div><div></div><div>Set EAN 13/GS1-128 Label ID Character(s)</div></div>	



## Label ID — continued

### Label ID Symbology Selection — continued

This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

 ENTER/EXIT PROGRAMMING MODE	
	 Set EAN 8 Label ID Character(s)
 Set EAN 8/P2 Label ID Character(s)	
	 Set EAN 8/P5 Label ID Character(s)
 Set EAN 8/GS1-128 Label ID Character(s)	
	 Set GTIN Label ID Character(s)
 Set GTIN/P2 Label ID Character(s)	

# Label ID — continued

## Label ID Symbology Selection — continued

This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Set GTIN/P5 Label ID Character(s)</div>
<div> Set GTIN/GS1-128 Label ID Character(s)</div>	
	<div> Set GS1 DataBar Omnidirectional Label ID Character(s)</div>
<div> Set GS1 DataBar Expanded Label ID Character(s)</div>	
	<div> Set GS1 DataBar Limited Label ID Character(s)</div>
<div> Set Code 39 Label ID Character(s)</div>	

## Label ID — continued

### Label ID Symbology Selection — continued

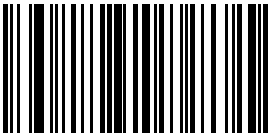
This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

 ENTER/EXIT PROGRAMMING MODE	
 Set Code 32 Label ID Character(s)	
	 Set Code 39 CIP Label ID Character(s)
 Set Code 128 Label ID Character(s)	
	 Set GS1-128 Label ID Character(s)
 Set Interleaved 2 of 5 Label ID Character(s)	
	 Set Interleaved 2 of 5 CIP HR Label ID Character(s)
 Set Datalogic 2 of 5 Label ID Character(s)	

# Label ID — continued

## Label ID Symbology Selection — continued

This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Set Codabar Label ID Character(s)</div>
<div> Set ABC Codabar Label ID Character(s)</div>	
	<div> Set Code 11 Label ID Character(s)</div>
<div> Set Standard 2 of 5 Label ID Character(s)</div>	
	<div> Set Industrial 2 of 5 Label ID Character(s)</div>
<div> Set ISSN Label ID Character(s)</div>	

## Label ID — continued

### Label ID Symbology Selection — continued

This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

 ENTER/EXIT PROGRAMMING MODE	
 Set IATA Label ID Character(s)	
	 Set Concatinated ISBT 128 Label ID Character(s)
 Set MSI Label ID Character(s)	
	 Set Plessey Label ID Character(s)
 Set Anker Plessey Label ID Character(s)	
	 Set Code 93 Label ID Character(s)

# Label ID — continued

## Label ID Symbology Selection — continued

This option selects the symbology for which a Label ID is to be configured. See [Label ID on page 107](#) for full instructions.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Set Codablock F Label ID Character(s)</div></div>	
	<div><div></div><div>Set Code 4 Label ID Character(s)</div></div>
<div><div></div><div>Set Code 5 Label ID Character(s)</div></div>	
	<div><div></div><div>Set Follett 2 of 5 Label ID Character(s)</div></div>

## Case Conversion

This feature allows conversion of the case of all alphabetic characters to upper or lower case.



Case conversion affects **ONLY** scanned barcode data, and does not affect Label ID, Prefix, Suffix, or other appended data.

### NOTE



## Character Conversion

Character conversion is an eight byte configuration item. The eight bytes are 4 character pairs represented in hexadecimal ASCII values. The first character in the pair is the character that will be converted. The second character in the pair is the character to convert to. If the character to convert in a pair is FF, then no conversion is done.

For example, if you have the character conversion configuration item set to the following:  
41423132FFFFFFFF

The first pair is 4142 or AB (41 hex is an ASCII capital A, 42 hex is an ASCII capital B) and the second pair is 3132 or 12 (31 hex is an ASCII 1, 32 is an ASCII 2). The other two pairs are FFFF and FFFF.

With the label, AB12BA21, it would look as follows after the character

conversion: BB22BB22.

The A characters were converted to B characters and the 1 characters were converted to 2 characters. Nothing is done with the last two character pairs, since they are all FF.

To set Character Conversion:

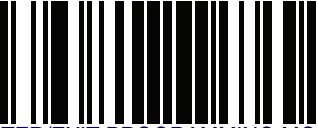
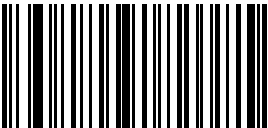
- 1. Scan the ENTER/EXIT barcode.
- 2. Scan the “Configure Character Conversion” barcode.
- 3. Determine the desired string. Sixteen positions must be determined as in the above example. Next, turn to the ASCII Chart on the inside back cover of this manual and find the equivalent hex digits needed to fulfill the string.
- 4. Turn to [Appendix E, Keypad](#) and scan the barcodes representing the hex characters determined in the previous step.
- 5. Scan the ENTER/EXIT barcode to exit Programming Mode.

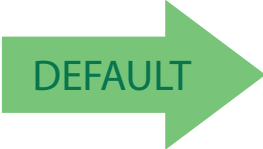


If less than the expected string of 16 characters are selected, scan the ENTER/EXIT barcode twice to accept the selections and exit Programming Mode.

NOTE

Character Conversion — continued

 ENTER/EXIT PROGRAMMING MODE	
	 Configure Character Conversion

 **0xFFFFFFFFFFFFFFF**  
(No character conversion)



# Chapter 12

## Symbologies

---

### Introduction

The reader supports the following symbologies (barcode types). Options for each symbology are included in this chapter.

### 1D Symbologies

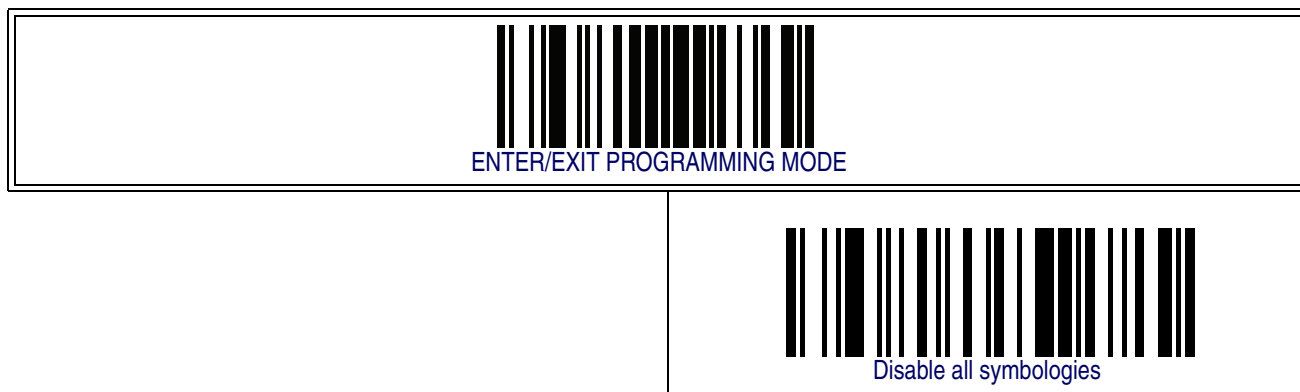
- UPC-A
- UPC-E
- GTIN Formatting
- EAN 13 (JAN 13)
- EAN 8 (JAN 8)
- Add-Ons
- GS1 DataBar™ Omnidirectional
- GS1 DataBar™ Expanded
- GS1 DataBar™ Limited
- Code 39
- Code 32 (Italian Pharmaceutical)
- Code 39 CIP (French Pharmaceutical)
- Code 128
- GS1-128
- Interleaved 2 of 5 (I 2 of 5)
- Interleaved 2 of 5 CIP HR
- Datalogic 2 of 5
- Codabar
- ABC Codabar
- Code 11
- Standard 2 of 5
- Industrial 2 of 5
- IATA
- ISBT 128
- MSI
- Plessey
- Code 93
- Codablock F
- Code 4
- Code 5
- Follett 2 of 5

### Standard Factory Settings for Symbologies

Default settings are indicated at each feature/option with a green arrow. Also reference [Appendix B, Standard Defaults](#) for a listing of the most widely used set of standard factory settings. That section also provides space to record any custom settings needed or implemented for your system.

## Disable All Symbologies

Scan this label to disable all symbologies.



## Coupon Control

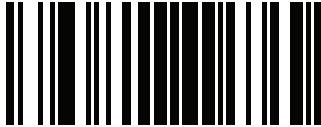
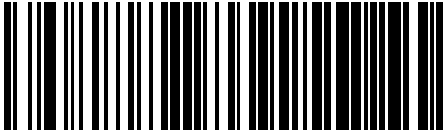
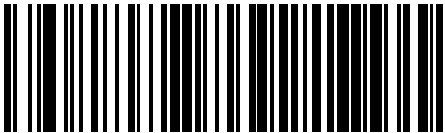

This feature is used to control the method of processing coupon labels.

Options are:

- Allow all — allow all coupon barcodes to be decoded
- Enable only UPC/EAN — enables only UPC/EAN coupon decoding
- Enable only GS1 DataBar — enables only GS1 DataBar coupon decoding

To set this feature:

1. Scan the SWITCH bar code.
2. Scan either the enable or disable bar code below. You'll need to cover any unused barcodes on this and the facing page to ensure that the reader sees only the barcode you intend to scan.
3. Complete the programming sequence by scanning the SWITCH barcode.

 ENTER/EXIT PROGRAMMING MODE	
	 Coupon Control = Allow all
 Coupon Control = Enable only UPC/EAN	
	 Coupon Control = Enable only GS1 DataBar

## UPC-A

The following options apply to the UPC-A symbology.

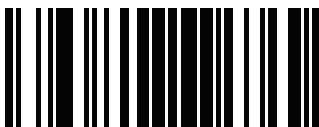
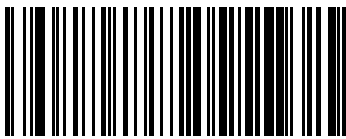
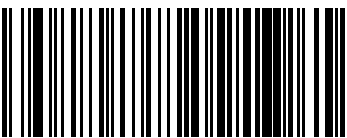

### UPC-A Enable/Disable

When disabled, the reader will not read UPC-A barcodes.

 ENTER/EXIT PROGRAMMING MODE	
	 UPC-A = Disable
 UPC-A = Enable	 DEFAULT

### UPC-A Check Character Transmission

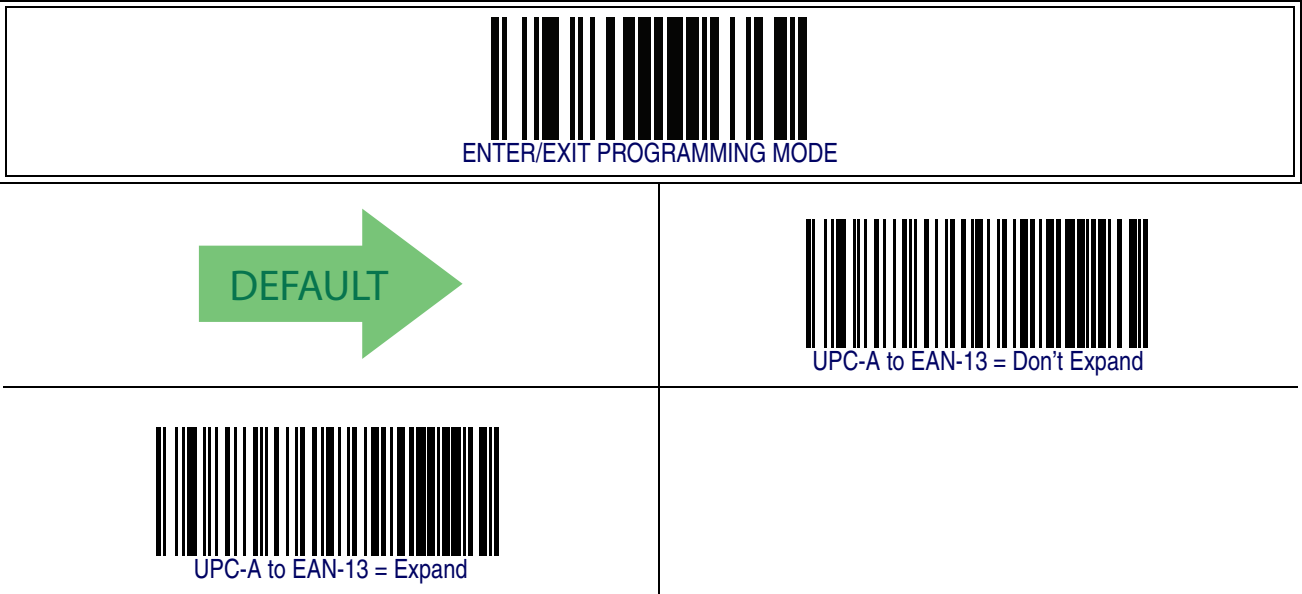
Enable this option to transmit the check character along with UPC-A barcode data.

 ENTER/EXIT PROGRAMMING MODE	
	 UPC-A Check Character Transmission = Don't Send
 UPC-A Check Character Transmission = Send	 DEFAULT

UPC-A — cont.

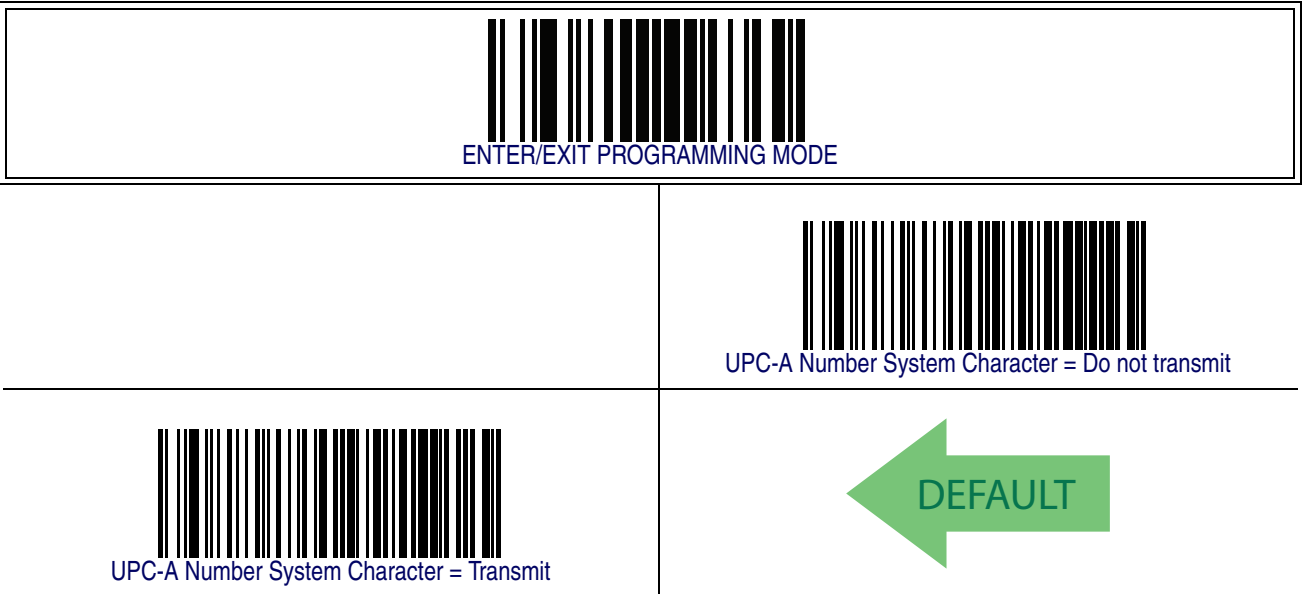
Expand UPC-A to EAN-13

Expands UPC-A data to the EAN-13 data format. Selecting this feature also changes the symbology ID to match those required for EAN-13.



UPC-A Number System Character Transmission

This feature enables/disables transmission of the UPC-A number system character.



UPC-A – cont.

In-Store Minimum Reads

This feature specifies the minimum number of consecutive times an in-store label must be decoded before it is accepted as good read.

In-store labels are defined as UPC-A labels with a number-system character of 2 or 4 as well as EAN 8 and EAN 13 labels with a Flag1 character of 2 or an EAN 13 label starting with the three characters '980'.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>In-Store Minimum Reads = 1</p></div>
<div><p>In-Store Minimum Reads = 2</p></div>	<div><p>DEFAULT</p></div>
	<div><p>In-Store Minimum Reads = 3</p></div>
<div><p>In-Store Minimum Reads = 4</p></div>	

UPC-E

The following options apply to the UPC-E symbology.

UPC-E Enable/Disable

When disabled, the reader will not read UPC-E barcodes.



ENTER/EXIT PROGRAMMING MODE



UPC-E = Disable



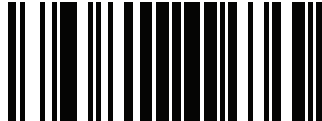
UPC-E = Enable



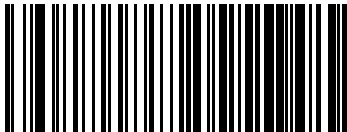
DEFAULT

UPC-E Check Character Transmission

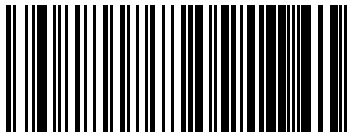
Enable this option to transmit the check character along with UPC-E barcode data.




ENTER/EXIT PROGRAMMING MODE



UPC-E Check Character Transmission = Don't Send



UPC-E Check Character Transmission = Send

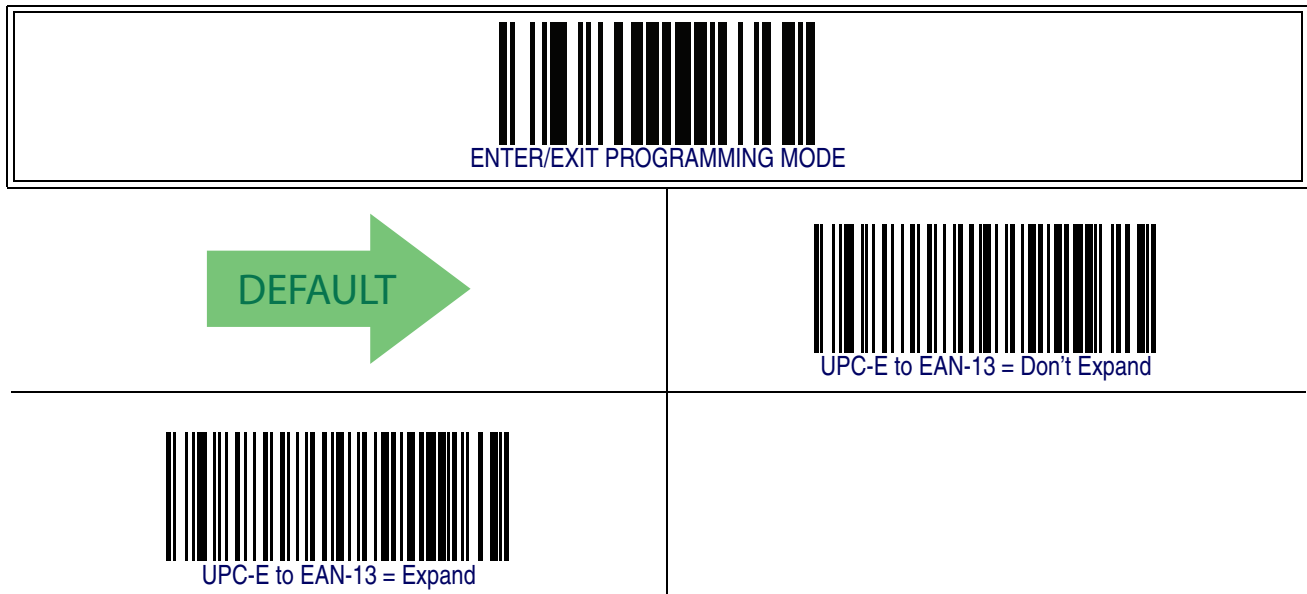


DEFAULT

## UPC-E — cont.

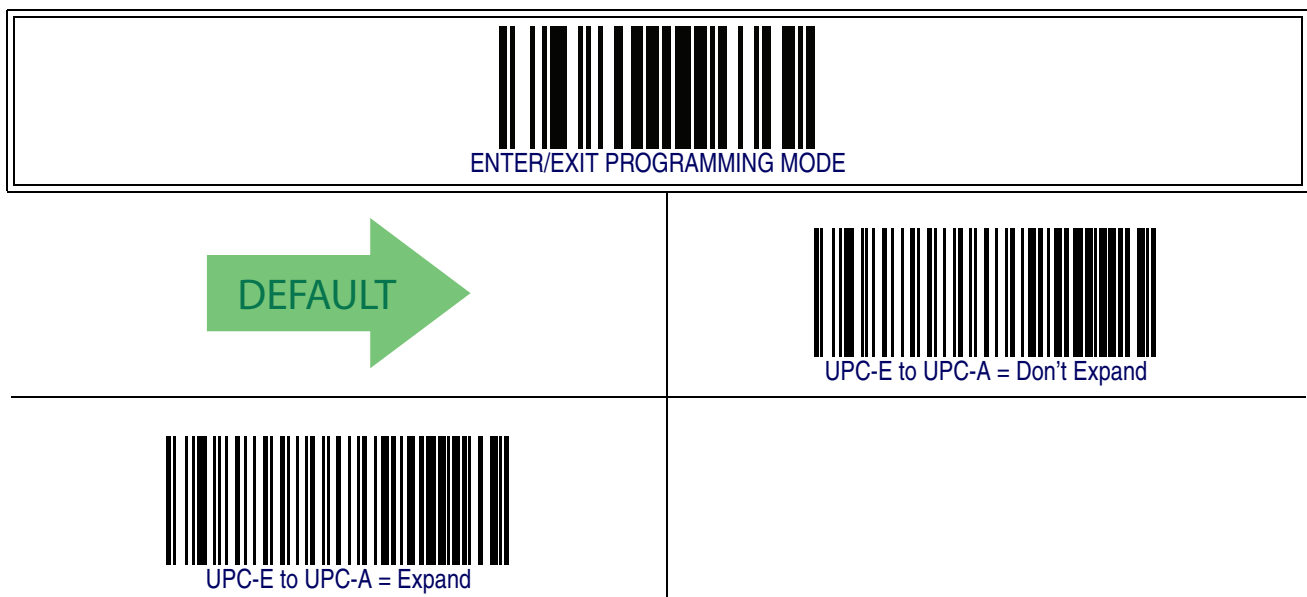
### Expand UPC-E to EAN-13

Expands UPC-E data to the EAN-13 data format. Selecting this feature also changes the symbology ID to match those required for EAN-13.



### Expand UPC-E to UPC-A

Expands UPC-E data to the UPC-A data format.

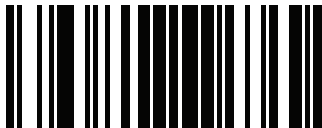
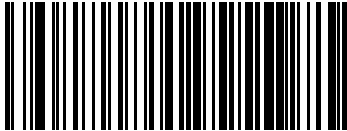
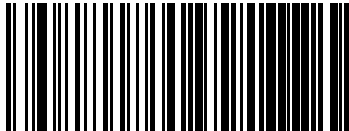





UPC-E — cont.

UPC-E Number System Character Transmission

This feature enables/disables transmission of the UPC-E system number character.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>UPC-E Number System Character = Do not transmit</p></div>
<div><p>UPC-E Number System Character = Transmit</p></div>	<div><p>DEFAULT</p></div>

UPC-E — cont.

UPC-E Minimum Reads

This feature specifies the minimum number of consecutive times a UPC-E label must be decoded before it is accepted as good read..

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>UPC-E Minimum Reads = 1</div></div>
<div><div></div><div>UPC-E Minimum Reads = 2</div></div>	<div></div>
	<div><div></div><div>UPC-E Minimum Reads = 3</div></div>
<div><div></div><div>UPC-E Minimum Reads = 4</div></div>	

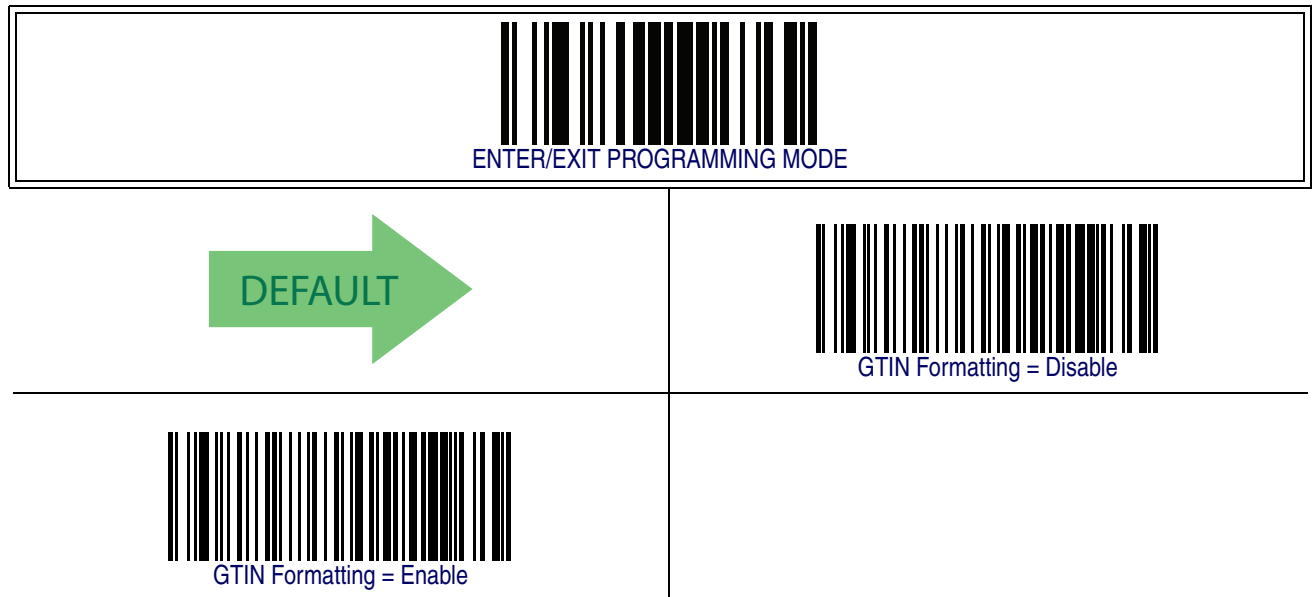
# GTIN Formatting

This feature enables/disables the ability to convert UPC-E, UPC-A, EAN 8, and EAN 13 labels into the GTIN 14-character format.



## NOTE

If add-on information is present on the base label prior to the conversion taking place, the add-on information will be appended to the converted GTIN label.



## EAN 13

The following options apply to the EAN 13 (Jan 13) symbology.

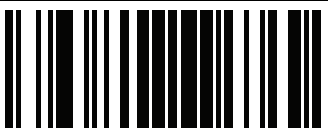

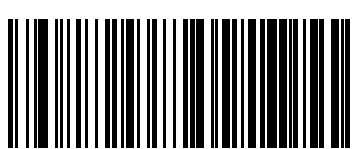

### EAN 13 Enable/Disable

When disabled, the reader will not read EAN 13/JAN 13 barcodes.

 ENTER/EXIT PROGRAMMING MODE	
	 EAN 13 = Disable
 EAN 13 = Enable	 DEFAULT

### EAN 13 Check Character Transmission

Enable this option to transmit the check character along with EAN 13 barcode data.

 ENTER/EXIT PROGRAMMING MODE	
	 EAN 13 Check Character Transmission = Don't Send
 EAN 13 Check Character Transmission = Send	 DEFAULT

EAN 13 — cont.


EAN-13 Flag 1 Character

Enables/disables transmission of an EAN/JAN13 Flag1 character. The Flag 1 character is the first character of the label.

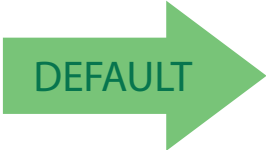
<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>EAN-13 Flag 1 Char= Don't transmit</p></div>
<div><p>EAN-13 Flag 1 Char= Transmit</p></div>	<div><p>DEFAULT</p></div>

### EAN-13 ISBN Conversion

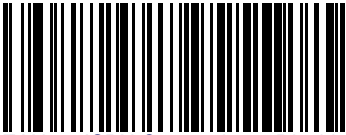
This option enables/disables conversion of EAN 13/JAN 13 Bookland labels starting with 978 to ISBN labels.



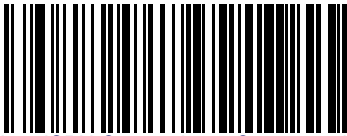
ENTER/EXIT PROGRAMMING MODE



DEFAULT



EAN-13 ISBN Conversion = Disable



EAN-13 ISBN Conversion = Convert to ISBN

### ISSN Enable/Disable

Enables/disables conversion of EAN/JAN13 Bookland labels starting with 977 to ISSN labels.



ENTER/EXIT PROGRAMMING MODE



DEFAULT



ISSN = Disable



ISSN = Enable

EAN 13 — cont.

EAN 13 Minimum Reads

This feature specifies the minimum number of consecutive times an EAN 13 label must be decoded before it is accepted as good read..

<div><div></div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div></div></div>	<div><div></div><div></div><div>EAN 13 Minimum Reads = 1</div></div>
<div><div></div><div></div><div>EAN 13 Minimum Reads = 2</div></div>	
	<div><div></div><div></div><div>EAN 13 Minimum Reads = 3</div></div>
<div><div></div><div></div><div>EAN 13 Minimum Reads = 4</div></div>	

# EAN 8

The following options apply to the EAN 8 (Jan 8) symbology.

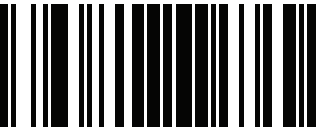
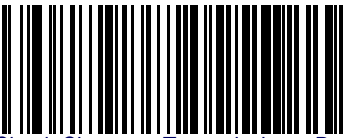


## EAN 8 Enable/Disable

When disabled, the reader will not read EAN 8/JAN 8 barcodes.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> EAN 8 = Disable</div>
<div> EAN 8 = Enable</div>	<div> DEFAULT</div>

## EAN 8 Check Character Transmission

Enable this option to transmit the check character along with EAN 8 barcode data.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> EAN 8 Check Character Transmission = Don't Send</div>
<div> EAN 8 Check Character Transmission = Send</div>	<div> DEFAULT</div>



EAN 8 — cont.

Expand EAN 8 to EAN 13

Enable this option to expand EAN 8/JAN 8 labels to EAN 13/JAN 13.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Expand EAN 8 to EAN 13 = Disable</div></div>
<div><div></div><div>Expand EAN 8 to EAN 13 = Enable</div></div>	

**EAN 8 – cont.**

**EAN 8 Minimum Reads**

This feature specifies the minimum number of consecutive times an EAN 8 (Jan 8) label must be decoded before it is accepted as good read..

<div>  <p>ENTER/EXIT PROGRAMMING MODE</p> </div>	
<div>  <p>DEFAULT</p> </div>	<div>  <p>EAN 8 Minimum Reads = 1</p> </div>
<div>  <p>EAN 8 Minimum Reads = 2</p> </div>	
	<div>  <p>EAN 8 Minimum Reads = 3</p> </div>
<div>  <p>EAN 8 Minimum Reads = 4</p> </div>	

## UPC/EAN Global Settings

This section provides configuration settings for UPC-A, UPC-E, EAN 13 and EAN 8 symbologies, and affects all of these unless otherwise marked for each feature description.

### UPC/EAN Decoding Level

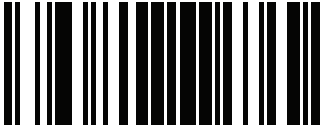
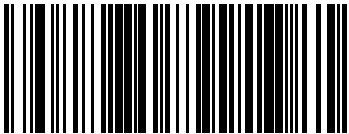
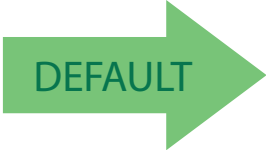
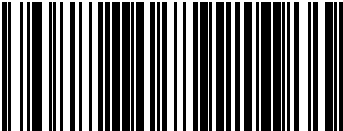
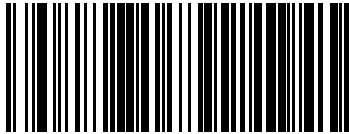
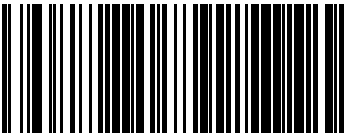
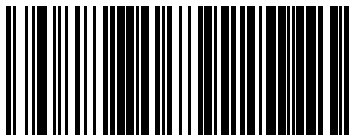
Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

UPC/EAN Global Settings – cont.

UPC/EAN Decoding Level – cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>UPC/EAN Decoding Level = 1</div></div>	
<div><div></div><div>DEFAULT</div></div>	<div><div></div><div>UPC/EAN Decoding Level = 2</div></div>
<div><div></div><div>UPC/EAN Decoding Level = 3</div></div>	
	<div><div></div><div>UPC/EAN Decoding Level = 4</div></div>
<div><div></div><div>UPC/EAN Decoding Level = 5</div></div>	

## UPC/EAN Global Settings — cont.

### UPC/EAN Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



### UPC/EAN Reconstruction

This option enables/disables character reconstruction for UPC/EAN labels.



# UPC/EAN Global Settings – cont.

## UPC/EAN Price Weight Check

This feature enables/disables calculation and verification of price/weight check digits.  
Options are

- Disabled
- Enable 4-digit price-weight check-digit calculation
- Enable 5-digit price-weight check-digit calculation
- Enable European 4-digit price-weight check-digit calculation
- Enable European 5-digit price-weight check-digit calculation

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Price Weight Check = Disabled</div></div>
<div><div></div><div>Price Weight Check = 4-digit price-weight check</div></div>	
	<div><div></div><div>Price Weight Check = 5-digit price-weight check</div></div>
<div><div></div><div>Price Weight Check = European 4-digit price-weight check</div></div>	
	<div><div></div><div>Price Weight Check = European 5-digit price-weight check</div></div>

## UPC/EAN Global Settings — cont.

### UPC-A Minimum Reads

This feature specifies the minimum number of consecutive times a UPC-A label must be decoded before it is accepted as good read..

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> UPC-A Minimum Reads = 1</div>
<div> UPC-A Minimum Reads = 2</div>	
	<div> UPC-A Minimum Reads = 3</div>
<div> UPC-A Minimum Reads = 4</div>	

# Add-Ons

The following features apply to optional add-ons.



NOTE

Contact Customer Support for advanced programming of optional and conditional add-ons.

## Optional Add-ons

The reader can be enabled to optionally read the following add-ons (supplementals):

- P2
- P5
- GS1-128



NOTE

If a UPC/EAN base label and a an add-on are both decoded, the reader will transmit the base label and add-on. If a UPC/EAN base label is decoded without an add-on, the base label will be transmitted without an add-on.

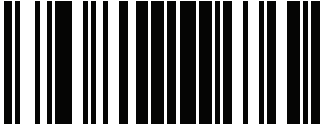
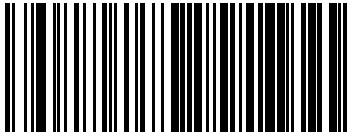
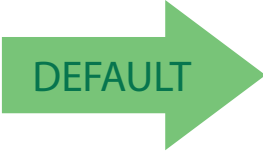
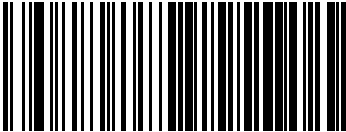
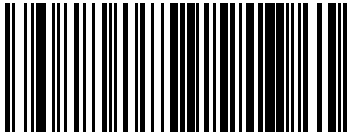
Conditional add-on settings (if enabled) are considered by the reader before optional add-on settings.





Add-Ons — cont.

Optional Add-ons — cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Optional Add-Ons = Enable P5</div></div>	
<div><div></div></div>	<div><div></div><div>Optional Add-Ons = Disable GS1-128</div></div>
<div><div></div><div>Optional Add-Ons = Enable GS1-128</div></div>	

Add-Ons — cont.

Optional Add-On Timer

This option sets the time the reader will look for an add-on when an add-on fragment has been seen and optional add-ons are enabled. (Also see [Optional GS1-128 Add-On Timer on page 151.](#))

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Optional Add-on Timer = 10ms</div></div>	
	<div><div></div><div>Optional Add-on Timer = 20ms</div></div>
<div><div></div><div>Optional Add-on Timer = 30ms</div></div>	
	<div><div></div><div>Optional Add-on Timer = 40ms</div></div>
<div><div></div><div>Optional Add-on Timer = 50ms</div></div>	

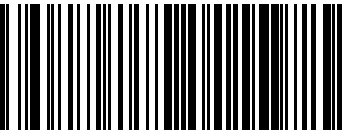
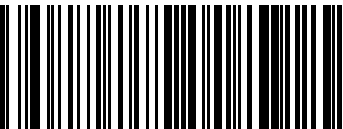
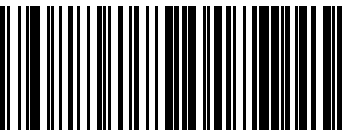
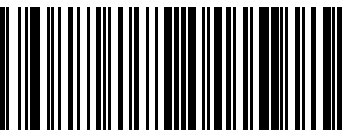
Add-Ons — cont.

Optional Add-On Timer — cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Optional Add-on Timer = 60ms</div></div>
<div><div></div><div>Optional Add-on Timer = 70ms</div></div>	<div></div>
	<div><div></div><div>Optional Add-on Timer = 100ms</div></div>
<div><div></div><div>Optional Add-on Timer = 120ms</div></div>	
	<div><div></div><div>Optional Add-on Timer = 140ms</div></div>
<div><div></div><div>Optional Add-on Timer = 160ms</div></div>	

Add-Ons — cont.

Optional Add-On Timer — cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Optional Add-on Timer = 180ms</div></div>
<div><div></div><div>Optional Add-on Timer = 200ms</div></div>	
	<div><div></div><div>Optional Add-on Timer = 220ms</div></div>
<div><div></div><div>Optional Add-on Timer = 240ms</div></div>	
	<div><div></div><div>Optional Add-on Timer = 260ms</div></div>
<div><div></div><div>Optional Add-on Timer = 280ms</div></div>	
	<div><div></div><div>Optional Add-on Timer = 300ms</div></div>

Add-Ons — cont.

Optional GS1-128 Add-On Timer

This option sets the timer expiration value to read the added part after reading the linear EAN/UPC part. For UPC/EAN add-ons other than those of that type, see [Optional Add-On Timer on page 148](#).

<div><div></div><div><div>ENTER/EXIT PROGRAMMING MODE</div></div></div>	
<div><div></div><div></div></div>	<div><div></div><div><div>Optional GS1-128 Add-On Timer = Disable</div></div></div>
<div><div></div><div><div>Optional GS1-128 Add-On Timer = 10ms</div></div></div>	
	<div><div></div><div><div>Optional GS1-128 Add-On Timer = 20ms</div></div></div>
<div><div></div><div><div>Optional GS1-128 Add-On Timer = 30ms</div></div></div>	
	<div><div></div><div><div>Optional GS1-128 Add-On Timer = 40ms</div></div></div>
<div><div></div><div><div>Optional GS1-128 Add-On Timer = 50ms</div></div></div>	

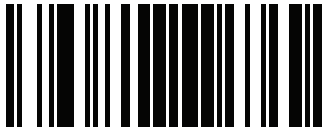
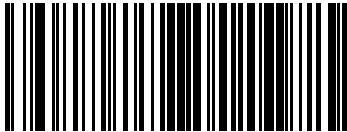
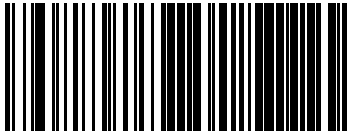
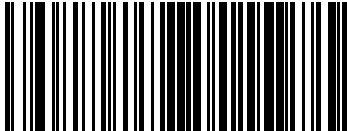
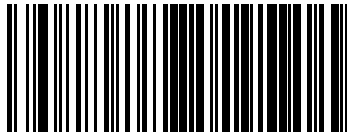
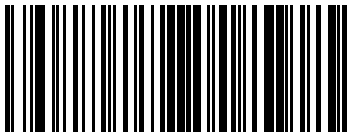
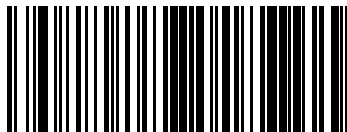
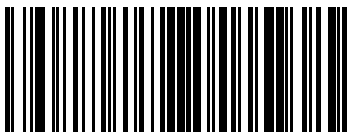
Add-Ons — cont.

Optional GS1-128 Add-On Timer — cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Optional GS1-128 Add-On Timer = 60ms</div></div>
<div><div></div><div>Optional GS1-128 Add-On Timer = 70ms</div></div>	
	<div><div></div><div>Optional GS1-128 Add-On Timer = 100ms</div></div>
<div><div></div><div>Optional GS1-128 Add-On Timer = 120ms</div></div>	
	<div><div></div><div>Optional GS1-128 Add-On Timer = 140ms</div></div>
<div><div></div><div>Optional GS1-128 Add-On Timer = 160ms</div></div>	

Add-Ons — cont.

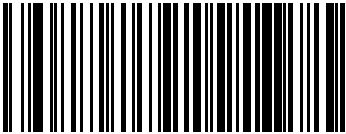
Optional GS1-128 Add-On Timer — cont.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Optional GS1-128 Add-On Timer = 180ms</p></div>
<div><p>Optional GS1-128 Add-On Timer = 200ms</p></div>	
	<div><p>Optional GS1-128 Add-On Timer = 220ms</p></div>
<div><p>Optional GS1-128 Add-On Timer = 240ms</p></div>	
	<div><p>Optional GS1-128 Add-On Timer = 260ms</p></div>
<div><p>Optional GS1-128 Add-On Timer = 280ms</p></div>	
	<div><p>Optional GS1-128 Add-On Timer = 300ms</p></div>

Add-Ons — cont.

P2 Add-Ons Minimum Reads

This feature specifies the minimum number of times a P2 add-on must be read before it is marked as valid and then combined with a base label.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>P2 Add-Ons Minimum Reads = 1</div></div>
<div><div></div><div>P2 Add-Ons Minimum Reads = 2</div></div>	<div></div>
	<div><div></div><div>P2 Add-Ons Minimum Reads = 3</div></div>
<div><div></div><div>P2 Add-Ons Minimum Reads = 4</div></div>	



Add-Ons — cont.

P5 Add-Ons Minimum Reads

This feature specifies the minimum number of times a P5 add-on must be read before it is marked as valid and then combined with a base label.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div></div>	<div><div></div><div>P5 Add-Ons Minimum Reads = 1</div></div>
<div><div></div><div>P5 Add-Ons Minimum Reads = 2</div></div>	
	<div><div></div><div>P5 Add-Ons Minimum Reads = 3</div></div>
<div><div></div><div>P5 Add-Ons Minimum Reads = 4</div></div>	

Add-Ons — cont.

GS1-128 Add-Ons Minimum Reads

This feature specifies the minimum number of times an GS1-128 add-on must be read before it is marked as valid and then combined with a base label.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div></div>	<div><div></div><div>GS1-128 Add-Ons Minimum Reads = 1</div></div>
<div><div></div><div>GS1-128 Add-Ons Minimum Reads = 2</div></div>	
	<div><div></div><div>GS1-128 Add-Ons Minimum Reads = 3</div></div>
<div><div></div><div>GS1-128 Add-Ons Minimum Reads = 4</div></div>	

## GS1 DataBar™ Omnidirectional

The following options apply to the GS1 DataBar Omnidirectional (formerly RSS-14) symbology.

### GS1 DataBar Omnidirectional Enable/Disable

When disabled, the reader will not read GS1 DataBar Omnidirectional barcodes.



### GS1 DataBar Omnidirectional GS1-128 Emulation

When enabled, GS1 DataBar Omnidirectional barcodes will be translated to the GS1-128 label data format.



# GS1 DataBar™ Omnidirectional – cont.

## GS1 DataBar Omnidirectional Minimum Reads

This feature specifies the minimum number of consecutive times a GS1 DataBar Omnidirectional label must be decoded before it is accepted as good read.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> GS1 DataBar Omnidirectional Minimum Reads = 1</div>
<div> GS1 DataBar Omnidirectional Minimum Reads = 2</div>	
	<div> GS1 DataBar Omnidirectional Minimum Reads = 3</div>
<div> GS1 DataBar Omnidirectional Minimum Reads = 4</div>	

# GS1 DataBar™ Expanded

The following options apply to the GS1 DataBar Expanded (formerly RSS Expanded) symbology.

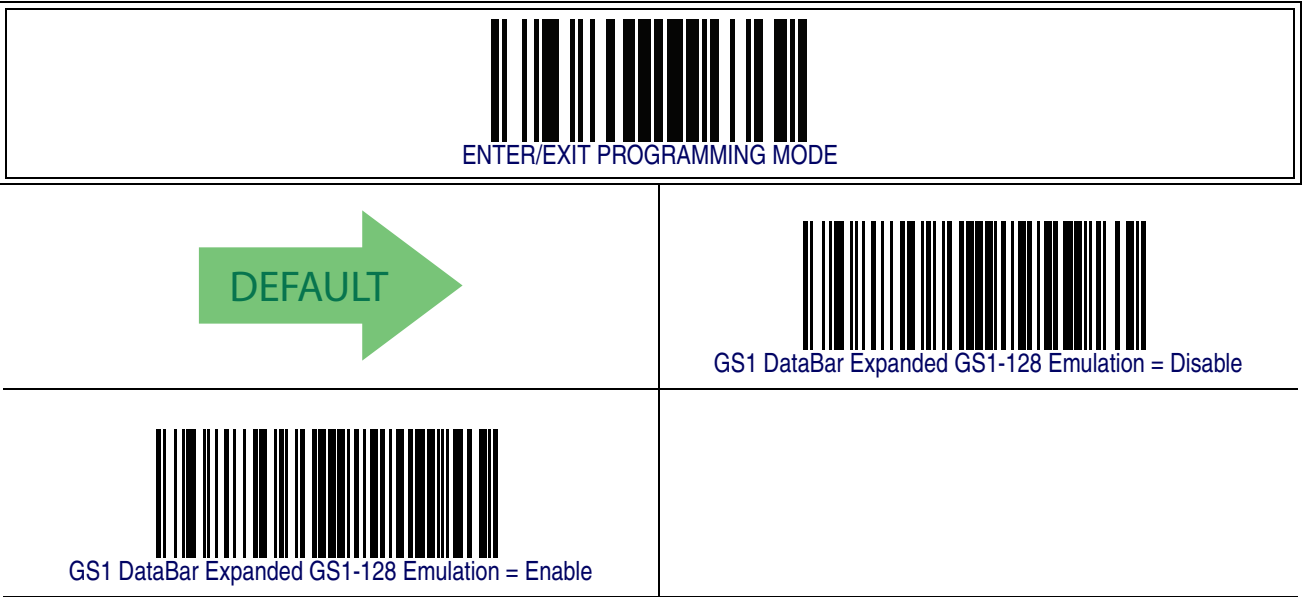
## GS1 DataBar Expanded Enable/Disable

When disabled, the reader will not read GS1 DataBar Expanded barcodes.



## GS1 DataBar Expanded GS1-128 Emulation

When enabled, GS1 DataBar Expanded barcodes will be translated to the GS1-128 label data format.



# GS1 DataBar™ Expanded — cont.

## GS1 DataBar Expanded Minimum Reads

This feature specifies the minimum number of consecutive times a GS1 DataBar Expanded label must be decoded before it is accepted as good read.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div></div>	<div> GS1 DataBar Expanded Minimum Reads = 1</div>
<div> GS1 DataBar Expanded Minimum Reads = 2</div>	
	<div> GS1 DataBar Expanded Minimum Reads = 3</div>
<div> GS1 DataBar Expanded Minimum Reads = 4</div>	

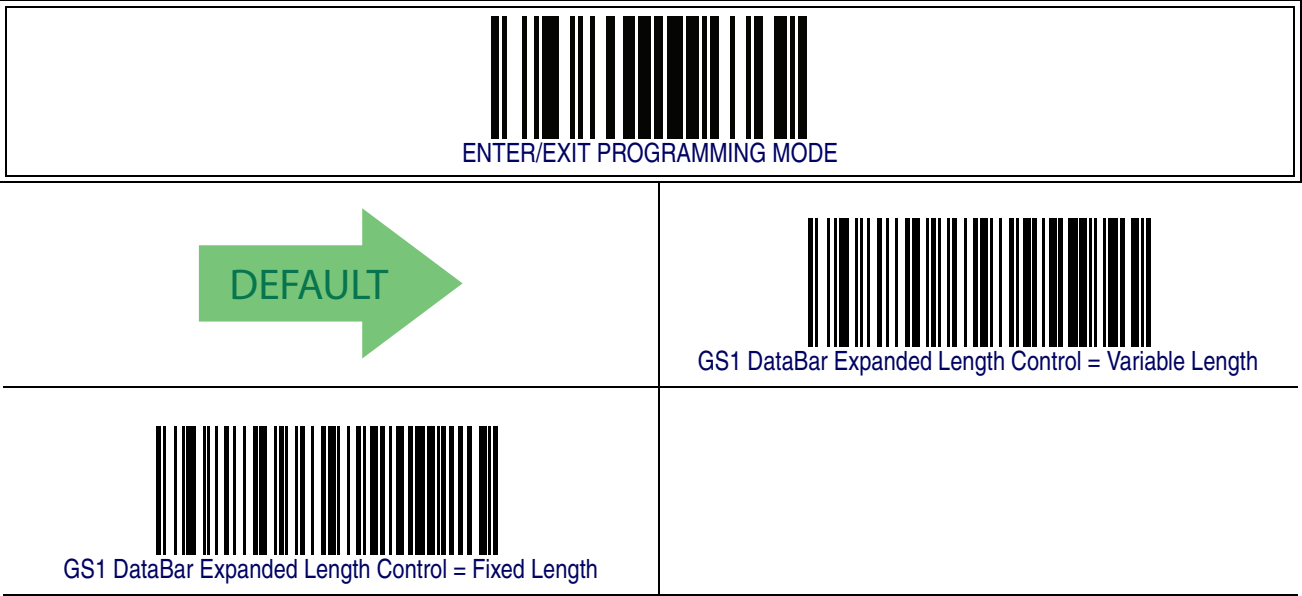
# GS1 DataBar™ Expanded — cont.

## GS1 DataBar Expanded Length Control

This feature specifies either variable length decoding or fixed length decoding for the GS1 DataBar Expanded symbology.

**Variable Length** — For variable-length decoding, a minimum length may be set.

**Fixed Length** — For fixed-length decoding, two different lengths may be set.



# GS1 DataBar™ Expanded – cont.

## GS1 DataBar Expanded Set Length 1

This feature specifies one of the barcode lengths for [GS1 DataBar Expanded Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode’s data characters only.  
The length can be set from 1 to 74 characters.

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 1 to 74). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT GS1 DATABAR EXPANDED LENGTH 1 SETTING.
- 4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See [Table 19](#) for some examples of how to set this feature.

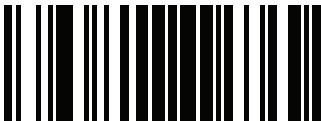
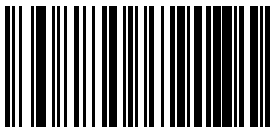

**Table 19. GS1 DataBar Expanded Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	01 Character	07 Characters	52 Characters	74 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT GS1 DATABAR EXPANDED LENGTH 1 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '1'	'0' and '7'	'5' and '2'	'7' AND '4'
5	Scan ENTER/EXIT PROGRAMMING MODE				



# GS1 DataBar™ Expanded — cont.

## GS1 DataBar Expanded Set Length 1 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select GS1 DataBar Expanded Set Length 1 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

DEFAULT

01 = Length 1 is 1 Character

# GS1 DataBar™ Expanded – cont.

## GS1 DataBar Expanded Set Length 2

This feature specifies one of the barcode lengths for [GS1 DataBar Expanded Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode’s data characters only.

The length can be set from 1 to 74 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 1 to 74). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT GS1 DATABAR EXPANDED LENGTH 2 SETTING.
- 4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

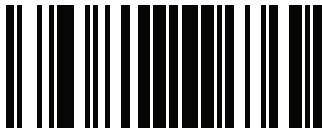
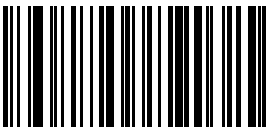
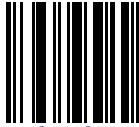
This completes the procedure. See [Table 20](#) for some examples of how to set this feature.

**Table 20. GS1 DataBar Expanded Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (ignore second length)	07 Characters	52 Characters	74 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT GS1 DATABAR EXPANDED LENGTH 2 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '7'	'5' and '2'	'7' and '4'
5	Scan ENTER/EXIT PROGRAMMING MODE				

GS1 DataBar™ Expanded — cont.

GS1 DataBar Expanded Set Length 2 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select GS1 DataBar Expanded Set Length 2 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

DEFAULT

74 = Length 2 is 74 Characters

# GS1 DataBar™ Limited

The following options apply to the GS1 DataBar Limited (formerly RSS Limited) symbology.

## GS1 DataBar Limited Enable/Disable

When disabled, the reader will not read GS1 DataBar Limited barcodes.

  
ENTER/EXIT PROGRAMMING MODE

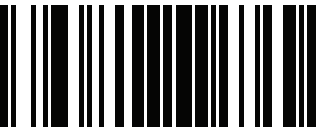
  
DEFAULT

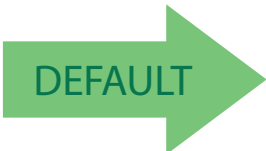
  
GS1 DataBar Limited = Disable

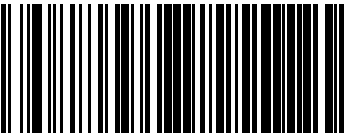
  
GS1 DataBar Limited = Enable

## GS1 DataBar Limited GS1-128 Emulation

When enabled, GS1 DataBar Limited barcodes will be translated to the GS1-128 label data format.

  
ENTER/EXIT PROGRAMMING MODE

  
DEFAULT

  
GS1 DataBar Limited GS1-128 Emulation = Disable

  
GS1 DataBar Limited GS1-128 Emulation = Enable

# GS1 DataBar™ Limited – cont.

## GS1 DataBar Limited Minimum Reads

This feature specifies the minimum number of consecutive times a GS1 DataBar Limited label must be decoded before it is accepted as good read.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div></div>	<div> GS1 DataBar Limited Minimum Reads = 1</div>
<div> GS1 DataBar Limited Minimum Reads = 2</div>	
	<div> GS1 DataBar Limited Minimum Reads = 3</div>
<div> GS1 DataBar Limited Minimum Reads = 4</div>	

Code 39

The following options apply to the Code 39 symbology.

Code 39 Enable/Disable

When disabled, the reader will not read Code 39 barcodes.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Code 39 = Disable</div>
<div> Code 39 = Enable</div>	<div> DEFAULT</div>

## Code 39 — cont.

### Code 39 Check Character Calculation

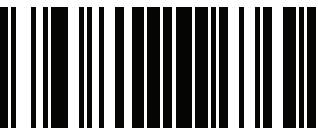
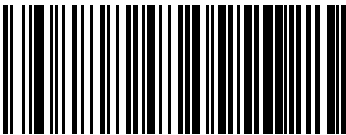
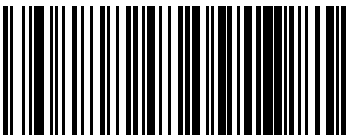

Enable this option to enable/disable calculation and verification of an optional Code 39 check character. When disabled, any check character in the label is treated as a data character.

 ENTER/EXIT PROGRAMMING MODE	
 DEFAULT	 Code 39 Check Character Calculation = Don't Calculate
 Code 39 Check Character Calculation = Calculate Std Check	
	 Code 39 Check Character Calculation = Calculate Mod 7 Check
 Code 39 Check Character Calculation = Enable Italian Post Check	
	 Code 39 Check Character Calculation = Enable Daimler Chrysler Check

Code 39 – cont.

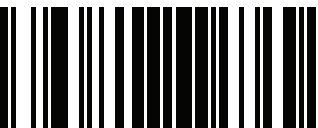
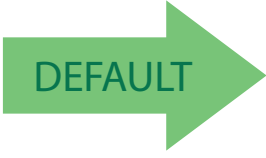
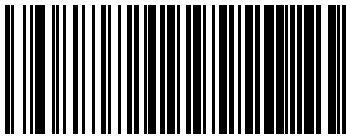
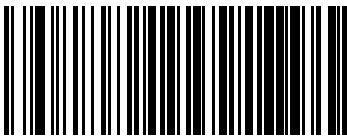
Code 39 Check Character Transmission

Enable this option to transmit the check character along with Code 39 barcode data.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Code 39 Check Character Transmission = Don't Send</div>
<div> Code 39 Check Character Transmission = Send</div>	<div> DEFAULT</div>

Code 39 Start/Stop Character Transmission

Enable this option to enable/disable transmission of Code 39 start and stop characters.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> Code 39 Start/Stop Character Transmission = Don't Transmit</div>
<div> Code 39 Start/Stop Character Transmission = Transmit</div>	



Code 39 — cont.

Code 39 Full ASCII

In Code 39 decoding, this enables/disables the translation of Code 39 characters to Code 39 full-ASCII characters.



Code 39 – cont.

Code 39 Quiet Zones

This feature specifies the number of quiet zones for Code 39 labels. Quiet zones are blank areas at the ends of a barcode and are typically 10 times the width of the narrowest bar or space in the label.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Code 39 Quiet Zones = Quiet Zone on one side</div></div>	
	<div><div></div><div>Code 39 Quiet Zones = Quiet Zones on two sides</div></div>
<div><div></div><div>Code 39 Quiet Zones = Auto</div></div>	<div></div>
	<div><div></div><div>Code 39 Quiet Zones = Virtual Quiet Zones on two sides</div></div>
<div><div></div><div>Code 39 Quiet Zones = Small Quiet Zones on two sides</div></div>	

Code 39 — cont.

Code 39 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 39 label must be decoded before it is accepted as good read..

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Code 39 Minimum Reads = 1</div></div>
<div><div></div><div>Code 39 Minimum Reads = 2</div></div>	
	<div><div></div><div>Code 39 Minimum Reads = 3</div></div>
<div><div></div><div>Code 39 Minimum Reads = 4</div></div>	

## Code 39 – cont.

### Code 39 Decoding Level

Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.




This configuration item applies to Code 39 and Code 32.

#### NOTE

Code 39 — cont.

Code 39 Decoding Level — cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Code 39 Decoding Level = 1</div></div>	
	<div><div></div><div>Code 39 Decoding Level = 2</div></div>
<div><div></div><div>Code 39 Decoding Level = 3</div></div>	<div></div>
	<div><div></div><div>Code 39 Decoding Level = 4</div></div>
<div><div></div><div>Code 39 Decoding Level = 5</div></div>	

Code 39 – cont.

Code 39 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 39 symbology.

**Variable Length** – For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** – For fixed length decoding, two different lengths may be set.



## Code 39 — cont.

### Code 39 Set Length 1

This feature specifies one of the barcode lengths for [Code 39 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode's data characters only.

The length can be set from 0 to 50 characters.

Follow these instructions to set this feature:

1. Determine the desired character length (from 0 to 50). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 39 LENGTH 1 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

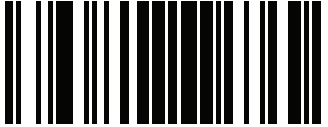


This completes the procedure. See [Table 21](#) for some examples of how to set this feature.


**Table 21. Code 39 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 Characters	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 39 LENGTH 1 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

## Code 39 – cont.

### Code 39 Set Length 1 – cont.

 ENTER/EXIT PROGRAMMING MODE	
 Select Code 39 Set Length 1 Setting	
Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

 02 = Length 1 is 2 Characters



## Code 39 — cont.

### Code 39 Set Length 2

This feature specifies one of the barcode lengths for [Code 39 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 1 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 39 LENGTH 2 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake, before the last character scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

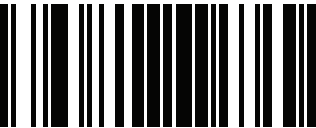
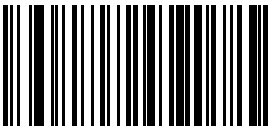

This completes the procedure. See [Table 22](#) for some examples of how to set this feature.

**Table 22. Code 39 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 39 LENGTH 2 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Code 39 – cont.

Code 39 Set Length 2 – cont.

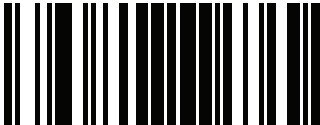
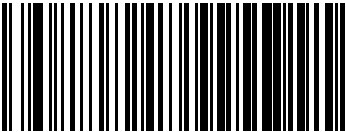
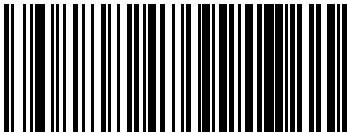
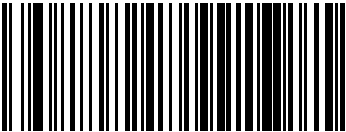
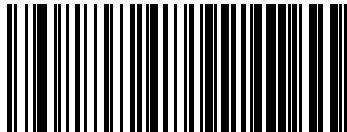
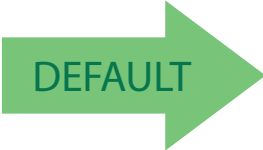
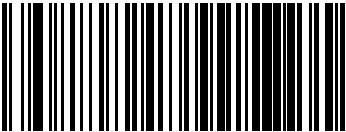

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Code 39Length 2 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

 50 = Length 2 is 50 Characters

Code 39 — cont.

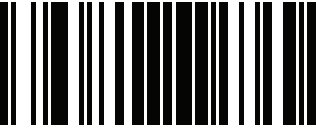

Code 39 Interdigit Ratio

This feature specifies the ratio between an intercharacter space and module for Code 39 labels.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Code 39 Interdigit Ratio = Disable</div></div>
<div><div></div><div>Code 39 Interdigit Ratio = 1</div></div>	
	<div><div></div><div>Code 39 Interdigit Ratio = 2</div></div>
<div><div></div><div>Code 39 Interdigit Ratio = 3</div></div>	
<div><div></div></div>	<div><div></div><div>Code 39 Interdigit Ratio = 4</div></div>
<div><div></div><div>Code 39 Interdigit Ratio = 5</div></div>	

Code 39 – cont.

Code 39 Interdigit Ratio – cont.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Code 39 Interdigit Ratio = 6</p></div>
<div><p>Code 39 Interdigit Ratio = 7</p></div>	
	<div><p>Code 39 Interdigit Ratio = 8</p></div>
<div><p>Code 39 Interdigit Ratio = 9</p></div>	
	<div><p>Code 39 Interdigit Ratio = 10</p></div>

Code 39 — cont.

Code 39 Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



# Code 39 Stitching

This option enables/disables stitching for Code 39 labels. When parts of a Code 39 barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader’s software, and the data will be decoded if all barcode proofing requirements are met.

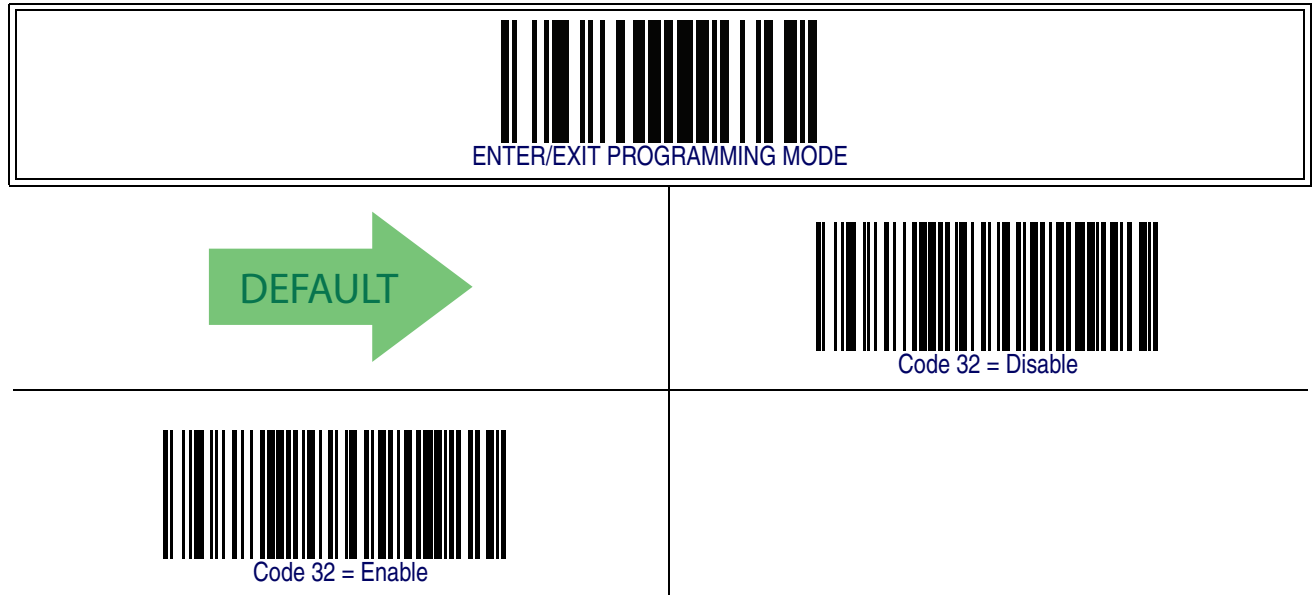
<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Code 39 Stitching = Disable</p></div>
<div><p>Code 39 Stitching = Enable</p></div>	<div><p>DEFAULT</p></div>

## Code 32 (Italian Pharmaceutical)

The following options apply to the Code 32 (Italian Pharmaceutical Code) symbology.

### Code 32 Enable/Disable

When disabled, the reader will not read Code 32 barcodes.



### Code 32 Feature Setting Exceptions



#### NOTE

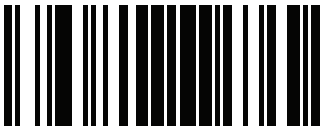
The following features are set for Code 32 by using these Code 39 settings:

- Code 39 Quiet Zones on page 172
- Code 39 Minimum Reads on page 173
- Code 39 Decoding Level on page 174
- Code 39 Interdigit Ratio on page 181
- Code 39 Character Correlation on page 183
- Code 39 Stitching on page 184

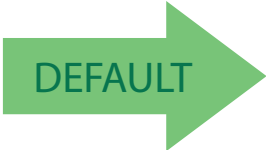
# Code 32 (Italian Pharmaceutical) – cont.

## Code 32 Check Character Transmission

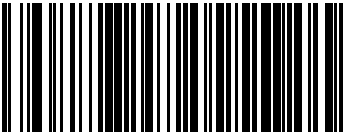
Enable this option to transmit the check character along with Code 32 barcode data.



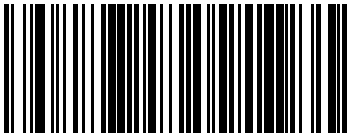
ENTER/EXIT PROGRAMMING MODE



DEFAULT



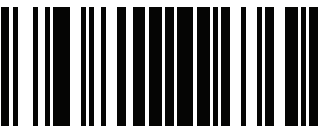
Code 32 Check Character Transmission = Don't Send



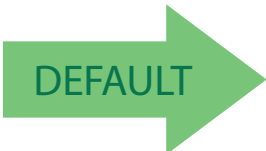
Code 32 Check Character Transmission = Send

## Code 32 Start/Stop Character Transmission

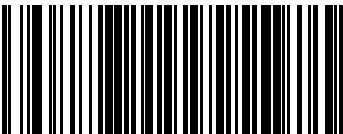
This option enables/disable transmission of Code 32 start and stop characters.



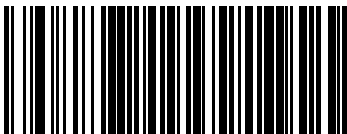
ENTER/EXIT PROGRAMMING MODE



DEFAULT



Code 32 Start/Stop Character Transmission = Don't Transmit



Code 32 Start/Stop Character Transmission = Transmit



# Code 39 CIP (French Pharmaceutical)

The following options apply to the Code 39 CIP symbology.

## Code 39 CIP Enable/Disable

Enables/Disables ability of the reader to decode Code 39 CIP labels.



# Code 128

The following options apply to the Code 128 symbology.

## Code 128 Enable/Disable

When disabled, the reader will not read Code 128 barcodes.



# Code 128 – cont.

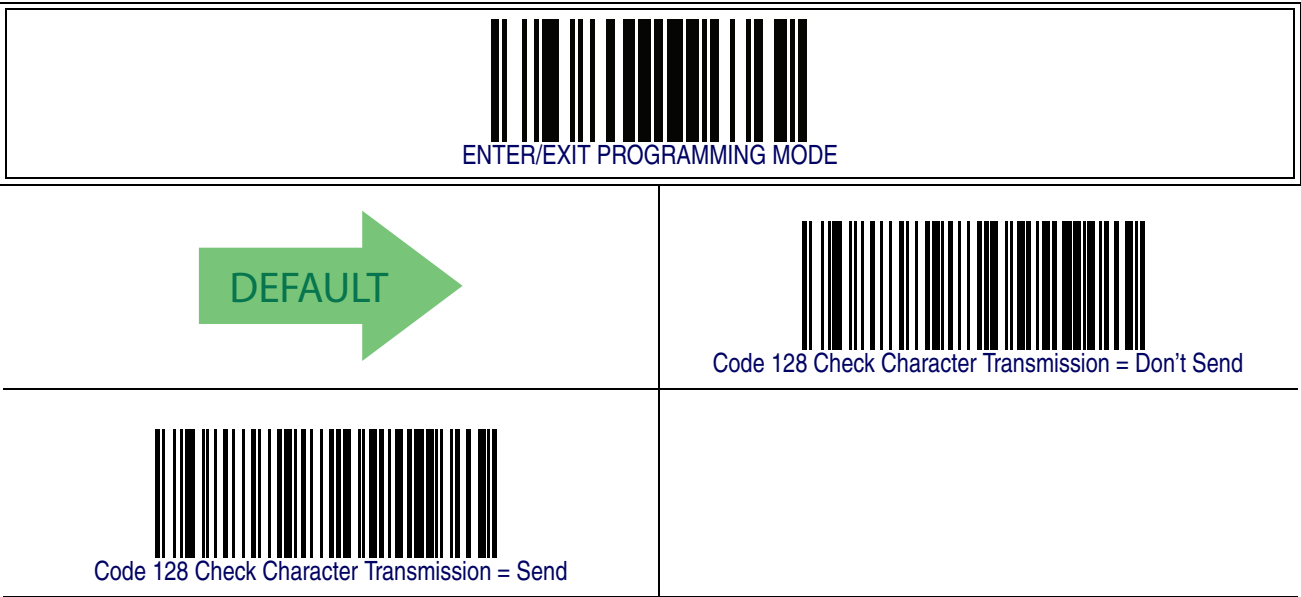
## Expand Code 128 to Code 39

This feature enables/disables expansion of Code 128 labels to Code 39 labels.



## Code 128 Check Character Transmission

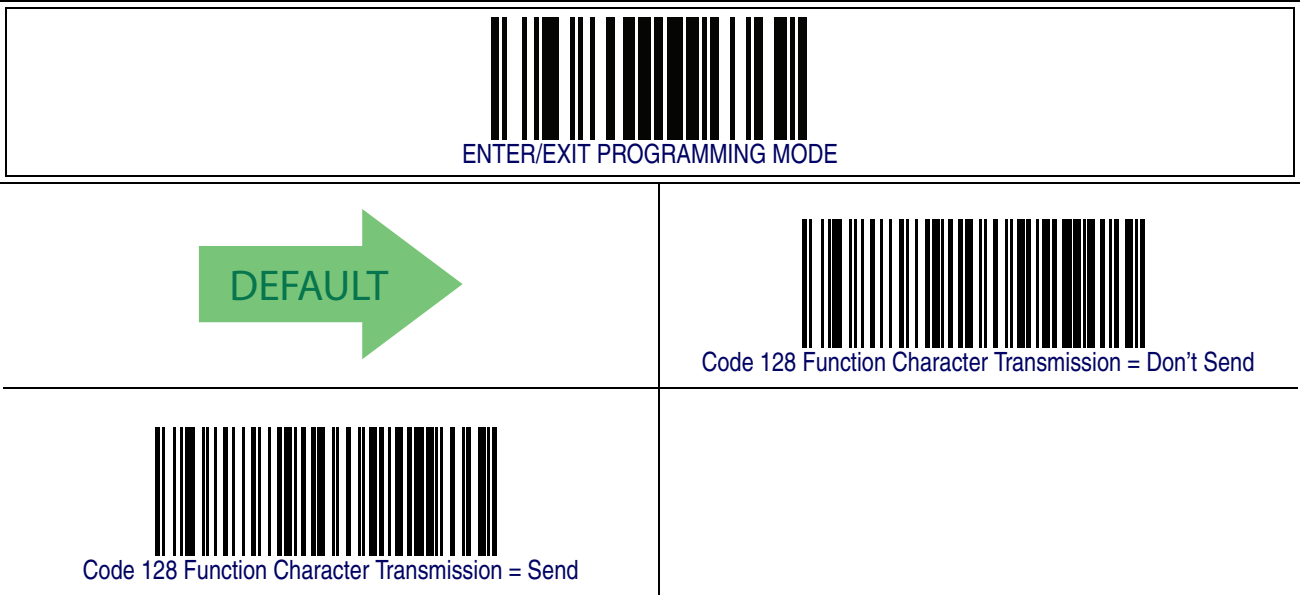
Enable this option to transmit the check character along with Code 128 barcode data.



Code 128 — cont.

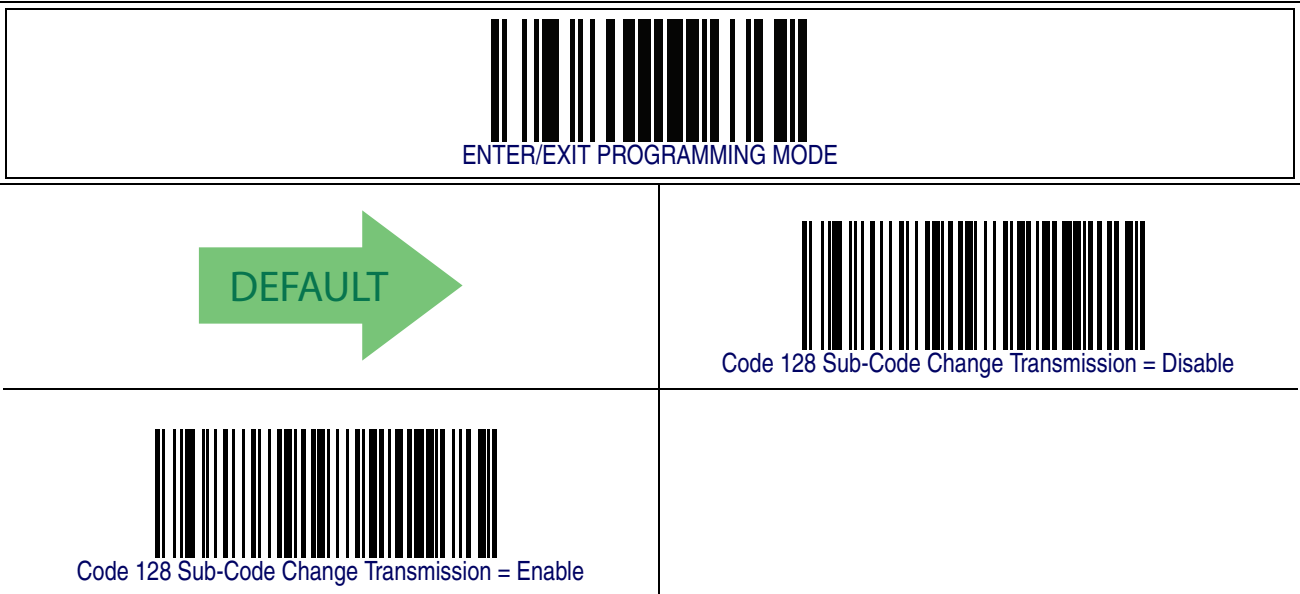
Code 128 Function Character Transmission

Enables/disables transmission of Code128 function characters 1, 2, 3, and 4.



Code 128 Sub-Code Change Transmission

Enables/disables the transmission of “Sub-Code exchange” characters (NOT transmitted by standard decoding).



Code 128 – cont.

Code 128 Quiet Zones

This feature specifies the number of quiet zones for Code 128 labels. Quiet zones are blank areas at the ends of a barcode and are typically 10 times the width of the narrowest bar or space in the label.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Code 128 Quiet Zones = No Quiet Zones</p></div>
<div><p>Code 128 Quiet Zones = Quiet Zone on one side</p></div>	
	<div><p>Code 128 Quiet Zones = Quiet Zones on two sides</p></div>
<div><p>Code 128 Quiet Zones = Auto</p></div>	<div></div>
	<div><p>Code 128 Quiet Zones = Virtual Quiet Zones on two sides</p></div>

Code 128 — cont.

Code 128 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 128 label must be decoded before it is accepted as good read..

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Code 128 Minimum Reads = 1</div></div>
<div><div></div><div>Code 128 Minimum Reads = 2</div></div>	
	<div><div></div><div>Code 128 Minimum Reads = 3</div></div>
<div><div></div><div>Code 128 Minimum Reads = 4</div></div>	

## Code 128 — cont.

### Code 128 Decoding Level

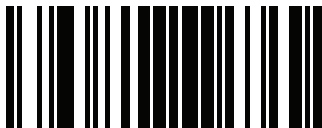
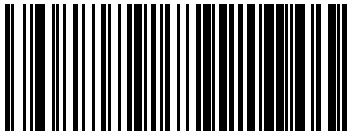
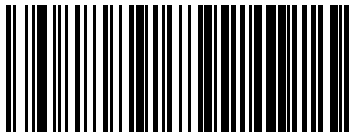
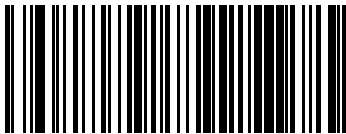
Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

Code 128 — cont.

Code 128 Decoding Level — cont.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
<div><p>Code 128 Decoding Level = 1</p></div>	
	<div><p>Code 128 Decoding Level = 2</p></div>
<div><p>Code 128 Decoding Level = 3</p></div>	<div></div>
	<div><p>Code 128 Decoding Level = 4</p></div>
<div><p>Code 128 Decoding Level = 5</p></div>	

Code 128 – cont.

Code 128 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 128 symbology.

**Variable Length** – For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** – For fixed length decoding, two different lengths may be set.





## Code 128 — cont.

### Code 128 Set Length 1

This feature specifies one of the barcode lengths for [Code 128 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode's data characters only.

The length can be set from 1 to 80 characters.

Follow these instructions to set this feature:

1. Determine the desired character length (from 1 to 80). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 128 LENGTH 1 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

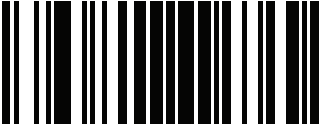
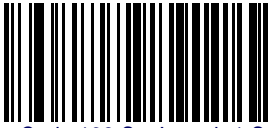

This completes the procedure. See [Table 23](#) for some examples of how to set this feature.

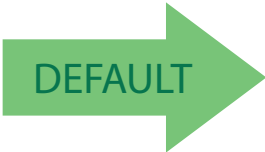
**Table 23. Code 128 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	01 Character	07 Characters	15 Characters	80 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 128 LENGTH 1 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '1'	'0' and '7'	'1' and '5'	'8' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Code 128 – cont.

Code 128 Set Length 1 – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Code 128 Set Length 1 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

 01 = Length 1 is 1 Character

## Code 128 — cont.

### Code 128 Set Length 2

This feature specifies one of the barcode lengths for [Code 128 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode's data characters only.

The length can be set from 1 to 80 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 1 to 80 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 128 LENGTH 2 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

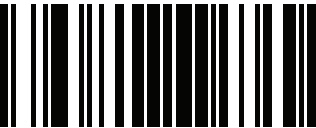
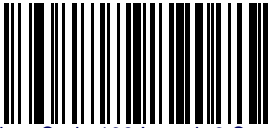

This completes the procedure. See [Table 24](#) for some examples of how to set this feature.

**Table 24. Code 128 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (Ignore This Length)	07 Characters	15 Characters	80 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 128 LENGTH 2 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '7'	'0' and 'F'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Code 128 – cont.

Code 128 Set Length 2 – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Code 128 Length 2 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 80 = Length 2 is 80 Characters

Code 128 — cont.

Code 128 Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



Code 128 – cont.

Code 128 Stitching

This option enables/disables stitching for Code 128 labels. When parts of a Code 128 barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader’s software, and the data will be decoded if all barcode proofing requirements are met.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Code 128 Stitching = Disable</div>
<div> Code 128 Stitching = Enable</div>	<div> DEFAULT</div>

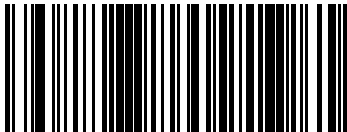
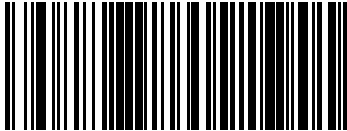
# GS1-128

The following options apply to the GS1-128 symbology. (Also known as USS-128, GTIN-128, UCC-128, EAN 128.)

## GS1-128 Enable

This option enables/disables the ability of the reader to translate GS1-128 labels to the GS1-128 data format. Options are:

- Transmit GS1-128 labels in Code 128 data format.
- Transmit GS1-128 labels in GS1-128 data format.
- Do not transmit GS1-128 labels.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>GS1-128 = Transmit in Code 128 data format</p></div>
<div><p>GS1-128 = Transmit in GS1-128 data format</p></div>	<div><p>DEFAULT</p></div>
	<div><p>GS1-128 = Do not transmit GS1-128 labels</p></div>

# Interleaved 2 of 5 (I 2 of 5)

The following options apply to the I 2 of 5 symbology.

## I 2 of 5 Enable/Disable

When disabled, the reader will not read I 2 of 5 barcodes.

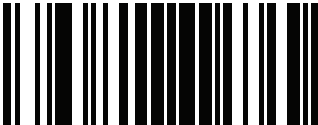
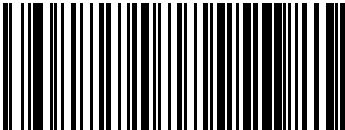
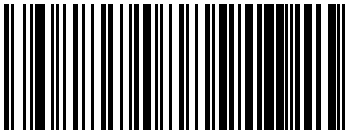
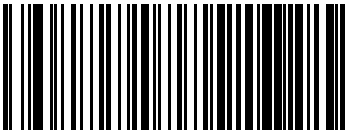
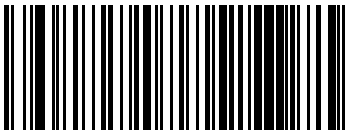

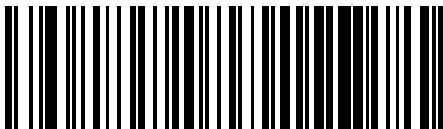
<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> DEFAULT</div>	<div> I 2 of 5 = Disable</div>
<div> I 2 of 5 = Enable</div>	



# Interleaved 2 of 5 (I 2 of 5) – cont.

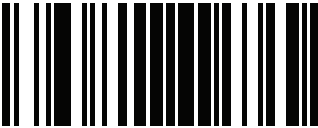
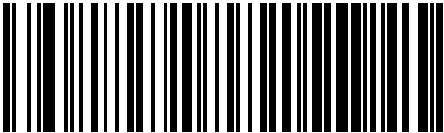
## I 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional I 2 of 5 check character.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>I 2 of 5 Check Character Calculation = Disable</div></div>
<div><div></div><div>I 2 of 5 Check Character Calculation = Check Standard (Modulo 10)</div></div>	
	<div><div></div><div>I 2 of 5 Check Character Calculation = Check German Parcel</div></div>
<div><div></div><div>I 2 of 5 Check Character Calculation = Check DHL</div></div>	
	<div><div></div><div>I 2 of 5 Check Character Calculation = Check Daimler Chrysler</div></div>
<div><div></div><div>I 2 of 5 Check Character Calculation = Check Bosch</div></div>	

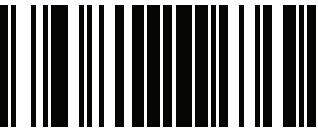
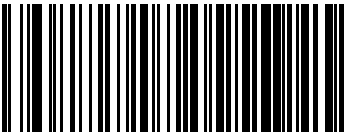


Interleaved 2 of 5 (I 2 of 5) – cont.

I 2 of 5 Check Character Calculation – cont.

 ENTER/EXIT PROGRAMMING MODE	
	 I 2 of 5 Check Character Calculation = Check Italian Post

I 2 of 5 Check Character Transmission

Enable this option to transmit the check character along with I 2 of 5 barcode data.

 ENTER/EXIT PROGRAMMING MODE	
	 I 2 of 5 Check Character Transmission = Don't Send
 I 2 of 5 Check Character Transmission = Send	

## Interleaved 2 of 5 (I 2 of 5) – cont.

### I 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times an I 2 of 5 label must be decoded before it is accepted as good read..

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>I 2 of 5 Minimum Reads = 1</div></div>
<div><div></div><div>I 2 of 5 Minimum Reads = 2</div></div>	
	<div><div></div><div>I 2 of 5 Minimum Reads = 3</div></div>
<div><div></div><div>I 2 of 5 Minimum Reads = 4</div></div>	

## Interleaved 2 of 5 (I 2 of 5) – cont.

### 2 of 5 Decoding Level



This configuration item applies to Interleaved 2 of 5, Datalogic 2 of 5 and Standard 2 of 5.

#### NOTE

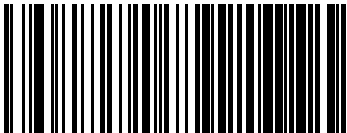


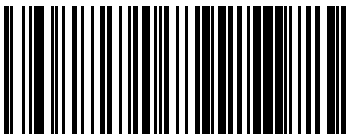
Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

## Interleaved 2 of 5 (I 2 of 5) – cont.

### 2 of 5 Decoding Level – cont.

 <p>ENTER/EXIT PROGRAMMING MODE</p>	
 <p>2 of 5 Decoding Level = 1</p>	
	 <p>2 of 5 Decoding Level = 2</p>
 <p>2 of 5 Decoding Level = 3</p>	
	 <p>2 of 5 Decoding Level = 4</p>
 <p>2 of 5 Decoding Level = 5</p>	

# Interleaved 2 of 5 (I 2 of 5) – cont.

## I 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the I 2 of 5 symbology.

**Variable Length** – For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** – For fixed length decoding, two different lengths may be set.



## Interleaved 2 of 5 (I 2 of 5) – cont.

### I 2 of 5 Set Length 1

This feature specifies one of the barcode lengths for [I 2 of 5 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. The length includes the barcode's check and data characters. The length can be set from 2 to 50 characters in increments of two.

Follow these instructions to set this feature:

1. Determine the desired character length (from 2 to 50). The length must be an even number.
2. Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT I 2 of 5 LENGTH 1 SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

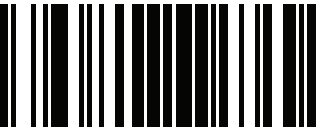
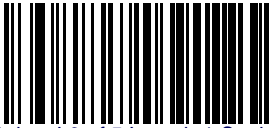

This completes the procedure. See [Table 27](#) for some examples of how to set this feature.

**Table 25. I 2 of 5 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
		2 Characters	6 Characters	14 Characters	50 Characters
1	Desired Setting				
2	Pad with leading zeroes to yield two digits	02	06	14	50
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT I 2 of 5 LENGTH 1 SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '2'	'0' and '6'	'1' and '4'	'5' AND '0'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Interleaved 2 of 5 (I 2 of 5) – cont.

Datalogic 2 of 5 Set Length 1 – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select I 2 of 5 Length 1 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 06 = Length 1 is 6 Characters



## Interleaved 2 of 5 (I 2 of 5) – cont.

### I 2 of 5 Set Length 2

This feature specifies one of the barcode lengths for [I 2 of 5 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. The length includes the barcode's check and data characters. The length can be set from 2 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 2 to 50, or 0 to ignore this length). The length must be an even number.
2. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT I 2 of 5 LENGTH 2 SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

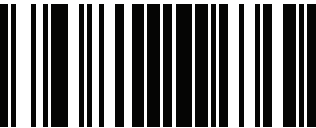
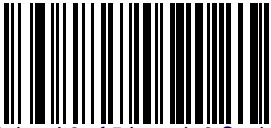

This completes the procedure. See [Table 28](#) for some examples of how to set this feature.

**Table 26. I 2 of 5 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	Ignore This Length	4 Characters	14 Characters	50 Characters
2	Pad with leading zeroes to yield two digits	00	04	14	50
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT I 2 OF 5 LENGTH 2 SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '4'	'1' and '4'	'5' AND '0'
6	Scan ENTER/EXIT PROGRAMMING MODE				

Interleaved 2 of 5 (I 2 of 5) – cont.

I 2 of 5 Set Length 2 – cont.

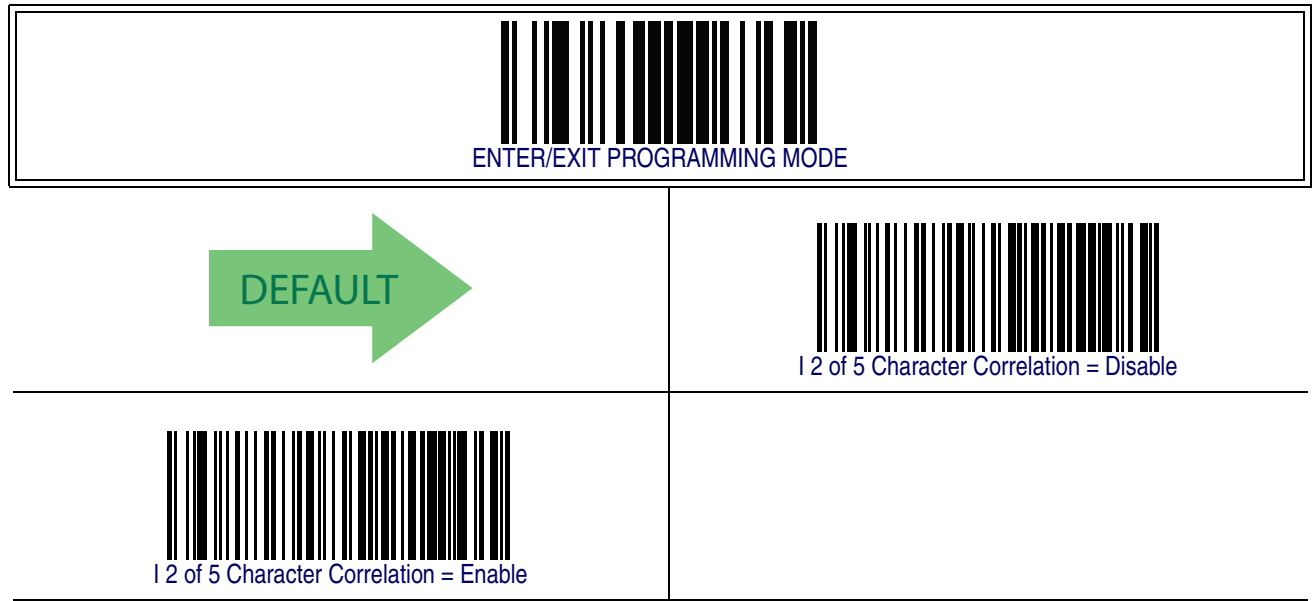
<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select I 2 of 5 Length 2 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 50 = Length 2 is 50 Characters

## Interleaved 2 of 5 (I 2 of 5) – cont.

### I 2 of 5 Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



# Interleaved 2 of 5 (I 2 of 5) – cont.

## I 2 of 5 Stitching

This option enables/disables stitching for I 2 of 5 labels. When parts of a I 2 of 5 barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader’s software, and the data will be decoded if all barcode proofing requirements are met.



Interleaved 2 of 5 CIP HR

The following options apply to the Interleaved 2 of 5 CIP HR symbology.

Interleaved 2 of 5 CIP HR Enable/Disable

Enables/Disables ability of reader to decode Interleaved 2 of 5 CIP HR labels.



Datalogic 2 of 5

The following options apply to the Datalogic 2 of 5 symbology.

Datalogic 2 of 5 Enable/Disable

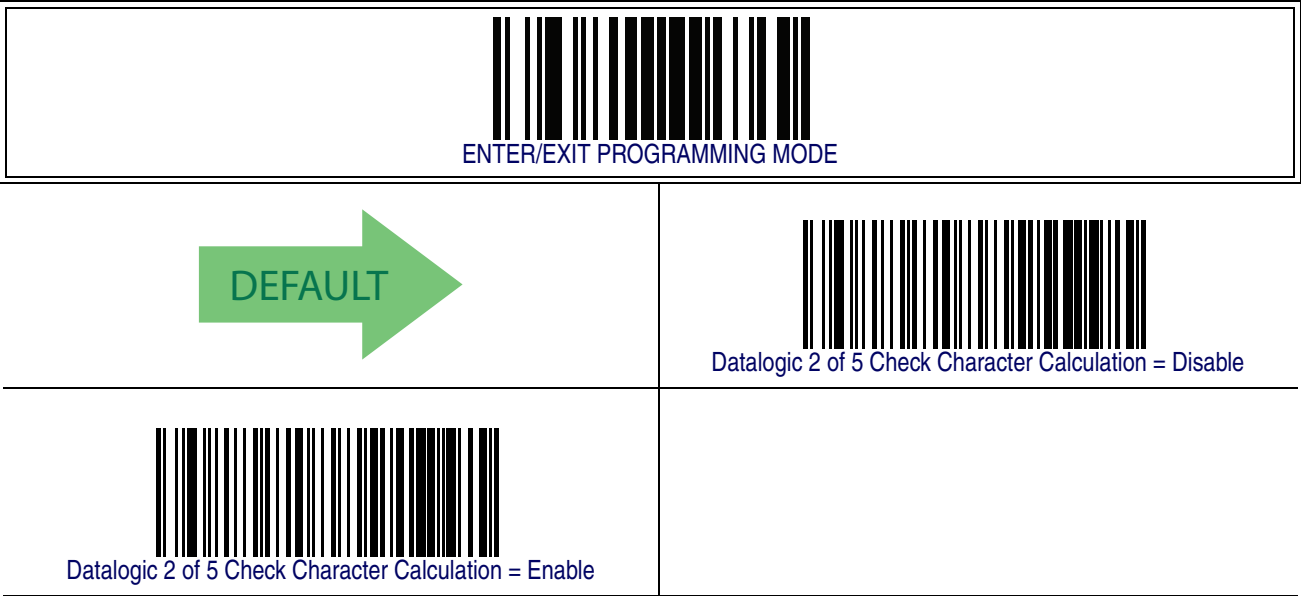
When disabled, the reader will not read Datalogic 2 of 5 barcodes.



# Datalogic 2 of 5 – cont.

## Datalogic 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Datalogic 2 of 5 check character.



# Datalogic 2 of 5 – cont.

## Datalogic 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times an Datalogic 2 of 5 label must be decoded before it is accepted as good read.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>1 2 of 5 Minimum Reads = 1</div></div>
<div><div></div><div>1 2 of 5 Minimum Reads = 2</div></div>	
	<div><div></div><div>1 2 of 5 Minimum Reads = 3</div></div>
<div><div></div><div>1 2 of 5 Minimum Reads = 4</div></div>	

## Datalogic 2 of 5 Decoding Level



The Datalogic 2 of 5 Decoding Level feature is set using [2 of 5 Decoding Level](#) on page 206.

NOTE

## Datalogic 2 of 5 – cont.

### Datalogic 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Datalogic 2 of 5 symbology.

**Variable Length** – For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** – For fixed length decoding, two different lengths may be set.





## Datalogic 2 of 5 – cont.

### Datalogic 2 of 5 Set Length 1

This feature specifies one of the barcode lengths for [Datalogic 2 of 5 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. The length includes the barcode's check and data characters.

The length can be set from 2 to 50 characters in increments of two.

Follow these instructions to set this feature:

1. Determine the desired character length (from 2 to 50). The length must be an even number.
2. Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT I 2 of 5 LENGTH 1 SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

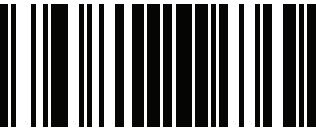
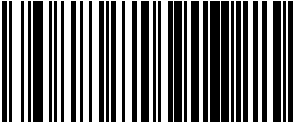

This completes the procedure. See [Table 27](#) for some examples of how to set this feature.

**Table 27. Datalogic 2 of 5 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	2 Characters	6 Characters	14 Characters	50 Characters
2	Pad with leading zeroes to yield two digits	02	06	14	50
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT Datalogic 2 of 5 LENGTH 1 SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '2'	'0' and '6'	'1' and '4'	'5' AND '0'
6	Scan ENTER/EXIT PROGRAMMING MODE				

# Datalogic 2 of 5 – cont.

## Datalogic 2 of 5 Set Length 1 – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Datalogic 2 of 5 Length 1 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 06 = Length 1 is 6 Characters

## Datalogic 2 of 5 – cont.

### Datalogic 2 of 5 Set Length 2

This feature specifies one of the barcode lengths for [Datalogic 2 of 5 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. The length includes the barcode's check and data characters.

The length can be set from 2 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 2 to 50, or 0 to ignore this length). The length must be an even number.
2. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
4. Scan the barcode: SELECT Datalogic 2 of 5 LENGTH 2 SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

6. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

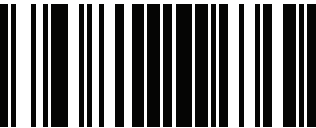
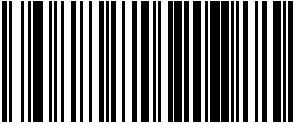
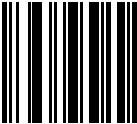
This completes the procedure. See [Table 28](#) for some examples of how to set this feature.

**Table 28. Datalogic 2 of 5 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	Ignore This Length	4 Characters	14 Characters	50 Characters
2	Pad with leading zeroes to yield two digits	00	04	14	50
3	Scan ENTER/EXIT PROGRAMMING MODE				
4	Scan SELECT DATALOGIC 2 OF 5 LENGTH 2 SETTING				
5	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '4'	'1' and '4'	'5' AND '0'
6	Scan ENTER/EXIT PROGRAMMING MODE				

# Datalogic 2 of 5 – cont.

## Datalogic 2 of 5 Set Length 2 – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Datalogic 2 of 5 Length 2 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 50 = Length 2 is 50 Characters

Datalogic 2 of 5 – cont.

Datalogic 2 of 5 Interdigit Maximum Ratio

This feature specifies the maximum ratio between intercharacter space and module for Datalogic 2 of 5.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Datalogic 2 of 5 Interdigit Maximum Ratio = Disable</div></div>
<div><div></div><div>Datalogic 2 of 5 Interdigit Maximum Ratio = 1</div></div>	
	<div><div></div><div>Datalogic 2 of 5 Interdigit Maximum Ratio = 2</div></div>
<div><div></div><div>Datalogic 2 of 5 Interdigit Maximum Ratio = 3</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Datalogic 2 of 5 Interdigit Maximum Ratio = 4</div></div>
<div><div></div><div>Datalogic 2 of 5 Interdigit Maximum Ratio = 5</div></div>	

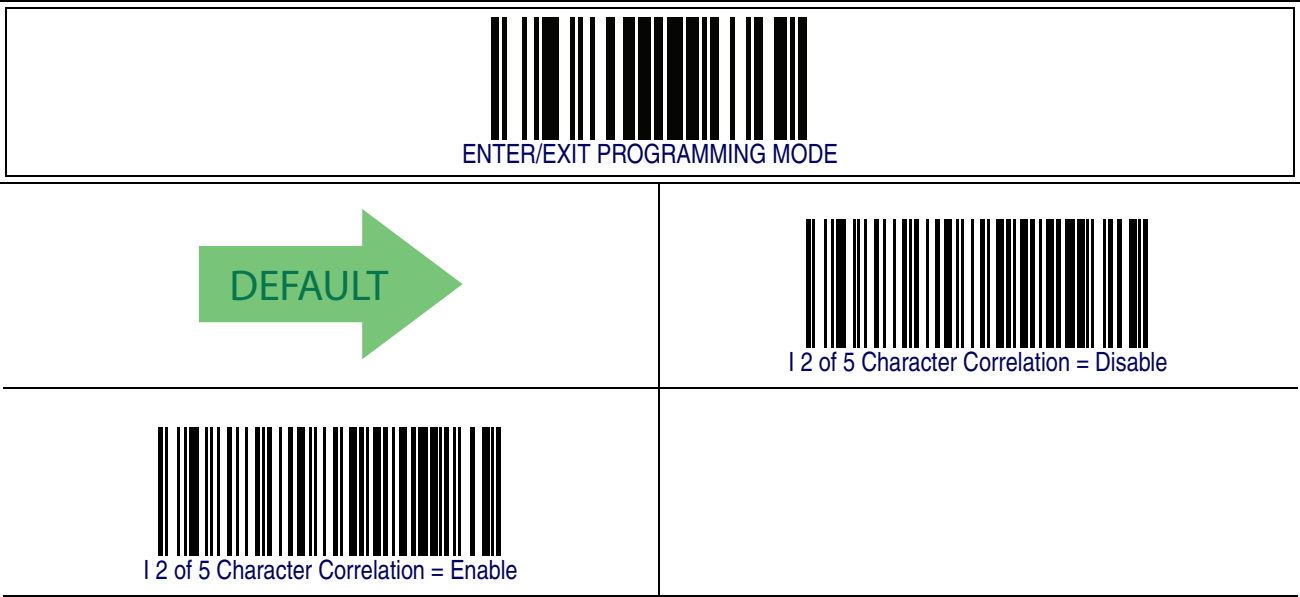
Datalogic 2 of 5 Interdigit Maximum Ratio — cont.

	 <p>Datalogic 2 of 5 Interdigit Maximum Ratio = 6</p>
 <p>Datalogic 2 of 5 Interdigit Maximum Ratio = 7</p>	
	 <p>Datalogic 2 of 5 Interdigit Maximum Ratio = 8</p>
 <p>Datalogic 2 of 5 Interdigit Maximum Ratio = 9</p>	
	 <p>Datalogic 2 of 5 Interdigit Maximum Ratio = 10</p>

## Datalogic 2 of 5 – cont.

### Datalogic 2 of 5 Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



# Datalogic 2 of 5 – cont.

## Datalogic 2 of 5 Stitching

This option enables/disables stitching for Datalogic 2 of 5 labels. When parts of a Datalogic 2 of 5 barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader’s software, and the data will be decoded if all barcode proofing requirements are met.



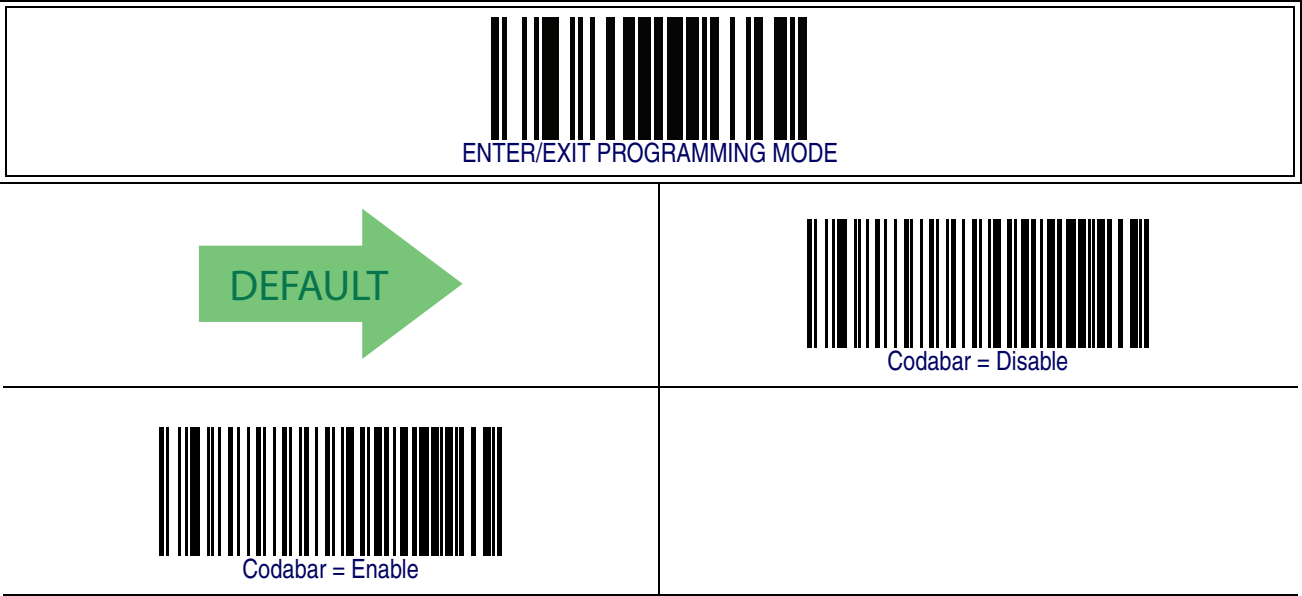


# Codabar

The following options apply to the Codabar symbology.

## Codabar Enable/Disable

When disabled, the reader will not read Codabar barcodes.



Codabar — cont.

Codabar Check Character Calculation

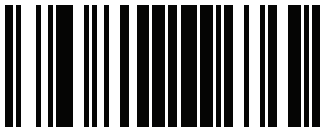
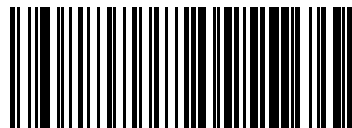
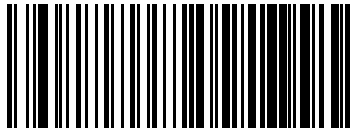

Enable this option to enables/disables calculation and verification of an optional Codabar check character. When disabled, any check character in the label is treated as a data character



## Codabar — cont.

### Codabar Check Character Transmission

Enable this option to transmit the check character along with Codabar barcode data.

 ENTER/EXIT PROGRAMMING MODE	
	 Codabar Check Character Transmission = Don't Send
 Codabar Check Character Transmission = Send	 DEFAULT

### Codabar Start/Stop Character Transmission

Enable this option to enable/disable transmission of Codabar start and stop characters.

 ENTER/EXIT PROGRAMMING MODE	
	 Codabar Start/Stop Character Transmission = Don't Transmit
 Codabar Start/Stop Character Transmission = Transmit	 DEFAULT

Codabar — cont.

Codabar Start/Stop Character Set

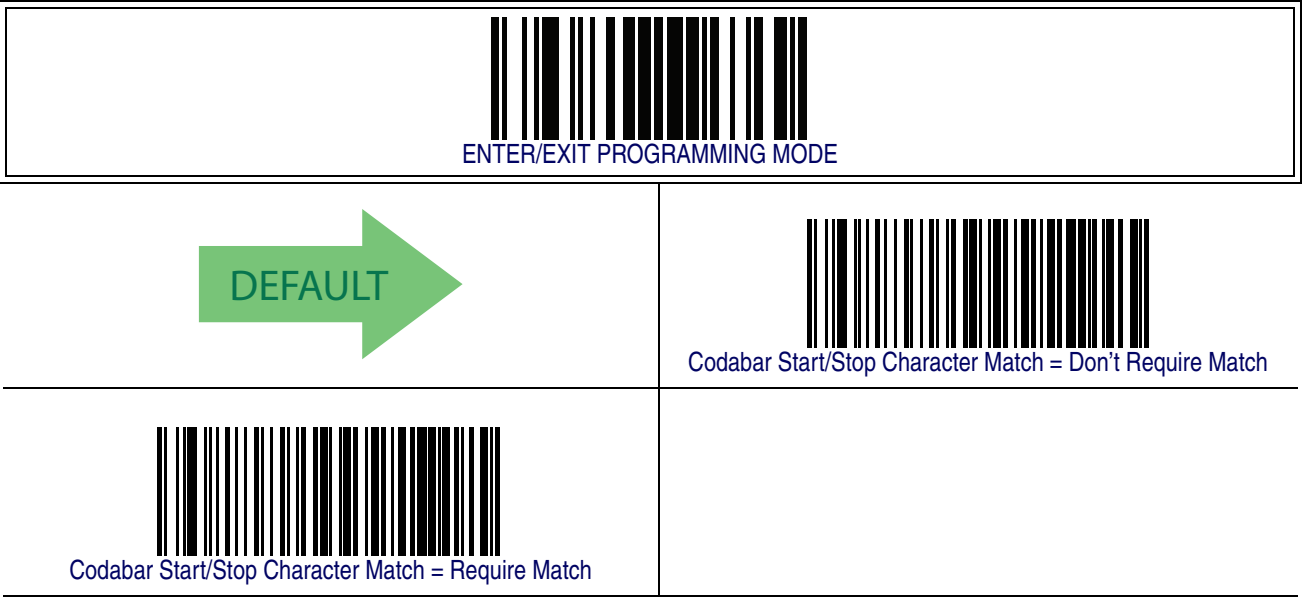
This option specifies the format of transmitted Codabar start/stop characters.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Codabar Check Character Set = ABCD/TN*E</p></div>
<div><p>Codabar Check Character Set = ABCD/ABCD</p></div>	
	<div><p>Codabar Check Character Set = abcd/tn*e</p></div>
<div><p>Codabar Check Character Set = abcd/abcd</p></div>	<div></div>

Codabar — cont.

Codabar Start/Stop Character Match

When enabled, this option requires that start and stop characters match.



# Codabar — cont.

## Codabar Quiet Zones

This feature specifies the number of quiet zones for Codabar labels. Quiet zones are blank areas at the ends of a barcode and are typically 10 times the width of the narrowest bar or space in the label.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
<div><p>Codabar Quiet Zones = Quiet Zone on one side</p></div>	
	<div><p>Codabar Quiet Zones = Quiet Zones on two sides</p></div>
<div><p>Codabar Quiet Zones = Auto</p></div>	<div></div>
	<div><p>Codabar Quiet Zones = Virtual Quiet Zones on two sides</p></div>
<div><p>Codabar Quiet Zones = Small Quiet Zones on two sides</p></div>	

Codabar — cont.

Codabar Minimum Reads

This feature specifies the minimum number of consecutive times a Codabar label must be decoded before it is accepted as good read.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Codabar Minimum Reads = 1</div></div>
<div><div></div><div>Codabar Minimum Reads = 2</div></div>	
	<div><div></div><div>Codabar Minimum Reads = 3</div></div>
<div><div></div><div>Codabar Minimum Reads = 4</div></div>	

## Codabar — cont.

### Codabar Decoding Level

Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

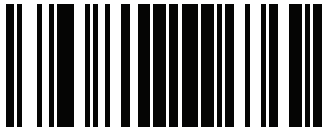
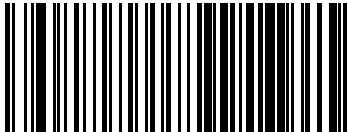
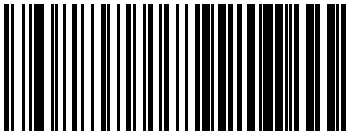
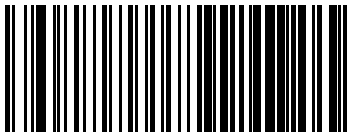

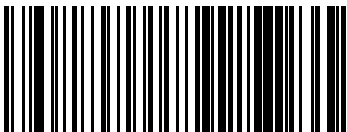
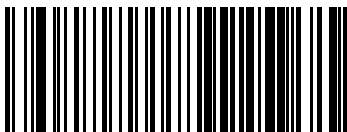
- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.



Codabar — cont.

Codabar Decoding Level — cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Codabar Decoding Level = 1</div></div>	
	<div><div></div><div>Codabar Decoding Level = 2</div></div>
<div><div></div><div>Codabar Decoding Level = 3</div></div>	<div></div>
	<div><div></div><div>Codabar Decoding Level = 4</div></div>
<div><div></div><div>Codabar Decoding Level = 5</div></div>	

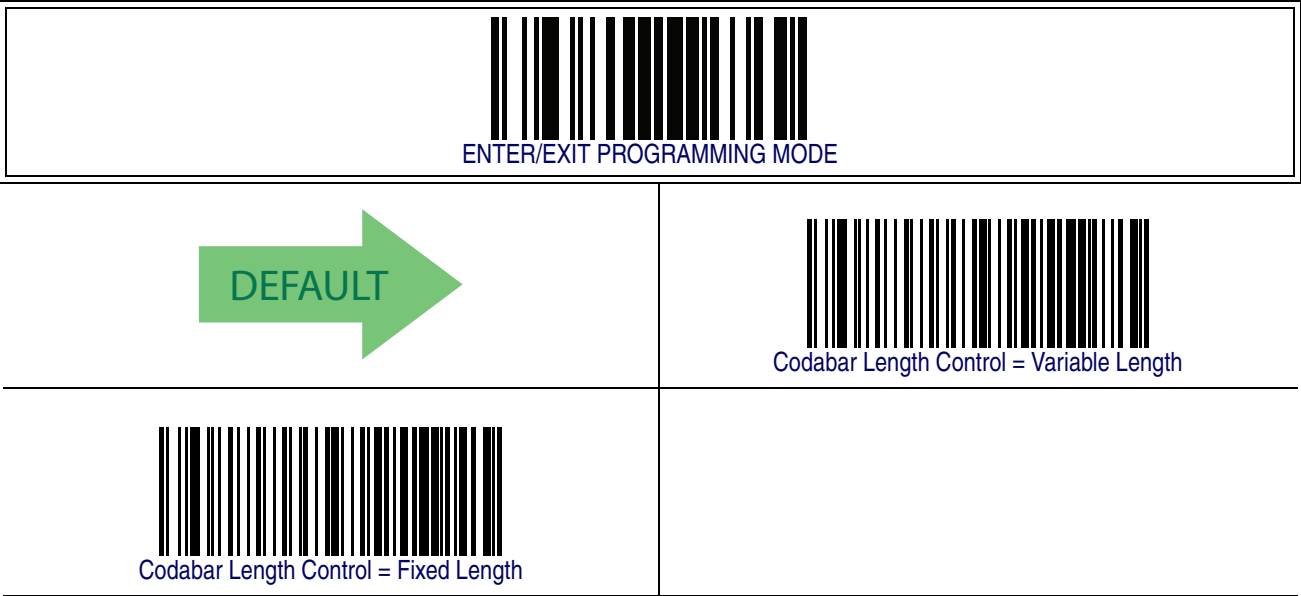
# Codabar — cont.

## Codabar Length Control

This feature specifies either variable length decoding or fixed length decoding for the Codabar symbology.

**Variable Length** — For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** — For fixed length decoding, two different lengths may be set.



## Codabar — cont.

### Codabar Set Length 1

This feature specifies one of the barcode lengths for [Codabar Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode's start, stop, check and data characters. The length must include at least one data character. The length can be set from 3 to 50 characters.

Follow these instructions to set this feature:

1. Determine the desired character length (from 3 to 50). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODABAR LENGTH 1 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

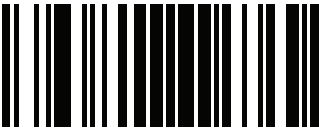
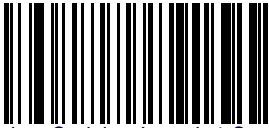

This completes the procedure. See [Table 29](#) for some examples of how to set this feature.

**Table 29. Codabar Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting (and pad with leading zeroes)	03 Characters	09 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODABAR LENGTH 1 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '3'	'0' and '9'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Codabar — cont.

Codabar Set Length 1 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Codabar Length 1 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 03 = Length 1 is 3 Characters

## Codabar — cont.

### Codabar Set Length 2

This feature specifies one of the barcode lengths for [Codabar Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. The length includes the barcode's start, stop, check and data characters. The length must include at least one data character.

The length can be set from 3 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 3 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODABAR LENGTH 2 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

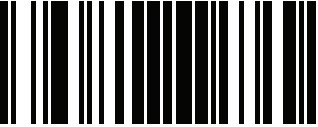
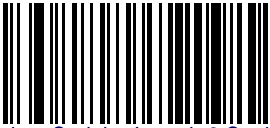

This completes the procedure. See [Table 30](#) for some examples of how to set this feature.

**Table 30. Codabar Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting (and pad with leading zeroes)	00 Ignore This Length	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 39 LENGTH 2 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Codabar — cont.

Codabar Set Length 2 — cont.


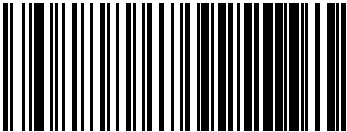
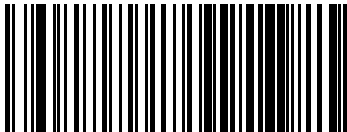
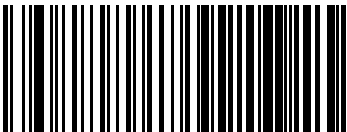
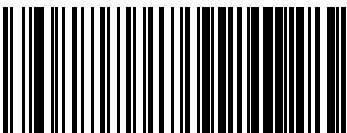
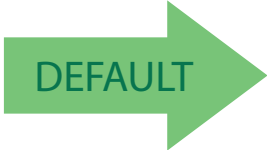
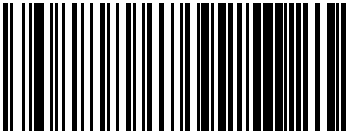
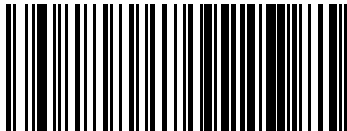
<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select CodabarLength 2 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

 50 = Length 2 is 50 Characters

Codabar — cont.

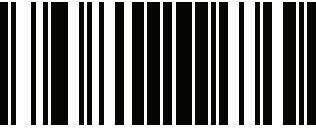
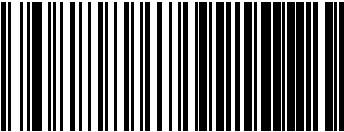
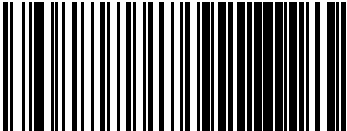
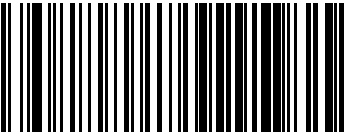
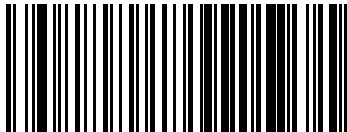
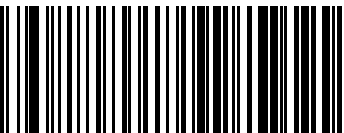
Codabar Interdigit Ratio

This feature specifies the ratio between an intercharacter space and module for Codabar labels.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Codabar Interdigit Ratio = Disable</div>
<div> Codabar Interdigit Ratio = 1</div>	
	<div> Codabar Interdigit Ratio = 2</div>
<div> Codabar Interdigit Ratio = 3</div>	
<div> DEFAULT</div>	<div> Codabar Interdigit Ratio = 4</div>
<div> Codabar Interdigit Ratio = 5</div>	

Codabar — cont.

Codabar Interdigit Ratio — cont.

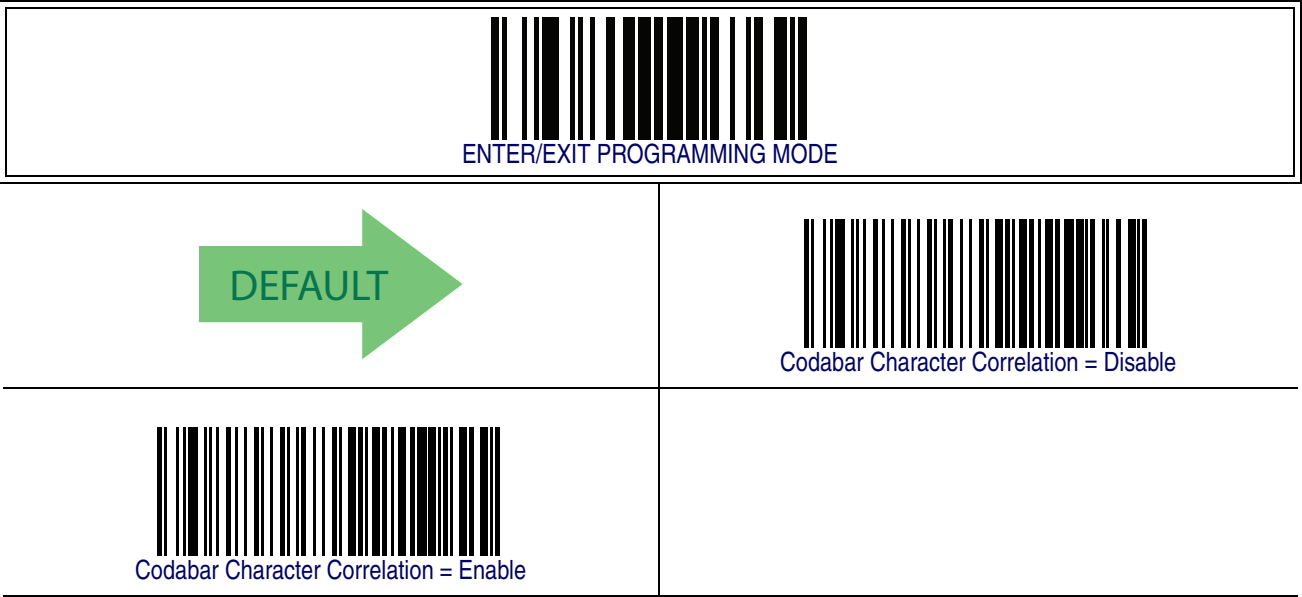
<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Codabar Interdigit Ratio = 6</p></div>
<div><p>Codabar Interdigit Ratio = 7</p></div>	
	<div><p>Codabar Interdigit Ratio = 8</p></div>
<div><p>Codabar Interdigit Ratio = 9</p></div>	
	<div><p>Codabar Interdigit Ratio = 10</p></div>



Codabar — cont.

Codabar Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



# Codabar Stitching

This option enables/disables stitching for Codabar labels. When parts of a Codabar barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader’s software, and the data will be decoded if all barcode proofing requirements are met.



ABC Codabar

The following options apply to the ABC Codabar symbology.

ABC Codabar Enable/Disable

Enables/Disables ability of reader to decode ABC Codabar labels.



ABC Codabar Concatenation Mode

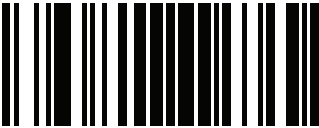


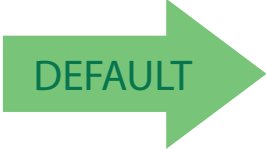
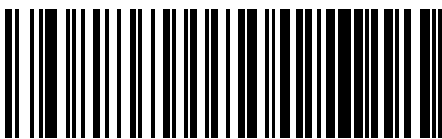

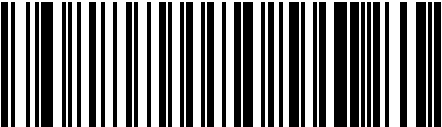
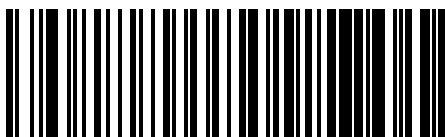
Specifies the concatenation mode between Static and Dynamic.



# ABC Codabar — cont.

## ABC Codabar Dynamic Concatenation Timeout

Specifies the timeout in 10-millisecond ticks used by the ABC Codabar Dynamic Concatenation Mode.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>ABC Codabar Dynamic Concatenation Timeout = 50 msec</div></div>
<div><div></div><div>ABC Codabar Dynamic Concatenation Timeout = 100 msec</div></div>	
<div><div></div><div>DEFAULT</div></div>	<div><div></div><div>ABC Codabar Dynamic Concatenation Timeout = 200 msec</div></div>
<div><div></div><div>ABC Codabar Dynamic Concatenation Timeout = 500 msec</div></div>	
	<div><div></div><div>ABC Codabar Dynamic Concatenation Timeout = 750 msec</div></div>
<div><div></div><div>ABC Codabar Dynamic Concatenation Timeout = 1 Second</div></div>	

# ABC Codabar — cont.

## ABC Codabar Force Concatenation

Forces labels starting or ending with D to be concatenated.

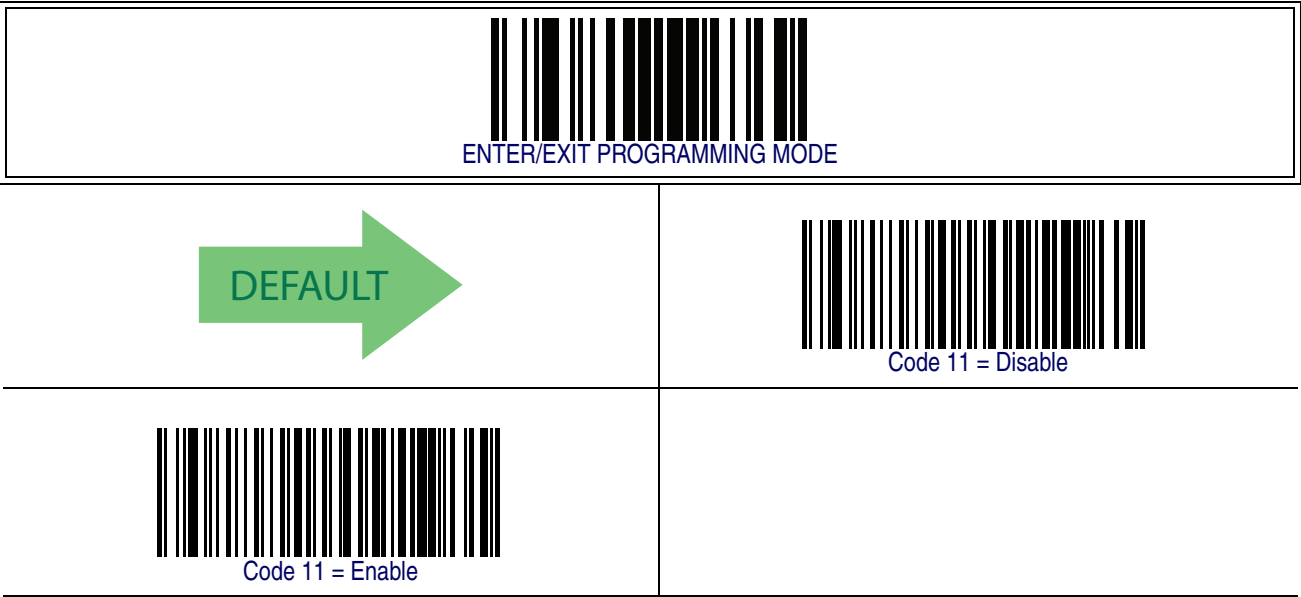


# Code 11

The following options apply to the Code 11 symbology.

## Code 11 Enable/Disable

When disabled, the reader will not read Code 11 barcodes.



Code 11 — cont.

Code 11 Check Character Calculation

This option enables/disables calculation and verification of optional Code 11 check character.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Code 11 Check Character Calculation = Disable</div>
<div> Code 11 Check Character Calculation = Check C</div>	
	<div> Code 11 Check Character Calculation = Check K</div>
<div> Code 11 Check Character Calculation = Check C and K</div>	<div> DEFAULT</div>

Code 11 – cont.

Code 11 Check Character Transmission

This feature enables/disables transmission of an optional Code 11 check character.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Code 11 Check Character Transmission = Don't Send</p></div>
<div><p>Code 11 Check Character Transmission = Send</p></div>	<div><p>DEFAULT</p></div>



Code 11 — cont.

Code 11 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 93 label must be decoded before it is accepted as good read..

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Code 11 Minimum Reads = 1</div></div>
<div><div></div><div>Code 11 Minimum Reads = 2</div></div>	
	<div><div></div><div>Code 11 Minimum Reads = 3</div></div>
<div><div></div><div>Code 11 Minimum Reads = 4</div></div>	

Code 11 – cont.

Code 11 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 11 symbology.

**Variable Length** – For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** – For fixed length decoding, two different lengths may be set.



## Code 11 — cont.

### Code 11 Set Length 1

This feature specifies one of the barcode lengths for [Code 11 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode's check and data characters.

The length can be set from 2 to 50 characters.

Follow these instructions to set this feature:

1. Determine the desired character length (from 2 to 50). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 11 LENGTH 1 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

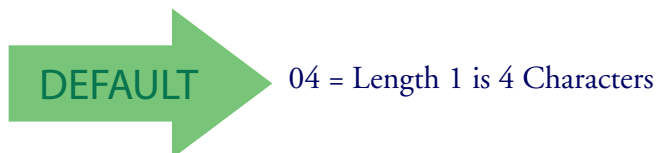
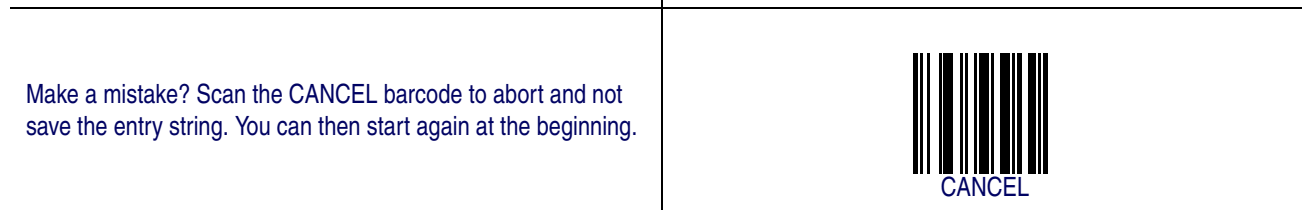
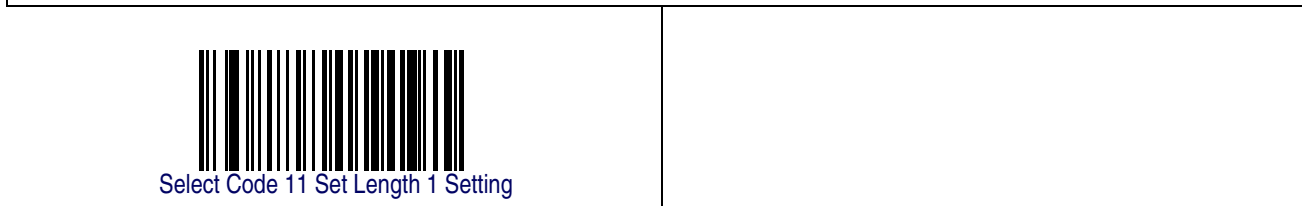
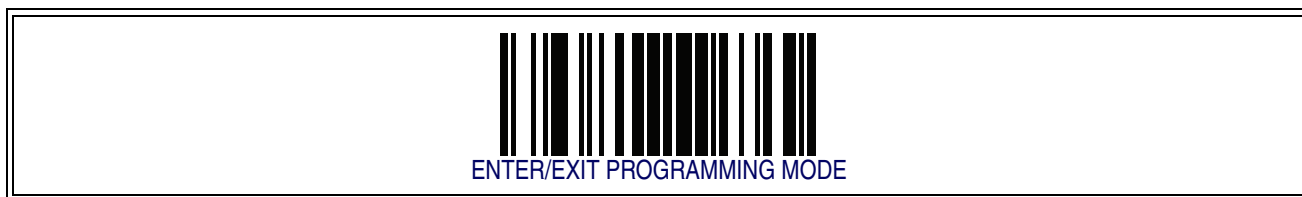
This completes the procedure. See [Table 31](#) for some examples of how to set this feature.

**Table 31. Code 11 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting (pad with leading zeroes)	02 Characters	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 11 LENGTH 1 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '2'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

## Code 11 – cont.

### Code 11 Set Length 1 – cont.



## Code 11 — cont.

### Code 11 Set Length 2

This feature specifies one of the barcode lengths for [Code 11 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode's check and data characters.

The length can be set from 2 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 2 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 11 LENGTH 2 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

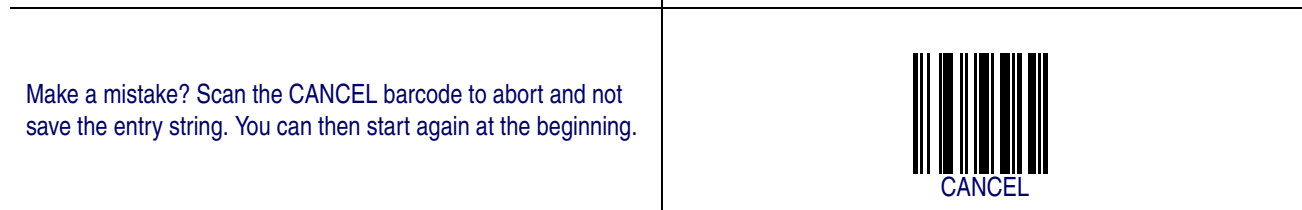
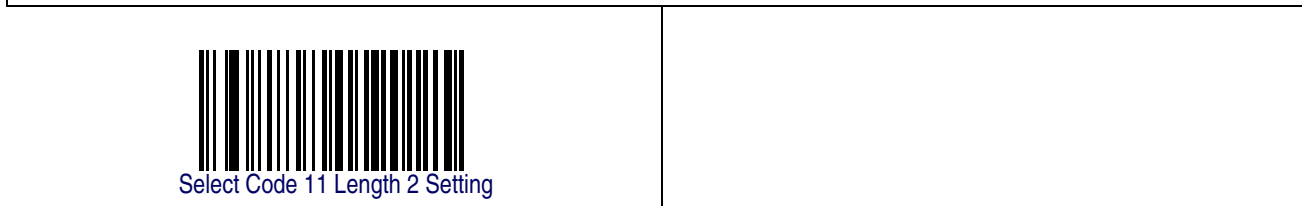
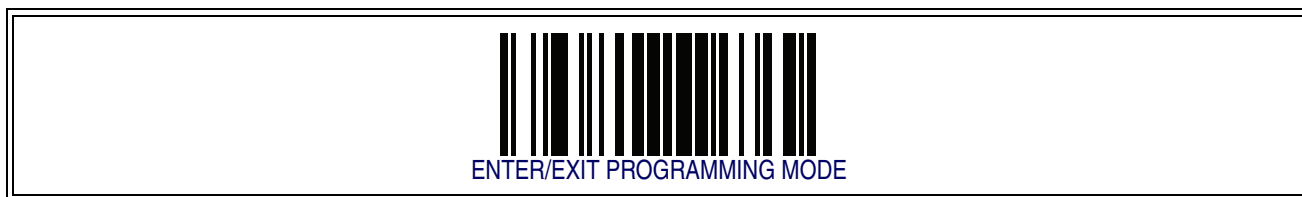
This completes the procedure. See [Table 32](#) for some examples of how to set this feature.

**Table 32. Code 11 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting (pad with leading zeroes)	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 11 LENGTH 2 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '7'	'0' and 'F'	'3' AND 2'
5	Scan ENTER/EXIT PROGRAMMING MODE				

## Code 11 – cont.

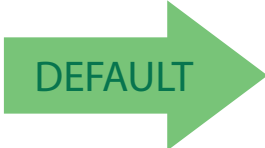
### Code 11 Set Length 2 – cont.



Code 11 — cont.

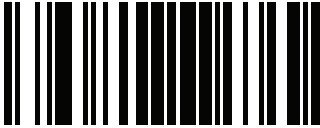
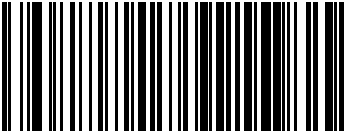
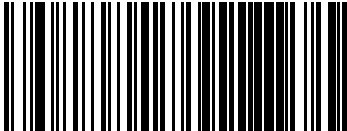
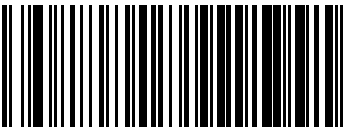
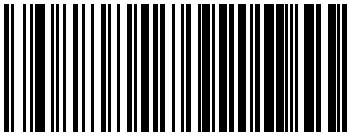
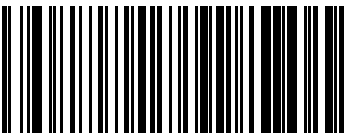
Code 11 Interdigit Ratio

This feature specifies the ratio between an intercharacter space and module for Code 11 labels.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Code 11 Interdigit Ratio = Disable</div></div>
<div><div></div><div>Code 11 Interdigit Ratio = 1</div></div>	
	<div><div></div><div>Code 11 Interdigit Ratio = 2</div></div>
<div><div></div><div>Code11 Interdigit Ratio = 3</div></div>	
<div><div></div></div>	<div><div></div><div>Code 11 Interdigit Ratio = 4</div></div>
<div><div></div><div>Code 11 Interdigit Ratio = 5</div></div>	

Code 11 – cont.

Code 11 Interdigit Ratio – cont.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Code 11 Interdigit Ratio = 6</p></div>
<div><p>Code 11 Interdigit Ratio = 7</p></div>	
	<div><p>Code 11 Interdigit Ratio = 8</p></div>
<div><p>Code 11 Interdigit Ratio = 9</p></div>	
	<div><p>Code 11 Interdigit Ratio = 10</p></div>



## Code 11 Decoding Level

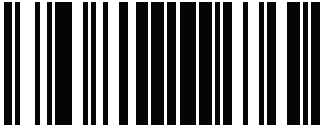
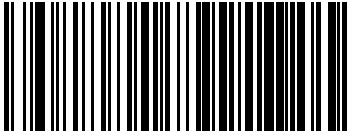
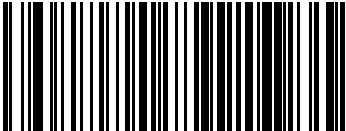
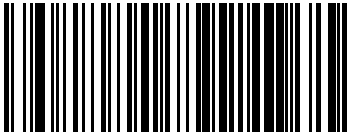

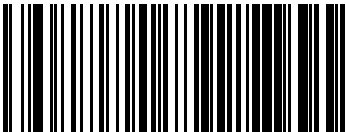
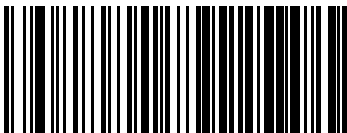
Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

Code 11 – cont.

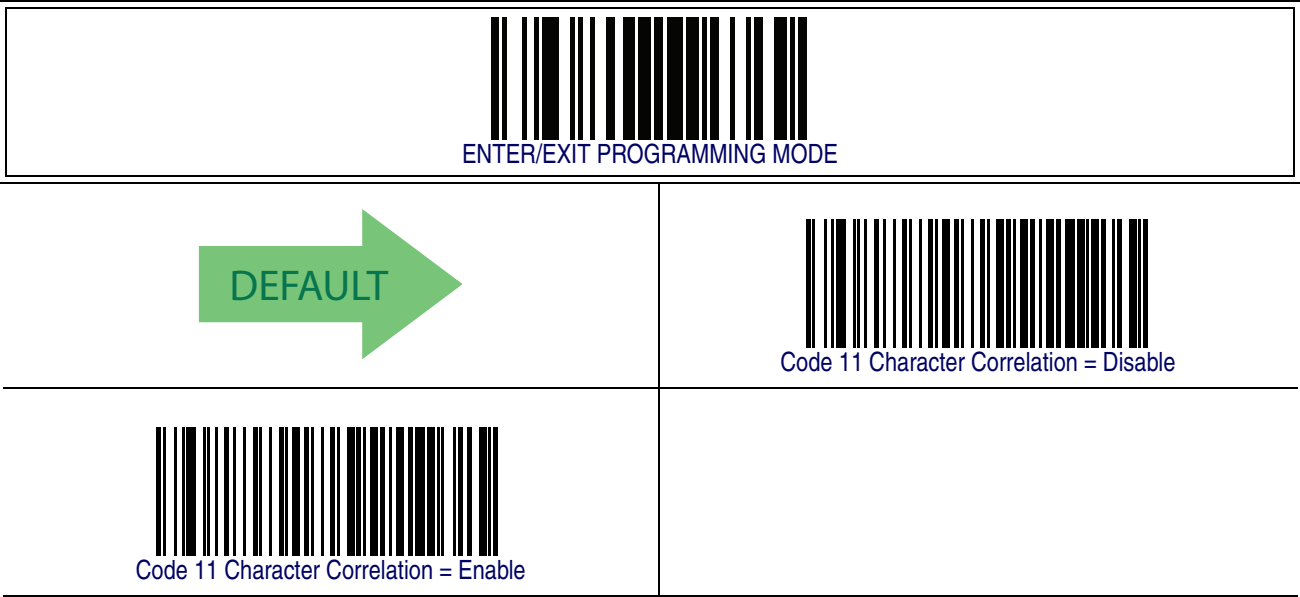
Code 11 Decoding Level – cont.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div></div><div>Codabar Decoding Level = 1</div></div>	
	<div><div></div><div>Codabar Decoding Level = 2</div></div>
<div><div></div><div>Codabar Decoding Level = 3</div></div>	<div></div>
	<div><div></div><div>Codabar Decoding Level = 4</div></div>
<div><div></div><div>Codabar Decoding Level = 5</div></div>	

Code 11 — cont.

Code 11 Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



Code 11 Stitching

This option enables/disables stitching for Code 11 labels. When parts of a Code 11 barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader’s software, and the data will be decoded if all barcode proofing requirements are met.

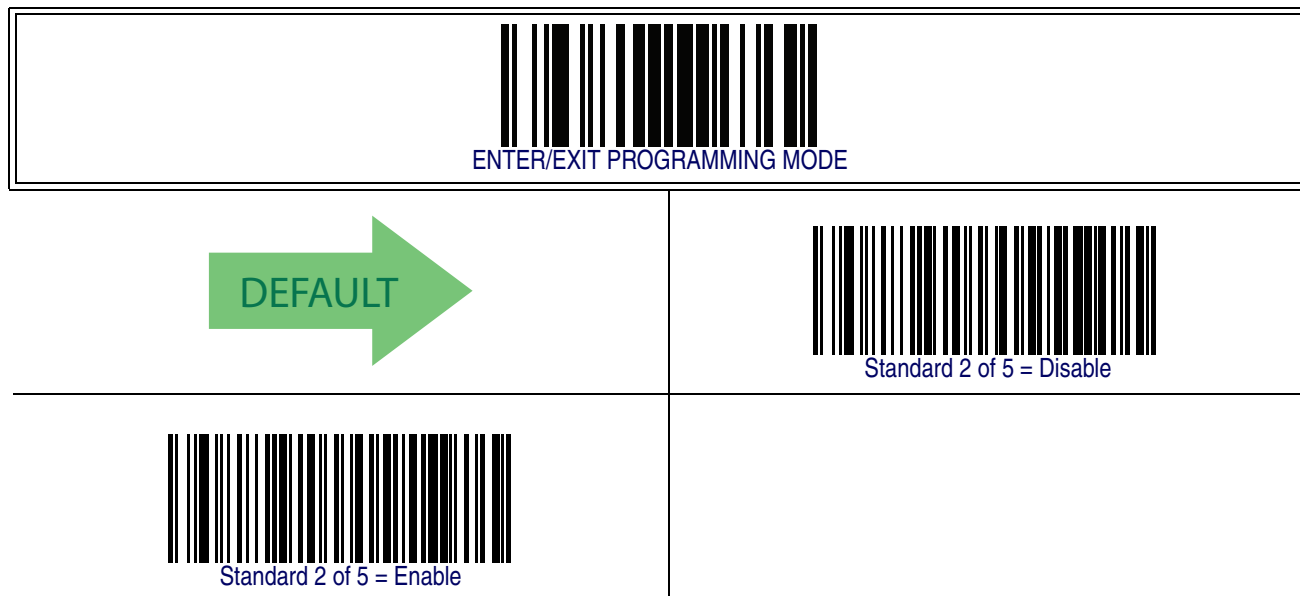


## Standard 2 of 5

The following options apply to the Standard 2 of 5 symbology.

### Standard 2 of 5 Enable/Disable

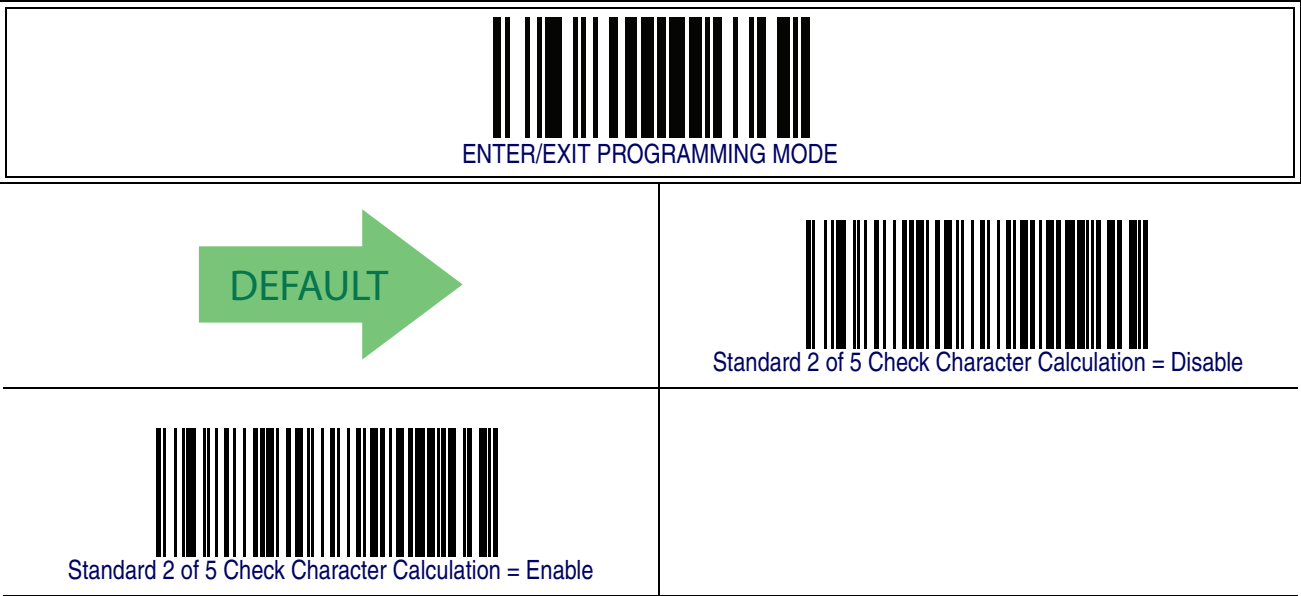
When disabled, the reader will not read Standard 2 of 5 barcodes.



Standard 2 of 5 — cont.

Standard 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Standard 2 of 5 check character.



Standard 2 of 5 Check Character Transmission

This feature enables/disables transmission of an optional Standard 2 of 5 check character.



## Standard 2 of 5 — cont.

### Standard 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times a Standard 2 of 5 label must be decoded before it is accepted as good read.

 ENTER/EXIT PROGRAMMING MODE	
 DEFAULT	 Standard 2 of 5 Minimum Reads = 1
 Standard 2 of 5 Minimum Reads = 2	
	 Standard 2 of 5 Minimum Reads = 3
 Standard 2 of 5 Minimum Reads = 4	

### Standard 2 of 5 Decoding Level



The Standard 2 of 5 Decoding Level feature is set using [2 of 5 Decoding Level](#) on page 206.

**NOTE**

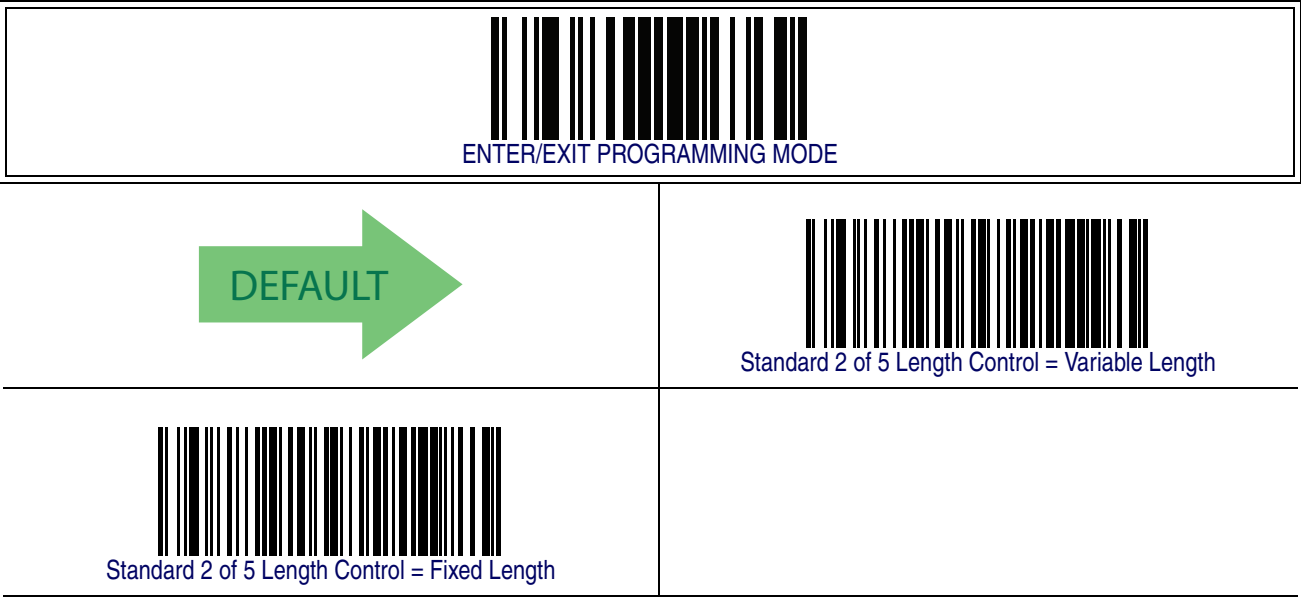
# Standard 2 of 5 — cont.

## Standard 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Standard 2 of 5 symbology.

**Variable Length** — For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** — For fixed length decoding, two different lengths may be set.





## Standard 2 of 5 — cont.

### Standard 2 of 5 Set Length 1

This feature specifies one of the barcode lengths for [Standard 2 of 5 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode's check and data characters.

The length can be set from 1 to 50 characters.

Follow these instructions to set this feature:

1. Determine the desired character length (from 1 to 50). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT STANDARD 2 OF 5 LENGTH 1 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

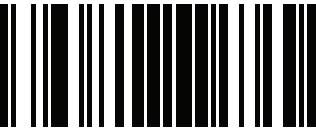
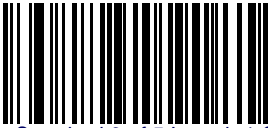

This completes the procedure. See [Table 33](#) for some examples of how to set this feature.

**Table 33. Standard 2 of 5 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	01 Character	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT STANDARD 2 OF 5 LENGTH 1 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '1'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Standard 2 of 5 – cont.

Standard 2 of 5 Set Length 1 – cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Standard 2 of 5 Length 1 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 08 = Length 1 is 8 Characters

## Standard 2 of 5 — cont.

### Standard 2 of 5 Set Length 2

This feature specifies one of the barcode lengths for [Standard 2 of 5 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode's check and data characters.

The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 1 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT STANDARD 2 OF 5 LENGTH 2 SETTING.
4. Scan the appropriate two digits from the keypad in [Appendix E, Keypad](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

#### NOTE

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

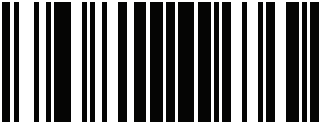
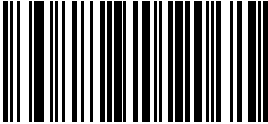

This completes the procedure. See [Table 34](#) for some examples of how to set this feature.

**Table 34. Standard 2 of 5 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting (pad with leading zeroes)	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT STANDARD 2 OF 5 LENGTH 2 SETTING				
4	Scan Two Characters From <a href="#">Appendix E, Keypad</a>	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Standard 2 of 5 – cont.

Standard 2 of 5 Set Length 2 – cont.

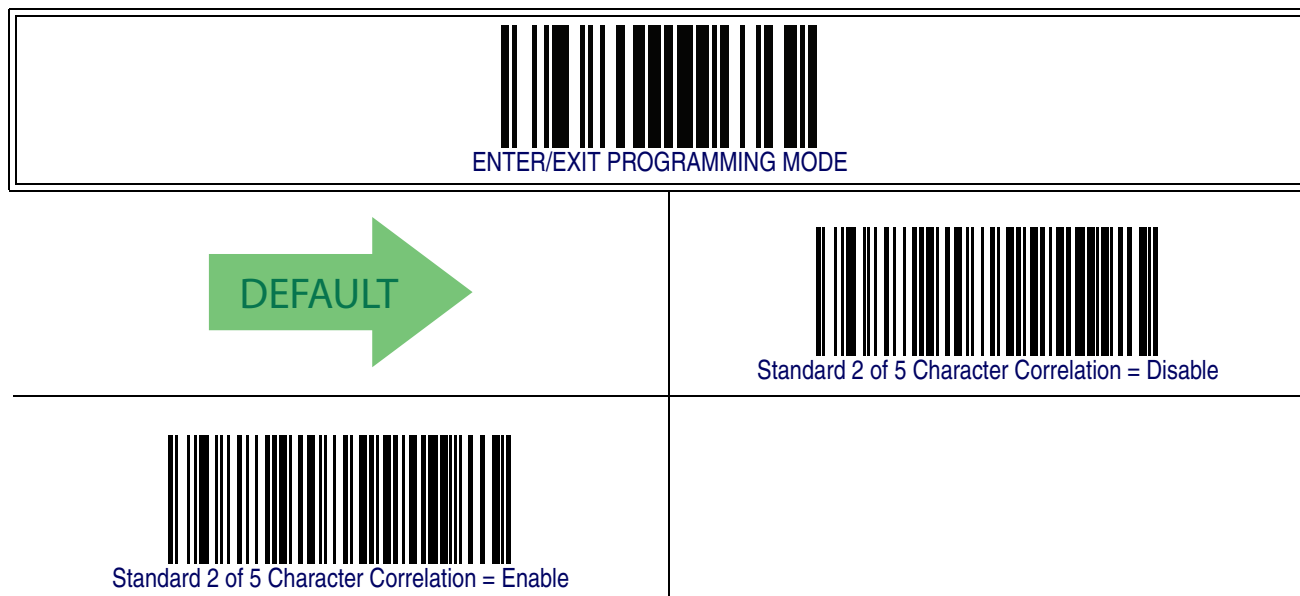
<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Standard 2 of 5 Length 2 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 50 = Length 2 is 50 Characters

## Standard 2 of 5 — cont.

### Standard 2 of 5 Character Correlation

When correlation is enabled, the barcode reader will combine label data from multiple scans when decoding. Enabling correlation will help the scanner read labels that have some spots and/or voids. It may also help read labels that have damaged areas. Enabling correlation will also increase the chances that a label will be read incorrectly.



Standard 2 of 5 Stitching

This option enables/disables stitching for Standard 2 of 5 labels. When parts of a Standard 2 of 5 barcode are presented to the reader with this feature enabled, the barcode parts will be assembled by the reader’s software, and the data will be decoded if all barcode proofing requirements are met.



## Industrial 2 of 5

The following options apply to the Industrial 2 of 5 symbology.

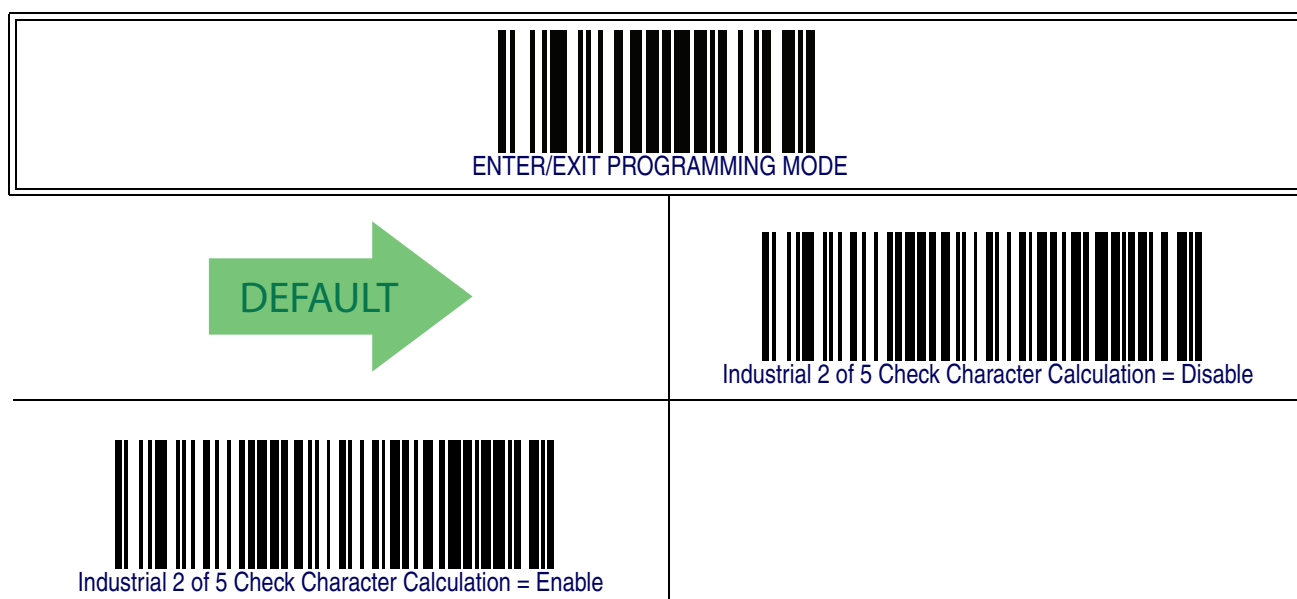
### Industrial 2 of 5 Enable/Disable

Enables/Disables ability of reader to decode Industrial 2 of 5 labels.



### Industrial 2 of 5 Check Character Calculation

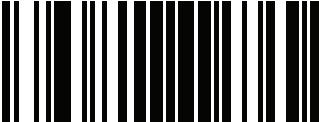



Enables/Disables calculation and verification of an optional Industrial 2 of 5 check character.



# Industrial 2 of 5 – cont.

## Industrial 2 of 5 Check Character Transmission

Enables/disables transmission of an Industrial 2 of 5 check character.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Industrial 2 of 5 Check Character Transmission = Disable</div></div>
<div><div></div><div>Industrial 2 of 5 Check Character Transmission = Enable</div></div>	<div></div>



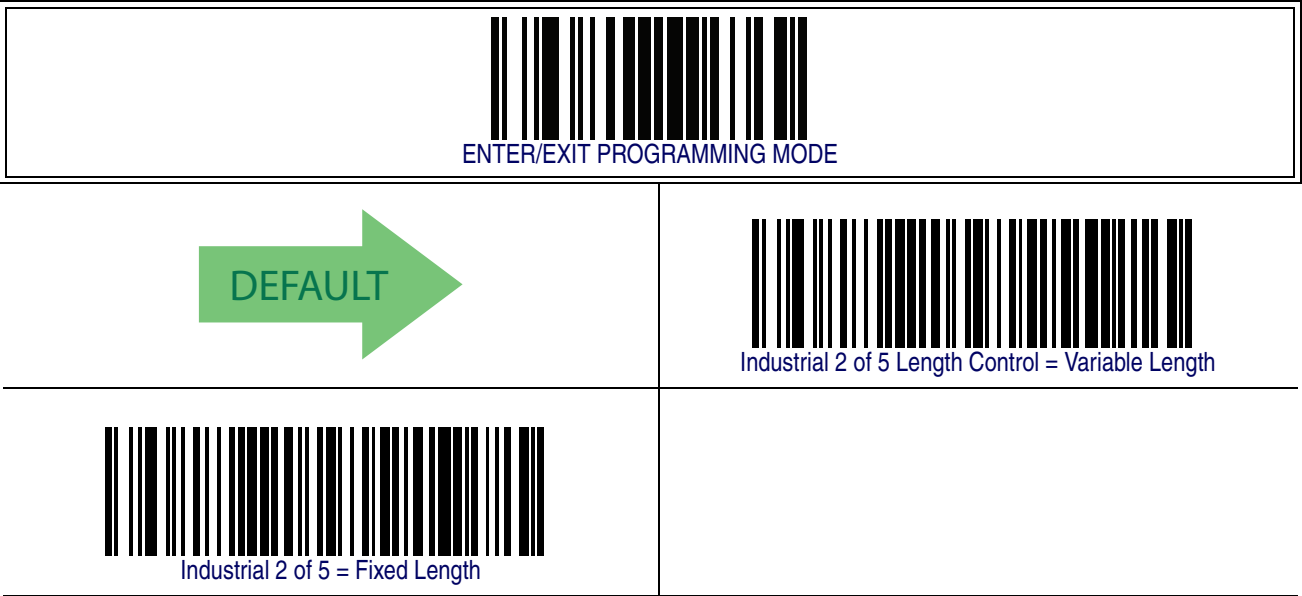
# Industrial 2 of 5 — cont.

## Industrial 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Industrial 2 of 5 symbology.

**Variable Length** — For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** — For fixed length decoding, two different lengths may be set.



# Industrial 2 of 5 – cont.

## Industrial 2 of 5 Set Length 1

This feature specifies one of the barcode lengths for **Industrial 2 of 5 Length Control**. Length 1 is the minimum label length if in **Variable Length** Mode, or the first fixed length if in **Fixed Length** Mode. Length includes the barcode’s data characters only. The length can be set from 0 to 50 characters.

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 1 to 50). Pad the number with leading zeroes to yield two digits. For example: 1 = 01, 5 = 05, 20 = 20, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT INDUSTRIAL 2 of 5 LENGTH 1 SETTING.
- 4. Scan the appropriate two digits from the keypad in the Keypad Appendix, that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

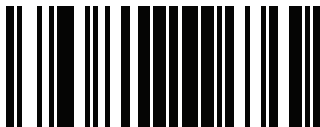
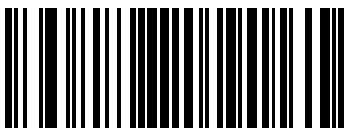
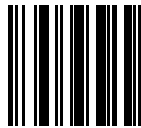
This completes the procedure. See the table below for some examples of how to set this feature.

**Table 35. Code 39 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	01Character	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT INDUSTRIAL 2 OF 5 LENGTH 1 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '1'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Industrial 2 of 5 — cont.

Industrial 2 of 5 Set Length 1 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Industrial 2 of 5 Set Length 1 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

DEFAULT

01 = Length 1 is 1 Character

# Industrial 2 of 5 – cont.

## Industrial 2 of 5 Set Length 2

This feature specifies one of the barcode lengths for **Industrial 2 of 5 Length Control**. Length 2 is the maximum label length if in **Variable Length** Mode, or the second fixed length if in **Fixed Length** Mode. Length includes the barcode’s check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 1 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT INDUSTRIAL 2 OF 5 LENGTH 2 SETTING.
- 4. Scan the appropriate two digits from the keypad in the Keypad Appendix that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake, before the last character scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

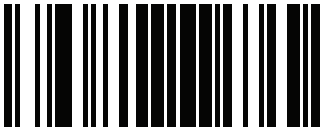
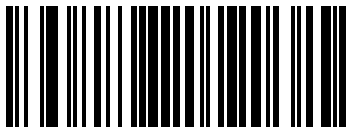
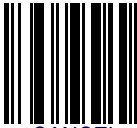
This completes the procedure. See the table below for some examples of how to set this feature.

**Table 36. Code 39 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT INDUSTRIAL 2 OF 5 LENGTH 2 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Industrial 2 of 5 — cont.

Industrial 2 of 5 Set Length 2 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Industrial 2 of 5 Length 2 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

→

DEFAULT

50 = Length 2 is 50 Characters

# Industrial 2 of 5 – cont.

## Industrial 2 of 5 Minimum Reads

This feature specifies the minimum number of consecutive times an Industrial 2 of 5 label must be decoded before it is accepted as good read..

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Industrial 2 of 5 Minimum Reads = 1</div></div>
<div><div></div><div>Industrial 2 of 5 Minimum Reads = 2</div></div>	
	<div><div></div><div>Industrial 2 of 5 Minimum Reads = 3</div></div>
<div><div></div><div>Industrial 2 of 5 Minimum Reads = 4</div></div>	

Industrial 2 of 5 — cont.

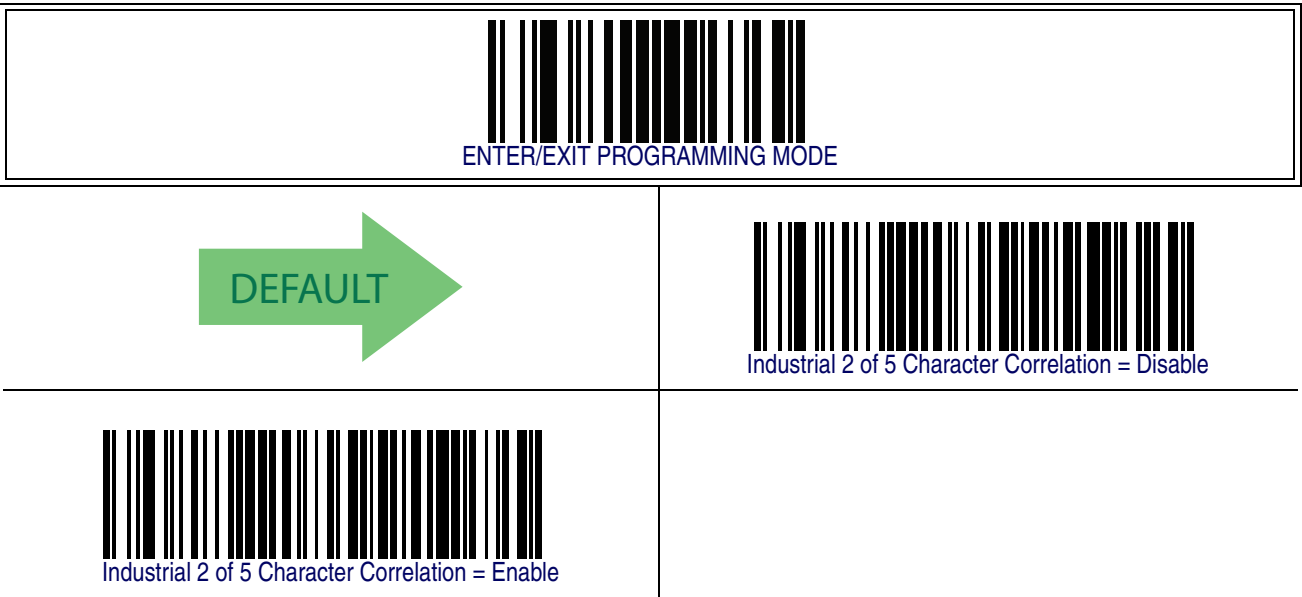
Industrial 2 of 5 Stitching

Enables/disables fixed length stitching for Industrial 2 of 5.



Industrial 2 of 5 Character Correlation

Enable/disables character correlation for Industrial 2 of 5.



IATA

The following options apply to the IATA symbology.

IATA Enable/Disable

Enables/Disables the ability of the reader to decode IATA labels.

  
ENTER/EXIT PROGRAMMING MODE

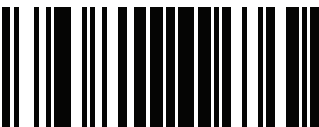
  
DEFAULT

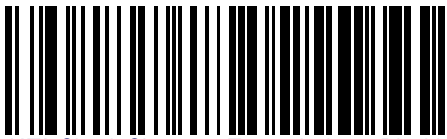
  
IATA = Disable

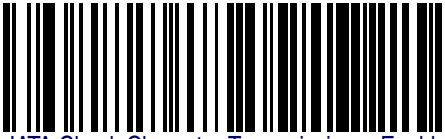
  
IATA = Enable


IATA Check Character Transmission

Enables/Disables calculation and verification of an optional Industrial 2 of 5 check character.

  
ENTER/EXIT PROGRAMMING MODE

  
IATA Check Character Transmission = Disable

  
IATA Check Character Transmission = Enable

  
DEFAULT



ISBT 128

The following options apply to the ISBT 128 symbology.

ISBT 128 Concatenation

Use this option to enable/disable ISBT128 concatenation of 2 labels.



# ISBT 128 – cont.

## ISBT 128 Concatenation Mode

Specifies the concatenation mode between Static and Dynamic.



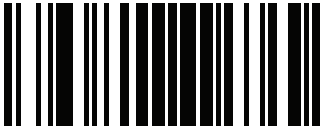
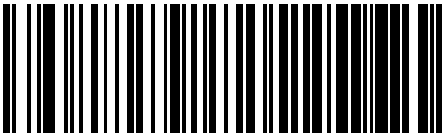
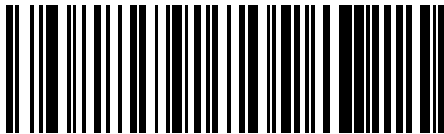
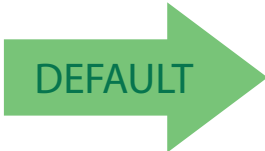

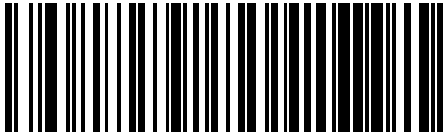
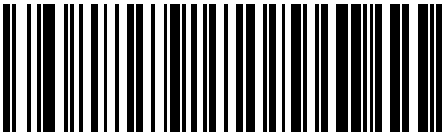
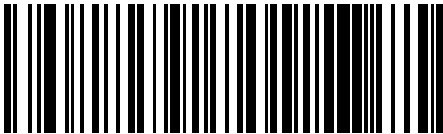
This option is only valid when ISBT 128 Concatenation is enabled (see page 283).

**NOTE**



ISBT 128 Dynamic Concatenation Timeout

Specifies the timeout used by the ISBT 128 Dynamic Concatenation Mode.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>ISBT 128 Dynamic Concatenation Timeout = 50 msec</div></div>
<div><div></div><div>ISBT 128 Dynamic Concatenation Timeout = 100 msec</div></div>	
<div><div></div></div>	<div><div></div><div>ISBT 128 Dynamic Concatenation Timeout = 200 msec</div></div>
<div><div></div><div>ISBT 128 Dynamic Concatenation Timeout = 500 msec</div></div>	
	<div><div></div><div>ISBT 128 Dynamic Concatenation Timeout = 750 msec</div></div>
<div><div></div><div>ISBT 128 Dynamic Concatenation Timeout = 1 second</div></div>	

# ISBT 128 – cont.

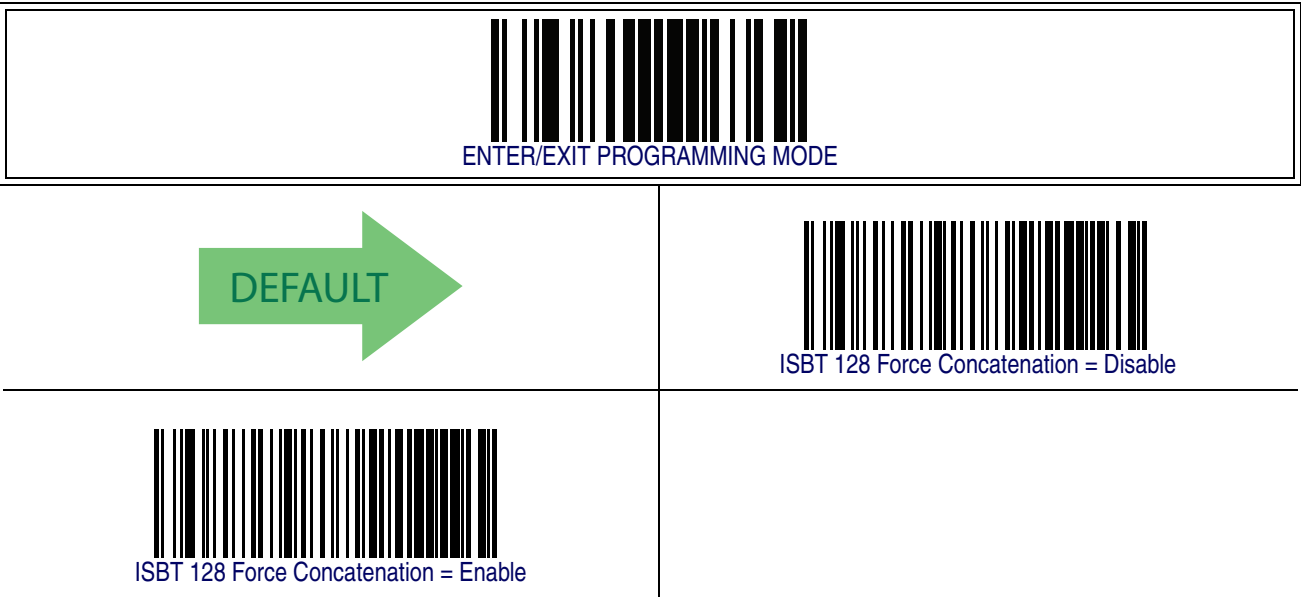
## ISBT 128 Force Concatenation

When enabled, this feature forces concatenation for ISBT.



This option is only valid when [ISBT 128 Concatenation](#) is enabled. (see page 283).

NOTE



## ISBT 128 Advanced Concatenation Options



Use the Datalogic Aladdin Configuration Application or contact Customer Support to set up pairs of label types for concatenation.

NOTE

MSI

The following options apply to the MSI symbology.

MSI Enable/Disable

Enables/Disables ability of reader to decode MSI labels.



MSI — cont.

MSI Check Character Calculation

Enables/Disables calculation and verification of an optional MSI check character.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>MSI Check Character Calculation = Disable</div></div>
<div><div></div><div>MSI Check Character Calculation = Enable Mod10</div></div>	<div></div>
	<div><div></div><div>MSI Check Character Calculation = Enable Mod11/10</div></div>
<div><div></div><div>MSI Check Character Calculation = Enable Mod10/10</div></div>	

MSI — cont.

MSI Check Character Transmission

Enables/disables transmission of an MSI check character.



MSI Length Control

This feature specifies either variable length decoding or fixed length decoding for the MSI symbology.

**Variable Length** — For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** — For fixed length decoding, two different lengths may be set.



# MSI – cont.

## MSI Set Length 1

This feature specifies one of the barcode lengths for **MSI Length Control**. Length 1 is the minimum label length if in **Variable Length Mode**, or the first fixed length if in **Fixed Length Mode**. Length includes the barcode’s data characters only. The length can be set from 01 to 50 characters.

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 0 to 50). Pad the number with leading zeroes to yield two digits. For example: 1 = 01, 5 = 05, 20 = 20, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT MSI LENGTH 1 SETTING.
- 4. Scan the appropriate two digits from the keypad in the Keypad Appendix, that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See the table below for some examples of how to set this feature.

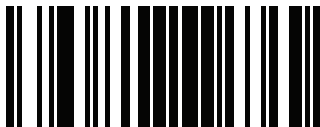
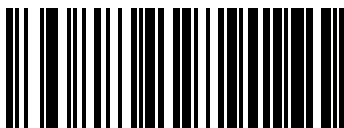
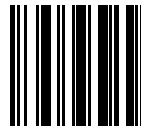
**Table 37. MSI Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	01 Characters	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT MSI LENGTH 1 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '1'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				



MSI — cont.

MSI Set Length 1 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select MSI Set Length 1 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

DEFAULT

01 = Length 1 is 1 Character

# MSI — cont.

## MSI Set Length 2

This feature specifies one of the barcode lengths for [MSI Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode’s check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 1 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT MSI LENGTH 2 SETTING.
4. Scan the appropriate two digits from the keypad in the Keypad Appendix that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake, before the last character scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

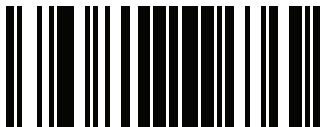
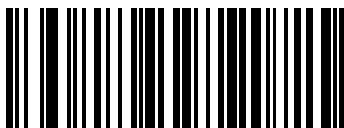
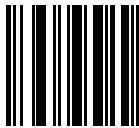
This completes the procedure. See the table below for some examples of how to set this feature.

**Table 38. MSI Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT MSI LENGTH 2 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

MSI — cont.

MSI Set Length 2 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select MSI Length 2 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 50 = Length 2 is 50 Characters

MSI — cont.

MSI Minimum Reads

This feature specifies the minimum number of consecutive times an MSI label must be decoded before it is accepted as good read.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>MSI Minimum Reads = 1</p></div>
<div><p>MSI Minimum Reads = 2</p></div>	
	<div><p>MSI Minimum Reads = 3</p></div>
<div><p>MSI Minimum Reads = 4</p></div>	<div><p>DEFAULT</p></div>

# MSI – cont.

## MSI Decoding Level

Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer’s needs.

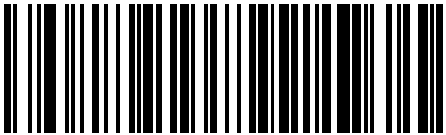

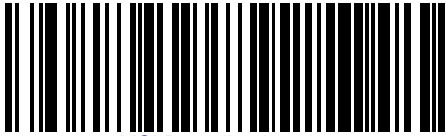
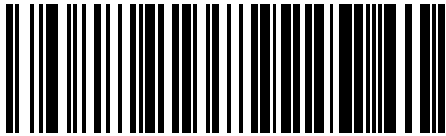
- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> MSI Decoding Level = Disable</div>
<div> MSI Decoding Level = 1</div>	
	<div> MSI Decoding Level = 2</div>

MSI – cont.

MSI Decoding Level – cont.

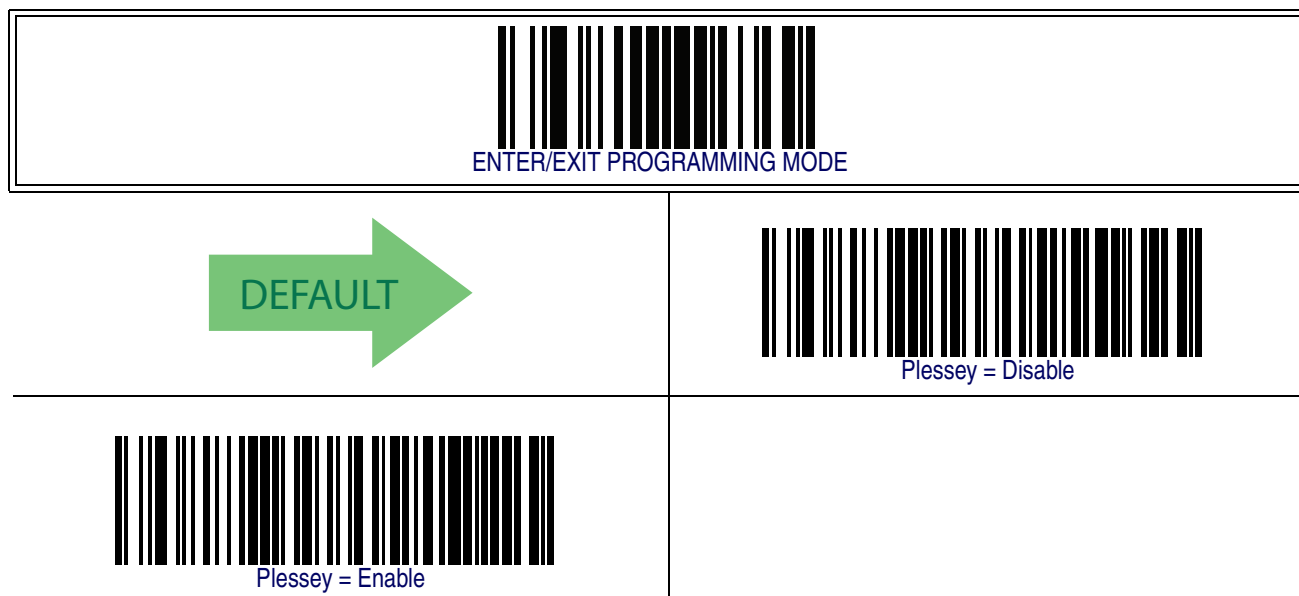
 <p>MSI Decoding Level = 3</p>	
	 <p>MSI Decoding Level = 4</p>
 <p>MSI Decoding Level = 5</p>	

## Plessey

The following options apply to the Plessey symbology.

### Plessey Enable/Disable

Enables/Disables ability of reader to decode Plessey labels.



# Plessey – cont.

## Plessey Check Character Calculation

Enables/Disables calculation and verification of an optional Plessey check character.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Plessey Check Character Calculation = Disable</div>
<div> Plessey Check Character Calculation = Enable Plessey std. check char. verification</div>	<div> DEFAULT</div>
	<div> Plessey Check Character Calculation = Enable Anker check char. verification</div>
<div> Plessey Check Character Calculation = Enable Plessey std. and Anker check char verification</div>	



Plessey — cont.

Plessey Check Character Transmission

Enables/disables transmission of an MSI check character.

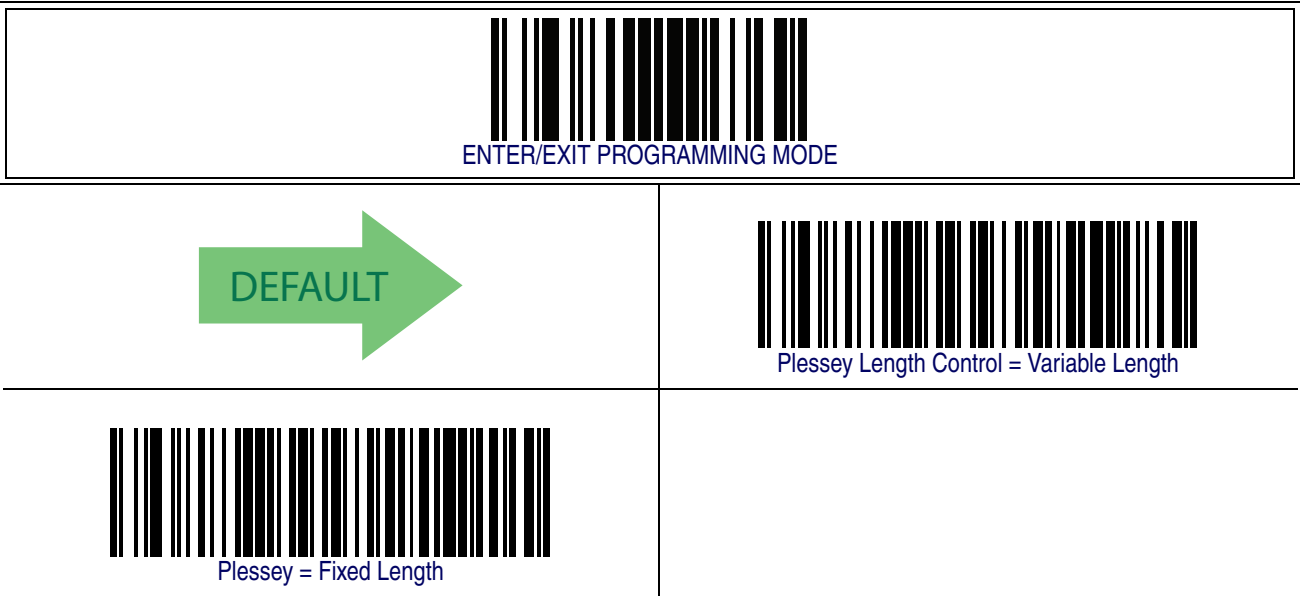


Plessey Length Control

This feature specifies either variable length decoding or fixed length decoding for the Plessey symbology.

**Variable Length** — For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** — For fixed length decoding, two different lengths may be set.



# Plessey – cont.

## Plessey Set Length 1

This feature specifies one of the barcode lengths for **Plessey Length Control**. Length 1 is the minimum label length if in **Variable Length** Mode, or the first fixed length if in **Fixed Length** Mode. Length includes the barcode’s data characters only. The length can be set from 01 to 50 characters.

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 0 to 50). Pad the number with leading zeroes to yield two digits. For example: 1 = 01, 5 = 05, 20 = 20, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT PLESSEY LENGTH 1 SETTING.
- 4. Scan the appropriate two digits from the keypad in the Keypad Appendix, that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

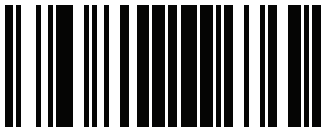
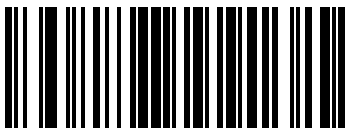
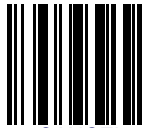
This completes the procedure. See the table below for some examples of how to set this feature.

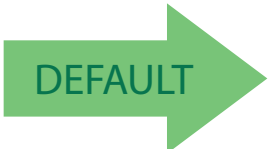
**Table 39. Plessey Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	01 Characters	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT Plessey LENGTH 1 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '1'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

## Plessey — cont.

### Plessey Set Length 1 — cont.

 ENTER/EXIT PROGRAMMING MODE	
 Select Plessey Set Length 1 Setting	
Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.	 CANCEL

 01 = Length 1 is 1 Character

# Plessey – cont.

## Plessey Set Length 2

This feature specifies one of the barcode lengths for **Plessey Length Control**. Length 2 is the maximum label length if in **Variable Length** Mode, or the second fixed length if in **Fixed Length** Mode. Length includes the barcode’s check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 1 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT PLESSEY LENGTH 2 SETTING.
- 4. Scan the appropriate two digits from the keypad in the Keypad Appendix that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake, before the last character scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

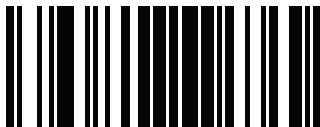
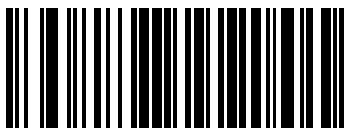
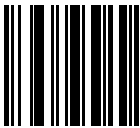
This completes the procedure. See the table below for some examples of how to set this feature.

**Table 40. Plessey Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT PLESSEY LENGTH 2 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Plessey — cont.

Plessey Set Length 2 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Plessey Length 2 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

→

DEFAULT

50 = Length 2 is 50 Characters

# Plessey – cont.

## Plessey Minimum Reads

This feature specifies the minimum number of consecutive times a Plessey label must be decoded before it is accepted as good read.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Plessey Minimum Reads = 1</p></div>
<div><p>Plessey Minimum Reads = 2</p></div>	
	<div><p>Plessey Minimum Reads = 3</p></div>
<div><p>Plessey Minimum Reads = 4</p></div>	<div><p>DEFAULT</p></div>

# Plessey — cont.

## Plessey Decoding Level

Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer’s needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Plessey Decoding Level = Disable</p></div>
<div><p>Plessey Decoding Level = 1</p></div>	
	<div><p>Plessey Decoding Level = 2</p></div>

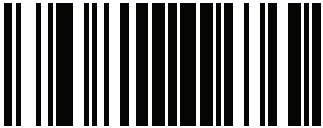
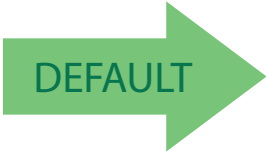
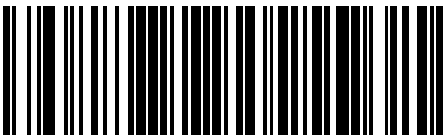
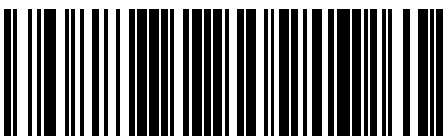
Plessey – cont.

Plessey Decoding Level – cont.

 Plessey Decoding Level = 3	
	 Plessey Decoding Level = 4
 Plessey Decoding Level = 5	

Plessey Stitching

Enables/disables fixed length stitching for Plessey.

 ENTER/EXIT PROGRAMMING MODE	
	 Plessey Stitching = Disable
 Plessey Stitching = Enable	



Plessey — cont.

Plessey Character Correlation

Enables/disables Character Correlation for Plessey.

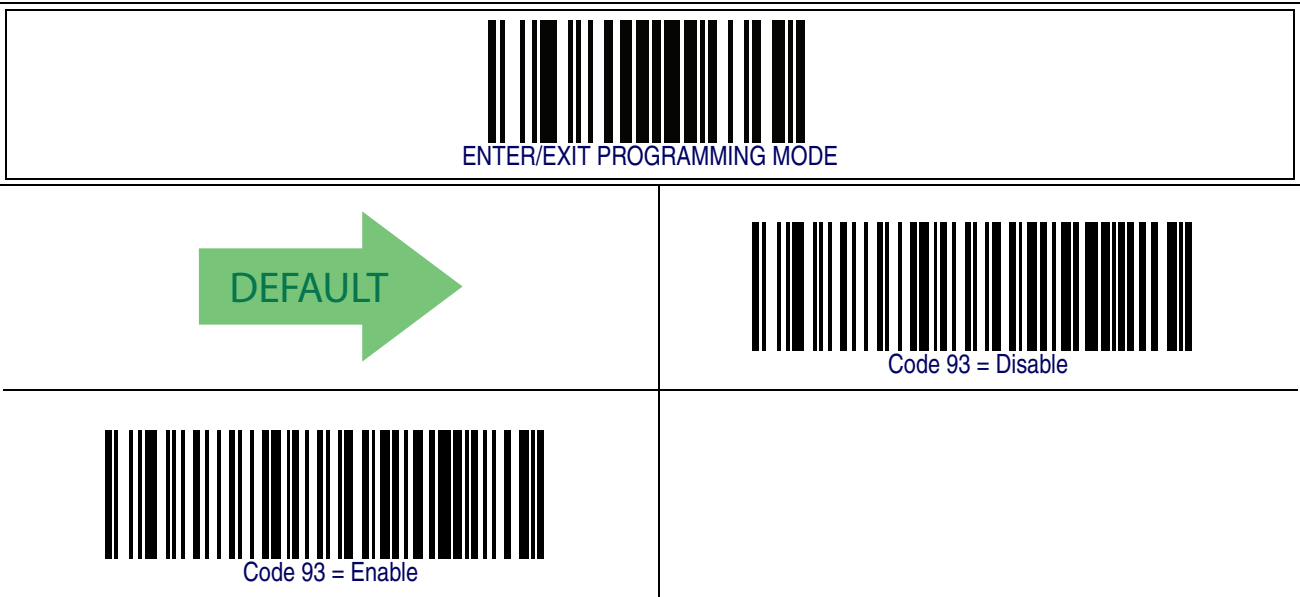


Code 93

The following options apply to the Code 93 symbology.

Code 93 Enable/Disable

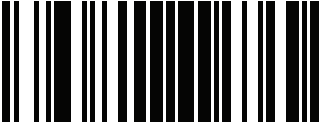
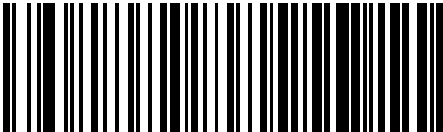




Enables/Disables ability of reader to decode Code 93 labels.



Code 93 — cont.

Code 93 Check Character Calculation

Enables/disables calculation and verification of an optional Code 93 check character.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
	<div><div></div><div>Code 93 Check Character Calculation = Disable</div></div>
<div><div></div><div>Code 93 Check Character Calculation = Enable Check C</div></div>	
	<div><div></div><div>Code 93 Check Character Calculation = Enable Check K</div></div>
<div><div></div><div>Code 93 Check Character Calculation = Enable Check C and K</div></div>	<div></div>

## Code 93 — cont.

### Code 93 Check Character Transmission

Enables/disables transmission of an optional Code 93 check character.

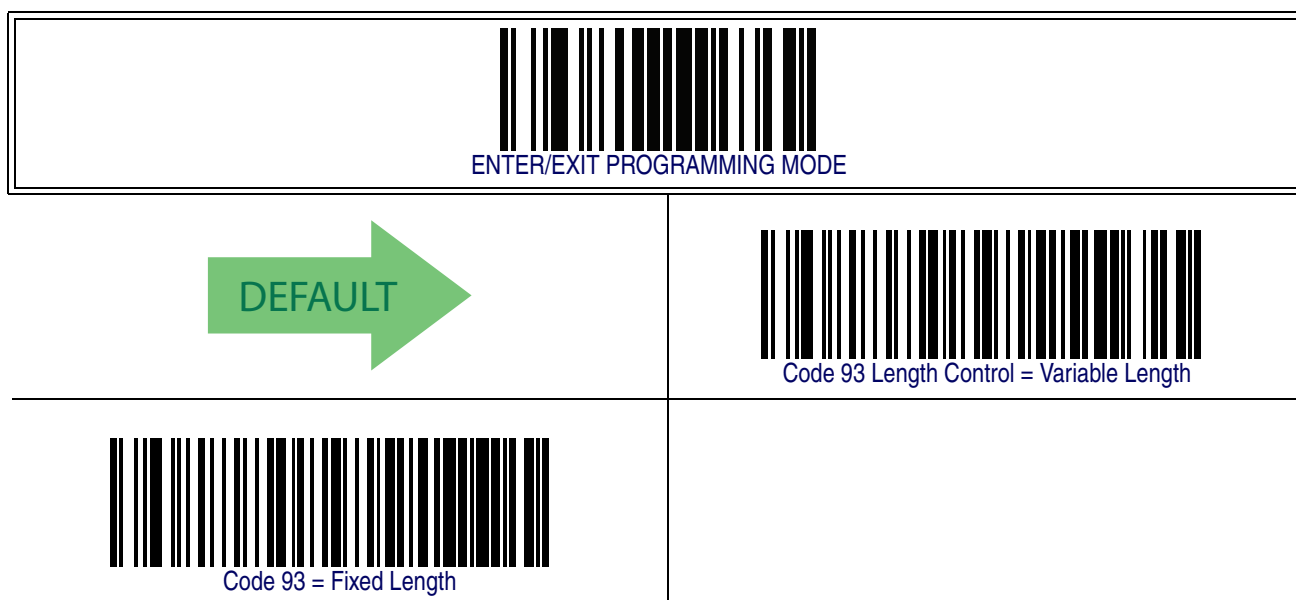


### Code 93 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 93 symbology.

**Variable Length** — For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** — For fixed length decoding, two different lengths may be set.



# Code 93 – cont.

## Code 93 Set Length 1

This feature specifies one of the barcode lengths for [Code 93 Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode’s data characters only. The length can be set from 01 to 50 characters.

Follow these instructions to set this feature:

1. Determine the desired character length (from 0 to 50). Pad the number with leading zeroes to yield two digits. For example: 1 = 01, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 93 LENGTH 1 SETTING.
4. Scan the appropriate two digits from the keypad in the Keypad Appendix, that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

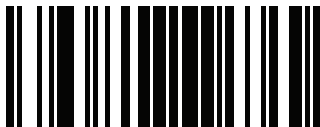

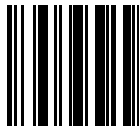
This completes the procedure. See the table below for some examples of how to set this feature.

**Table 41. Code 93 Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
		01 Characters	07 Characters	15 Characters	50 Characters
1	Desired Setting				
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 93 LENGTH 1 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '1'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Code 93 — cont.

Code 93 Set Length 1 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Code 93 Set Length 1 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

→

DEFAULT

 01 = Length 1 is 1 Character

# Code 93 – cont.

## Code 93 Set Length 2

This feature specifies one of the barcode lengths for [Code 93 Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode’s check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 1 to 50 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 1 to 50 — or 0 to ignore this length). Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODE 93 LENGTH 2 SETTING.
4. Scan the appropriate two digits from the keypad in the Keypad Appendix that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake, before the last character scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

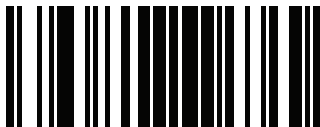
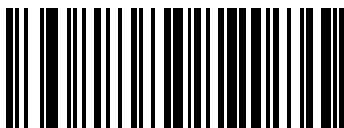
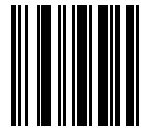
This completes the procedure. See the table below for some examples of how to set this feature.

**Table 42. CODE 93 Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	00 (Ignore This Length)	07 Characters	15 Characters	50 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODE 93 LENGTH 2 SETTING				
4	Scan Two Characters From the Keypad Appendix	'0' and '0'	'0' and '7'	'1' and '5'	'5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

Code 93 — cont.

Code 93 Set Length 2 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Code 93 Length 2 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 50 = Length 2 is 50 Characters

# Code 93 – cont.

## Code 93 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 93 label must be decoded before it is accepted as good read.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Code 93 Minimum Reads = 1</div></div>
<div><div></div><div>Code 93 Minimum Reads = 2</div></div>	
	<div><div></div><div>Code 93 Minimum Reads = 3</div></div>
<div><div></div><div>Code 93 Minimum Reads = 4</div></div>	



## Code 93 — cont.

### Code 93 Decoding Level

Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.



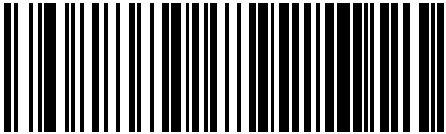
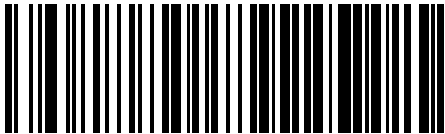
- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.

 ENTER/EXIT PROGRAMMING MODE	
	 Code 93 Decoding Level = Disable
 Code 93 Decoding Level = 1	
	 Code 93 Decoding Level = 2

Code 93 – cont.

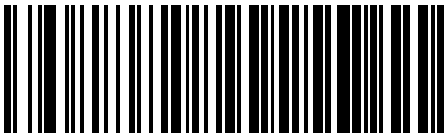
Code 93 Decoding Level – cont.

 Code 93 Decoding Level = 3	
	 Code 93 Decoding Level = 4
 Code 93 Decoding Level = 5	

Code 93 — cont.

Code 93 Quiet Zones

Enables/disables fixed length stitching for Code 93.

<div><p>ENTER/EXIT PROGRAMMING MODE</p></div>	
	<div><p>Code 93 Quiet Zones = No Quiet Zones</p></div>
<div><p>Code 93 Quiet Zones = Quiet Zone on one side</p></div>	
	<div><p>Code 93 Quiet Zones = Quiet Zones on two sides</p></div>
<div><p>Code 93 Quiet Zones = Auto</p></div>	<div></div>
	<div><p>Code 93 Quiet Zones = Virtual Quiet Zones on two sides</p></div>

Code 93 – cont.

Code 93 Stitching

Disable/enable fixed or variable length stitching for Code 93.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Code 93 Stitching = Disable</div>
<div> Code 93 Stitching = Enable</div>	<div> DEFAULT</div>

Code 93 Character Correlation

Enables/disables Character Correlation for Code 93.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
	<div> Code 93 Character Correlation = Disable</div>
<div> Code 93 Character Correlation = Enable</div>	<div> DEFAULT</div>

Codablock F

The following options apply to the Codablock F symbology.

Codablock F Enable/Disable

Enables/Disables the ability of the imager to decode Codablock F labels.



# Codablock F — cont.

## Codablock F EAN Enable/Disable

Enables/Disables the Codablock F EAN subtype (code with FNC1 in the first position).



## Codablock F AIM Check

Specifies if Check Digit calculation algorithm is AIM compliant or not.



# Codablock F — cont.

## Codablock F Length Control

This feature specifies either variable length decoding or fixed length decoding for the Codablock F symbology.

**Variable Length** — For variable length decoding, a minimum and maximum length may be set.

**Fixed Length** — For fixed length decoding, two different lengths may be set.



# Codablock F — cont.

## Codablock F Set Length 1

This feature specifies one of the barcode lengths for [Codablock F Length Control](#). Length 1 is the minimum label length if in [Variable Length](#) Mode, or the first fixed length if in [Fixed Length](#) Mode. Length includes the barcode’s data characters only. The length can be set from 003 to 255 characters.

Follow these instructions to set this feature:

- 1. Determine the desired character length (from 3 to 255). Pad the number with leading zeroes to yield three digits. For example: 3 = 003, 5 = 005, 20 = 020, etc.
- 2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
- 3. Scan the barcode: SELECT CODABLOCK F LENGTH 1 SETTING.
- 4. Scan the appropriate three digits from the keypad in the Keypad Appendix, that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake before the last character, scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

- 5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

This completes the procedure. See the table below for some examples of how to set this feature.

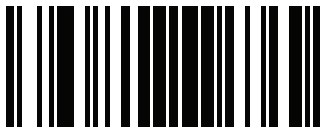
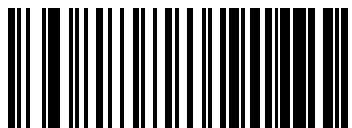
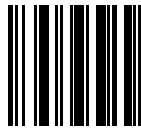
**Table 43. CODABLOC K F Length 1 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	003 Characters	007 Characters	015 Characters	050 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODABLOCK F LENGTH 1 SETTING				
4	Scan three Characters From the Keypad Appendix	'0', '0' and '3'	'0', '0' and '7'	'0','1' and '5'	'0','5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				



# Codablock F — cont.

## Codablock F Set Length 1 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Codablock F Length 1 Setting</div>	
<div>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</div>	<div> CANCEL</div>

→

DEFAULT

003 = Length 1 is 3 Characters

# Codablock F — cont.

## Codablock F Set Length 2

This feature specifies one of the barcode lengths for [Codablock F Length Control](#). Length 2 is the maximum label length if in [Variable Length](#) Mode, or the second fixed length if in [Fixed Length](#) Mode. Length includes the barcode’s check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 3 to 255 characters. A setting of 0 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length (from 3 to 255 — or 0 to ignore this length). Pad the number with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE barcode to enter Programming Mode.
3. Scan the barcode: SELECT CODABLOCK F LENGTH 2 SETTING.
4. Scan the appropriate three digits from the keypad in the Keypad Appendix that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



If you make a mistake, before the last character scan the **CANCEL** barcode to abort and not save the entry string. You can then start again at the beginning.

**NOTE**

5. Scan the ENTER/EXIT PROGRAMMING MODE barcode to exit Programming Mode.

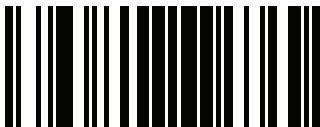
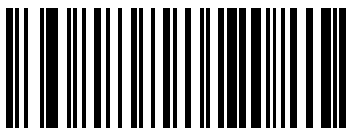
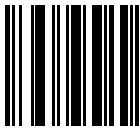
This completes the procedure. See the table below for some examples of how to set this feature.

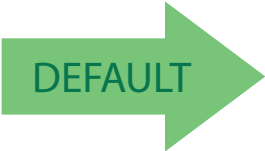
**Table 44. CODABLOCK Length 2 Setting Examples**

STEP	ACTION	EXAMPLES			
1	Desired Setting	000 (Ignore This Length)	007 Characters	015 Characters	050 Characters
2	Scan ENTER/EXIT PROGRAMMING MODE				
3	Scan SELECT CODABLOCK F LENGTH 2 SETTING				
4	Scan three Characters From the Keypad Appendix	'0', '0' and '0'	'0', '0' and '7'	'0', '1' and '5'	'0', '5' AND '0'
5	Scan ENTER/EXIT PROGRAMMING MODE				

# Codablock F — cont.

## Codablock F Set Length 2 — cont.

<div> ENTER/EXIT PROGRAMMING MODE</div>	
<div> Select Codablock F Length 2 Setting</div>	
<p>Make a mistake? Scan the CANCEL barcode to abort and not save the entry string. You can then start again at the beginning.</p>	<div> CANCEL</div>

 100 = Length 2 is 100 Characters

Code 4

The following options apply to the Code 4 symbology.

Code 4 Enable/Disable

Enables/Disables ability of imager to decode Code 4 labels.



## Code 4 — cont.

### Code 4 Check Character Transmission

This feature enables/disables transmission of an optional Code 4 check character.

 ENTER/EXIT PROGRAMMING MODE	
	 Code 4 Check Character Transmission = Don't Send
 Code 4 Check Character Transmission = Send	 DEFAULT

### Code 4 Hex to Decimal Conversion

This feature enables/disables the conversion of hexadecimal label data to decimal label data.

 ENTER/EXIT PROGRAMMING MODE	
	 Code 4 Hex to Decimal Conversion = Disable
 Code 4 Hex to Decimal Conversion = Enable	 DEFAULT

Code 5

The following options apply to the Code 5 symbology.

Code 5 Enable/Disable

Enables/Disables ability of imager to decode Code 5 labels.



## Code 5 — cont.

### Code 5 Check Character Transmission

This feature enables/disables transmission of an optional Code 5 check character.

 ENTER/EXIT PROGRAMMING MODE	
	 Code 5 Check Character Transmission = Don't Send
 Code 5 Check Character Transmission = Send	 DEFAULT

### Code 5 Hex to Decimal Conversion

This feature enables/disables the conversion of hexadecimal label data to decimal label data.

 ENTER/EXIT PROGRAMMING MODE	
	 Code 5 Hex to Decimal Conversion = Disable
 Code 5 Hex to Decimal Conversion = Enable	 DEFAULT

## Code 4 and Code 5 Common Configuration Items

The following options apply to both Code 4 and Code 5 symbologies.

### Code 4 and 5 Decoding Level

Decoding Levels are used to configure a barcode symbology decoder to be very aggressive to very conservative depending on a particular customer's needs.

- Choosing Level 1 results in a very conservative decoder at the expense of not being able to read poorly printed or damaged labels.
- Choosing Level 5 results in a very aggressive decoder. This aggressive behavior allows decoding of poorly printed and damaged labels at the expense of increasing the likelihood of decoding errors.
- Choosing Level 3, which is the default setting, allows the majority of product labels to be decoded.

There are many factors that determine when to change the decoding level for a particular symbology. These factors include spots, voids, non-uniform bar/space widths, damaged labels, etc. that may be experienced in some barcode labels. If there are many hard to read or damaged labels that cannot be decoded using a conservative setting, increase the decoding level to be more aggressive. If the majority of labels are very good quality labels, or there is a need to decrease the possibility of a decoder error, lower the decoding level to a more conservative level.



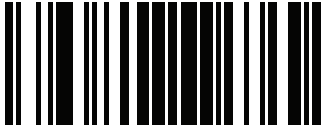
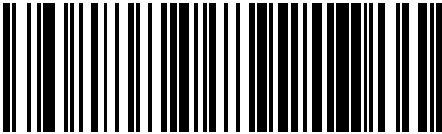
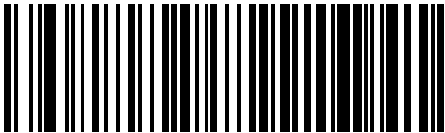
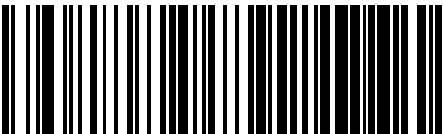

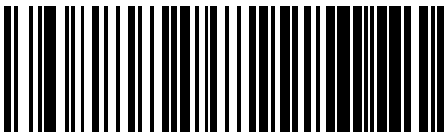
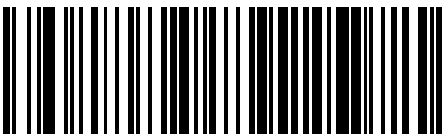
**This configuration item applies to Code 4 and Code 5.**

#### NOTE



## Code 4 and Code 5 Common Configuration Items — cont.

### Code 4 and 5 Decoding Level — cont.

 <p>ENTER/EXIT PROGRAMMING MODE</p>	
 <p>Code 4 and Code 5 Decoding Level = 1</p>	
	 <p>Code 4 and Code 5 Decoding Level = 2</p>
 <p>Code 4 and Code 5 Decoding Level = 3</p>	 <p>DEFAULT</p>
	 <p>Code 4 and Code 5 Decoding Level = 4</p>
 <p>Code 4 and Code 5 Decoding Level = 5</p>	

# Code 4 and Code 5 Common Configuration Items — cont.

## Code 4 and Code 5 Minimum Reads

This feature specifies the minimum number of consecutive times a Code 4 or Code 5 label must be decoded before it is accepted as good read.

<div><div></div><div>ENTER/EXIT PROGRAMMING MODE</div></div>	
<div><div>→</div><div>DEFAULT</div></div>	<div><div></div><div>Code 4 or Code 5 Minimum Reads = 1</div></div>
<div><div></div><div>Code 4 or Code 5 Minimum Reads = 2</div></div>	
	<div><div></div><div>Code 4 or Code 5 Minimum Reads = 3</div></div>
<div><div></div><div>Code 4 or Code 5 Minimum Reads = 4</div></div>	

## Follett 2 of 5

The following options apply to the Follett 2 of 5 symbology.

### Follett 2 of 5 Enable/Disable

Enables/Disables ability of imager to decode Follett 2 of 5 labels.



## NOTES

# Appendix A

## Technical Specifications

Table 45 contains Physical and Performance Characteristics, User Environment and Regulatory information. Table 46 provides Standard Cable Pinouts.

**Table 45. Technical Specifications**

Item	Description
<b>Physical Characteristics</b>	
Color	Yellow/Black Black/Black
Dimensions	Height 7.5"/190 mm Length 4.5"/115 mm Width 3.0"/75 mm
Weight (without cable)	Approximately 9.9 ounces/280 g (without cable)
<b>Electrical Characteristics</b>	
Voltage & Current	Input current at 5V = 285 mA (max) <sup>a</sup> 135 mA (standby) 2.5 mA (RS-232 sleep mode) 2.5 mA (USB suspend) Input Power = 1.5W max in the 4 - 14V range <sup>a</sup>
<b>Performance Characteristics</b>	
Light Source	Dual LEDs
Roll (Tilt) Tolerance	± 30° from normal
Pitch Tolerance	± 65°
Skew (Yaw) Tolerance	± 60°
Field of View	2" wide at 1" from the reader 7" wide at 7" from the reader
Depth of Field <sup>b</sup>	100 mil: typical 5.1" to 208.7" (13 cm to 530 cm) 55 mil: typical 1.9" to 118.1" (4.7 cm to 300 cm) 40 mil: typical 0.8" to 94.5" (2 cm to 240 cm) 20 mil: typical 0.1" to 46.9" (0.3 cm to 119 cm) 13 mil: typical 0" to 31.5" (0.1 cm to 80 cm) 10 mil: typical 0" to 23.6" (0 cm to 60 cm) 7.5 mil: typical 0.1" to 17.3" (0.2 cm to 44 cm) 5 mil: typical 0.6" to 5.5" (1.5 cm to 14 cm)

Item	Description
Minimum Element Width	3 mil
Print Contrast Minimum	15% minimum reflectance
Decode Capability	UPC/EAN/JAN, P2 /P5 add-ons; Code 39; Italian Code 32; Code 128; Code 128 ISBT; Code 128 add-ons; I 2 of 5; Standard 2 of 5; Code 11; Codabar; GS1-128; Code 93; GS1 DataBar Omnidirectional, GS1 DataBar Limited, GS1 DataBar Expanded.
Interfaces Supported <sup>c</sup>	RS-232 Std., RS-232 Wincor-Nixdorf, RS-232 OPOS, IBM 46xx (ports 5B and 9B), USB Com Std., USB Keyboard, USB Alternate Keyboard, USB-OEM, Keyboard Wedge (AT with or w/o Alternate Key, IBM AT PS2 with or w/o Alternate Key, PC-XT, IBM 3153, IBM Terminals 31xx, 32xx, 34xx, 37xx make only and make break keyboard, and Digital Terminals VT2x, VT3xx, VT4xx, and Apple).
<b>User Environment</b>	
Operating Temperature	-22° to 122° F (-30° to 50° C)
Storage Temperature	-40° to 158° F (-40° to 70° C)
Humidity	Operating: 5% to 90% relative humidity, non-condensing Storage: 5% to 95% relative humidity, non-condensing
Drop Specifications	50 drops from 2 meters (6.5 feet) to concrete, -30°C to 50°C
Ambient Light Immunity	Up to 100,000 LUX in sunlight.
Contaminants Spray/rain Dust/particulates	IEC 529-IPX5 IEC 529-IP6X
Beeper Loudness	84 dBA typical for operator at a distance of 19" (50cm)
ESD Level	25 KV
<b>Regulatory</b>	
Electrical Safety	UL 60950, CSA C22.2 No. 60950, IEC 60950
EMI/RFI	FCC Part 15 Class B, ICES-003 Class B, European Union EMC Directive, Taiwan BSMI, Japan VCCI, Korea MIC
Laser Safety	Complies with 21 CFR 1040 Class 2 and IEC/EN60825-1:2007 Class II when laser pointer installed.

a. Typical input current with factory default configuration. Max input current = 315 mA @ 5V with factory default configuration. Changes to the default (scan mode or beeper settings) may increase the max input current up to 410 mA @ 5V and the max power up to 2.05 W.

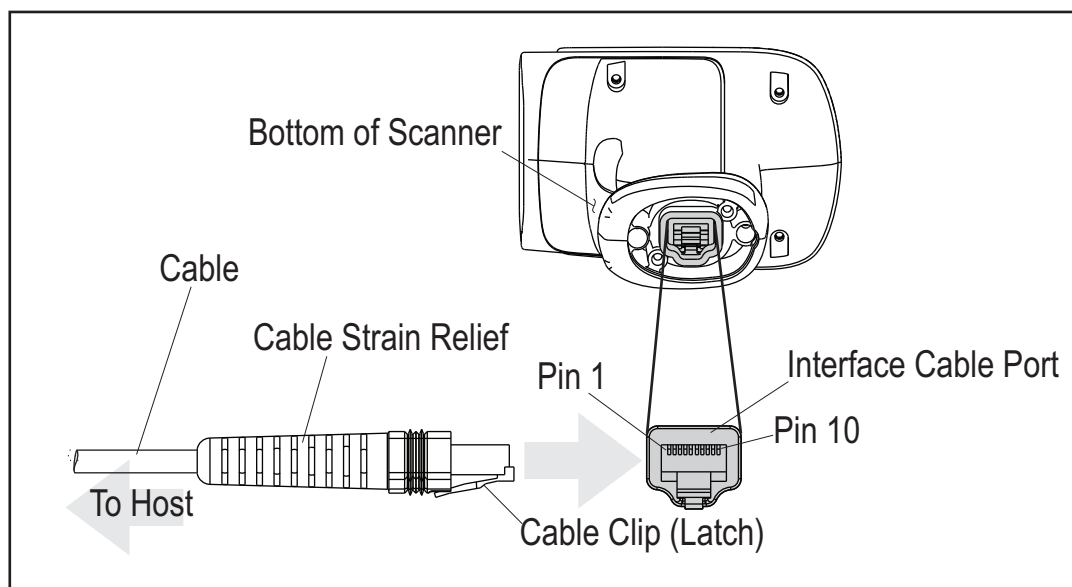
b. 13 mil DOF based on UPC. All others are Code 39. All labels grade A, minimum illumination 300 LUX, 20°C, label inclination 10°.

c. See [Interface Selection on page 11](#) for a listing of available interface sets by model type.

## Standard Cable Pinouts

Figure 7 and Table 46 provide standard pinout information for the Base Station's interface cable.

**Figure 7. Standard Cable Pinouts**



The signal descriptions in Table 46 apply to the connector on the reader and are for reference only.

**Table 46. Standard Cable Pinouts — Reader Side**

Pin	RS-232	OEM	USB	Keyboard Wedge
1	RTS (out)			
2			D+	CLKIN (KBD side)
3			D-	DATAIN (KBD side)
4	GND	GND	GND	GND
5	RX			
6	TX			
7	VCC	VCC	VCC	VCC
8		IBM_B		CLKOUT (PC side)
9		IBM_A		DATAOUT (PC side)
10	CTS (in)			

---

## NOTES



# Appendix B

## Standard Defaults

The most common configuration settings are listed in the “Default” column of [Table 47](#). The settings in this table are as applied to a standard RS-232 interface. See [Table 48](#) for a listing of default exceptions to this list as applied to other interface types. Page references are also provided for feature descriptions and programming barcodes for each parameter. A column has also been provided for recording of your preferred default settings for these same configurable features.

**Table 47. Standard Defaults**

Parameter	Default	Your Setting	Page Number
<b>General Features</b>			
Double Read Timeout	0.4 Second		17
Label Gone Timeout	160 ms		19
Sleep Mode Timeout	Disable		21
Sleep Mode Timeout	Disable		21
Power On Alert	4 Beeps		23
Good Read: When to Indicate	After Decode		24
Good Read Beep Type	Mono		25
Good Read Beep Frequency	Medium		26
Good Read Beep Length	80 ms		26
Good Read Beep Volume	High		28
Good Read LED Duration	LED on until next trigger pull		29
Scan Mode	Trigger Single		31
Scanning Active Time	5 Seconds		35
Flash On Time	1 Second		37
Flash Off Time	600 ms		39
Stand Mode Sensitivity	Medium		41

Parameter	Default	Your Setting	Page Number
Laser Pointer Control	Start scanning immediately after trigger		42
Laser Pointer Period	500 ms		43
Green Spot Duration	300 ms		44
<b>RS-232</b>			
Baud Rate	9600		45
Data Bits	8 Data Bits		47
Stop Bits	1 Stop Bit		48
Parity	None		49
Handshaking Control	Disable		50
<b>RS-232/USB-COM</b>			
Intercharacter Delay	No Delay		52
Beep On ASCII BEL	Disable		54
Beep On Not on File	Enable		54
ACK Character	'ACK'		56
NAK Character	'NAK'		58
ACK NAK Timeout Value	600 ms		60
ACK NAK Retry Count	3 Retries		62
ACK NAK Error Handling	Ignore Errors Detected		64
Indicate Transmission Failure	Enable		65
Disable Character	'D'		66
Enable Character	'E'		68
<b>Keyboard Wedge</b>			
Country Mode	U.S. Keyboard		72
Caps Lock State	Caps Lock OFF		75
Numlock	Numlock Key Unchanged		75
Send Control Characters	Disable		76
Intercharacter Delay	No Delay		79
Intercode Delay	100 ms		81

Parameter	Default	Your Setting	Page Number
USB Keyboard Speed	1 ms		83
<b>USB-OEM</b>			
USB-OEM Device Usage	Handheld Scanner		86
USB-OEM Interface Options	Ignore		87
<b>IBM 46XX</b>			
46xx Number of Host Resets	6 Host Resets		90
Transmit Labels in Code 39 Format	IBM Std Format		93
IBM 46XX Interface Options	Ignore		94
<b>Wand Emulation</b>			
Wand Idle State	High		95
Wand Polarity	Quiet Zones & Spaces High, Bars Low		96
Wand Signal Speed	66 ms		97
Label Symbology Conversion	No Conversion		98
Transmit Noise	Disable		99
<b>Data Editing</b>			
Global Prefix/Suffix	No Global Prefix Global Suffix = 0x0D (CR)		102
Global AIM ID	Disable		104
GS1-128 AIM ID	Disable		106
Label ID Control	Disable		112
Case Conversion	Disable		121
Character Conversion	No Char Conversion		121
<b>Symbologies</b>			
<b>UPC-A</b>			
UPC-A Enable/Disable	Enable		126
UPC-A Check Character Transmission	Enable		126
Expand UPC-A to EAN-13	Don't Expand		127
UPC-A Number System Character Transmission	Transmit		127
UPC-A Minimum Reads	1		145

Parameter	Default	Your Setting	Page Number
In-Store Minimum Reads	2		128
UPC-E			
UPC-E Enable/Disable	Enable		129
UPC-E Check Character Transmission	Send		129
Expand UPC-E to EAN-13	Don't Expand		130
Expand UPC-E to UPC-A	Don't Expand		130
UPC-E Number System Character Transmission	Transmit		131
UPC-E Minimum Reads	2		132
GTIN			
GTIN Formatting	Disable		133
EAN 13			
EAN 13 Enable/Disable	Enable		134
EAN 13 Check Character Transmission	Send		134
EAN-13 Flag 1 Character	Transmit		135
EAN-13 ISBN Conversion	Disable		136
ISSN Enable/Disable	Disable		136
EAN 13 Minimum Reads	1		137
EAN 8			
EAN 8 Enable/Disable	Enable		138
EAN 8 Check Character Transmission	Send		138
Expand EAN 8 to EAN 13	Disable		139
EAN 8 Minimum Reads	1		140
UPC/EAN Global Settings			
UPC/EAN Decoding Level	2		141
UPC/EAN Correlation	Disable		143
UPC/EAN Reconstruction	Disable		143
UPC/EAN Price Weight Check	Disable		144
Add-Ons			

Parameter	Default	Your Setting	Page Number
Optional Add-ons	Disable P2, P5 and P8		146
Optional Add-On Timer	70 ms		148
Optional GS1-128 Add-On Timer	Disable		151
P2 Add-Ons Minimum Reads	2		154
P5 Add-Ons Minimum Reads	1		155
GS1-128 Add-Ons Minimum Reads	1		156
GS1 DataBar Omnidirectional			
GS1 DataBar Omnidirectional Enable/Disable	Disable		157
GS1 DataBar Omnidirectional GS1-128 Emulation	Disable		157
GS1 DataBar Omnidirectional Minimum Reads	1		158
GS1 DataBar Expanded			
GS1 DataBar Expanded Enable/Disable	Disable		159
GS1 DataBar Expanded GS1-128 Emulation	Disable		159
GS1 DataBar Expanded Minimum Reads	1		160
GS1 DataBar Expanded Length Control	Variable		161
GS1 DataBar Expanded Set Length 1	1		162
GS1 DataBar Expanded Set Length 2	74		164
GS1 DataBar Limited			
GS1 DataBar Limited Enable/Disable	Disable		166
GS1 DataBar Limited GS1-128 Emulation	Disable		166
GS1 DataBar Limited Minimum Reads	1		167
Code 39			
Code 39 Enable/Disable	Enable		168
Code 39 Check Character Calculation	Calculate Std Chk		169
Code 39 Check Character Transmission	Send		170
Code 39 Start/Stop Character Transmission	Don't Transmit		170

Parameter	Default	Your Setting	Page Number
Code 39 Full ASCII	Disable		171
Code 39 Quiet Zones	Auto		172
Code 39 Minimum Reads	1		173
Code 39 Decoding Level	3		174
Code 39 Length Control	Variable		176
Code 39 Set Length 1	2		177
Code 39 Set Length 2	50		179
Code 39 Interdigit Ratio	4		181
Code 39 Character Correlation	Disable		183
Code 39 Stitching	Enable		184
Code 32 (Italian Pharmaceutical)			
Code 32 Enable/Disable	Disable		185
Code 32 Feature Setting Exceptions	3		185
Code 32 Check Character Transmission	Don't Send		186
Code 32 Start/Stop Character Transmission	Don't Transmit		186
Code 39 CIP (French Pharmaceutical)			
Code 39 CIP Enable/Disable	Disable		187
Code 128			
Code 128 Enable/Disable	Enable		187
Expand Code 128 to Code 39	Don't Expand		188
Code 128 Check Character Transmission	Send		188
Code 128 Quiet Zones	Auto		190
Code 128 Minimum Reads	1		191
Code 128 Decoding Level	3		192
Code 128 Length Control	Variable		194
Code 128 Set Length 1	1		195
Code 128 Set Length 2	80		197
Code 128 Character Correlation	Disable		199
Code 128 Stitching	Enable		200

Parameter	Default	Your Setting	Page Number
GS1-128			
GS1-128 Enable	Transmit in Code 128 Data Format		201
Interleaved 2 of 5			
I 2 of 5 Enable/Disable	Disable		202
I 2 of 5 Check Character Calculation	Disable		203
I 2 of 5 Check Character Transmission	Send		204
I 2 of 5 Minimum Reads	1		217
2 of 5 Decoding Level	3		206
I 2 of 5 Length Control	Variable		208
I 2 of 5 Set Length 1	12		209
I 2 of 5 Set Length 2	100		211
I 2 of 5 Character Correlation	Disable		213
I 2 of 5 Stitching	Disable		214
Interleaved 2 of 5 CIP HR			
Interleaved 2 of 5 CIP HR Enable/Disable	Disable		215
Datalogic 2 of 5			
Datalogic 2 of 5 Enable/Disable	Enable		215
Datalogic 2 of 5 Check Character Calculation	Disable		216
Datalogic 2 of 5 Minimum Reads	1		217
Datalogic 2 of 5 Length Control	Variable		218
Datalogic 2 of 5 Set Length 1	12		219
Datalogic 2 of 5 Set Length 2	100		221
Datalogic 2 of 5 Interdigit Maximum Ratio	4		223
Datalogic 2 of 5 Character Correlation	Disable		225
Datalogic 2 of 5 Stitching	Disable		226
Codabar			
Codabar Enable/Disable	Disable		227
Codabar Check Character Calculation	Don't Calculate		228

Parameter	Default	Your Setting	Page Number
Codabar Check Character Transmission	Send		229
Codabar Start/Stop Character Transmission	Transmit		229
Codabar Start/Stop Character Set	abcd/abcd		230
Codabar Start/Stop Character Match	Don't Require Match		231
Codabar Quiet Zones	Auto		232
Codabar Minimum Reads	1		233
Codabar Decoding Level	3		234
Codabar Length Control	Variable		236
Codabar Set Length 1	3		237
Codabar Set Length 2	50		239
Codabar Interdigit Ratio	4		241
Codabar Character Correlation	Disable		243
Codabar Stitching	Disable		244
ABC Codabar			
ABC Codabar Enable/Disable	Disable		245
ABC Codabar Concatenation Mode	Static		245
ABC Codabar Dynamic Concatenation Timeout	200 ms		246
ABC Codabar Force Concatenation	Disable		247
Code 11			
Code 11 Enable/Disable	Disable		248
Code 11 Check Character Calculation	Check C and K		249
Code 11 Check Character Transmission	Send		250
Code 11 Minimum Reads	1		251
Code 11 Length Control	Variable		252
Code 11 Set Length 1	4		253
Code 11 Set Length 2	50		255
Code 11 Interdigit Ratio	4		257
Code 11 Decoding Level	3		259
Code 11 Character Correlation	Disable		261



Parameter	Default	Your Setting	Page Number
Code 11 Stitching	Disable		262
Standard 2 of 5			
Standard 2 of 5 Enable/Disable	Disable		263
Standard 2 of 5 Check Character Calculation	Disable		264
Standard 2 of 5 Check Character Transmission	Send		264
Standard 2 of 5 Minimum Reads	1		265
Standard 2 of 5 Decoding Level	3		265
Standard 2 of 5 Length Control	Variable		266
Standard 2 of 5 Set Length 1	8		267
Standard 2 of 5 Set Length 2	50		269
Standard 2 of 5 Character Correlation	Disable		271
Standard 2 of 5 Stitching	Disable		272
Industrial 2 of 5			
Industrial 2 of 5 Enable/Disable	Disable		273
Industrial 2 of 5 Check Character Calculation	Disable		273
Industrial 2 of 5 Check Character Transmission	Enable		274
Industrial 2 of 5 Length Control	Variable		275
Industrial 2 of 5 Set Length 1	1 Char		276
Industrial 2 of 5 Set Length 2	50 Chars		278
Industrial 2 of 5 Minimum Reads	1 Read		280
Industrial 2 of 5 Stitching	Disable		281
Industrial 2 of 5 Character Correlation	Disable		281
IATA			
IATA Enable/Disable	Disable		282
IATA Check Character Transmission	Enable		282
ISBT 128			
ISBT 128 Concatenation	Disable		283

Parameter	Default	Your Setting	Page Number
ISBT 128 Concatenation Mode	Static		284
ISBT 128 Dynamic Concatenation Time-out	200 ms		285
ISBT 128 Force Concatenation	Disable		286
ISBT 128 Advanced Concatenation Options	Disable		286
MSI			
MSI Enable/Disable	Disable		287
MSI Check Character Calculation	Enable Mod 10		288
MSI Check Character Transmission	Enable		289
MSI Length Control	Variable		289
MSI Set Length 1	1 Char		290
MSI Set Length 2	50 Chars		292
MSI Minimum Reads	4 Reads		294
MSI Decoding Level	Level 3		295
	Disable		296
Plessey			
Plessey Enable/Disable	Disable		297
Plessey Check Character Calculation	Enable Plessey Std and Anker Check Verification		298
Plessey Check Character Transmission	Enable		299
Plessey Length Control	Variable		299
Plessey Set Length 1	1 Char		300
Plessey Set Length 2	50 Chars		302
Plessey Minimum Reads	4 Reads		304
Plessey Decoding Level	Level 3		305
Plessey Stitching	Disable		306
Plessey Character Correlation	Disable		307
Code 93			
Code 93 Enable/Disable	Disable		307

Parameter	Default	Your Setting	Page Number
Code 93 Check Character Calculation	Enable Check C & K		308
Code 93 Check Character Transmission	Enable		309
Code 93 Length Control	Variable		309
Code 93 Set Length 1	1 Char		310
Code 93 Set Length 2	50 Chars		312
Code 93 Minimum Reads	1 Read		314
Code 93 Decoding Level	Level 3		315
Code 93 Quiet Zones	Auto		317
Code 93 Stitching	Enable		318
Code 93 Character Correlation	Enable		318
Codablock F			
Codablock F Enable/Disable	Enable		319
Codablock F EAN Enable/Disable	Disable		320
Codablock F AIM Check	Enable Check C		320
Codablock F Length Control	Variable		321
Codablock F Set Length 1	3 Chars		322
Codablock F Set Length 2	100 Chars		324
Code 4			
Code 4 Enable/Disable	Disable		326
Code 4 Check Character Transmission	Don't Send		327
Code 4 Hex to Decimal Conversion	Enable		327
Code 5			
Code 5 Enable/Disable	Disable		328
Code 5 Check Character Transmission	Send		329
Code 5 Hex to Decimal Conversion	Enable		329
Code 4 and Code 5 Common Configuration Items			
Code 4 and 5 Decoding Level	3		330
Code 4 and Code 5 Minimum Reads	1		332
Follett 2 of 5			
Follett 2 of 5 Enable/Disable	Disable		333

## Default Exceptions

Table 47 lists standard default settings as applied to a standard RS-232 interface.

Table 48 provides a listing of default exceptions to that list as applied to the other interface types.

**Table 48. Default Exceptions by Interface Type**

Parameter	Default Exception
<b>Interfaces: IBM 46XX Port 5B, IBM 46XX Port 9B, USB-OEM</b>	
Global Suffix	No Global Suffix
Double Read Timeout	500 msec
<b>Interfaces: All Keyboard Wedge, USB Keyboard</b>	
No unique settings	
<b>Interface: RS232-WN</b>	
Expand UPC-A to EAN-13	Enable
UPC-E Check Character Transmission	Disable
Parity	Odd Parity
Handshaking Control	RTS/CTS
Transmission Label ID Code	Prefix
GS1-128 AIM ID	Disable
UPCE Label ID Character(s)	C
EAN 8 Label ID Character(s)	B
EAN 13 Label ID Character(s)	A
Code ISBN Label ID Character(s)	A
Code 39 Label ID Character(s)	M
Interlaved 2of5 Label ID Character(s)	I
Code Standard 2/5 Label ID Character(s)	H
Codabar Label ID Character(s)	N
Code 128 Label ID Character(s)	K
GS1-128 Label ID Character(s)	P
Datalogic 2 of 5 Label ID Character(s)	H
ISBT 128 Label ID Character(s)	K
UPCE P2 Label ID Character(s)	C
UPCE/P5 Label ID Character(s)	C
UPCE/GS1-128 Label ID Character(s)	C

Parameter	Default Excpion
EAN8/P2 Label ID Character(s)	B
EAN8/P5 Label ID Character(s)	B
EAN8/GS1-128 Label ID Character(s)	B
EAN13/P2 Label ID Character(s)	A
EAN13/P5 Label ID Character(s)	A
EAN13/GS1-128 Label ID Character(s)	A
GS1 DataBar 14 (Omnidirectional) Label ID Character(s)	E
GS1 DataBar Expanded Label ID Character(s)	E
GS1 DataBar Limited Label ID Character(s)	E
Character Conversion	CR to `
<b>Interface: RS232-OPOS</b>	
Baud Rate	115200 Baud
Transmission Label ID Code	Prefix
GS1-128 AIM ID	Disable
UPCA Label ID Character(s)	C
UPCE Label ID Character(s)	D
EAN 8 Label ID Character(s)	A
EAN 13 Label ID Character(s)	B
Code ISBN Label ID Character(s)	@
Code 39 Label ID Character(s)	V
Code 32 Label ID Character(s)	X
Interelaved 2of5 Label ID Character(s)	N
Code Standard 2/5 Label ID Character(s)	P
Codabar Label ID Character(s)	R
Code 11 Label ID Character(s)	b
Code 128 Label ID Character(s)	T
GS1-128 Label ID Character(s)	k
UPCA/P2 Label ID Character(s)	F
UPCA/P5 Label ID Character(s)	G
UPCA/GS1-128 Label ID Character(s)	Q
UPCE P2 Label ID Character(s)	H

Parameter	Default Excpction
UPCE/P5 Label ID Character(s)	I
EAN8/P2 Label ID Character(s)	J
EAN8/P5 Label ID Character(s)	K
EAN8/GS1-128 Label ID Character(s)	*
EAN13/P2 Label ID Character(s)	L
EAN13/P5 Label ID Character(s)	M
EAN13/GS1-128 Label ID Character(s)	#
GS1 DataBar 14 (Omnidirectional) Label ID Character(s)	u
GS1 DataBar Expanded Label ID Character(s)	t
GS1 DataBar Limited Label ID Character(s)	v
GTIN W/o Add on Label ID Character(s)	\$A
GTIN Addon 2 Label ID Character(s)	\$B
GTIN Add on 5 Label ID Character(s)	\$C
GTIN Add on 8 Label ID Character(s)	\$D

# Appendix C

## LED and Beeper Indications

---

The reader's beeper sounds and its LED illuminates to indicate various functions or errors on the reader. An optional "Green Spot" also performs useful functions. The tables below list these indications. One exception to the behaviors listed in the tables is that the reader's functions are programmable, and may or may not be turned on. For example, certain indications, such as the power-up beep can be disabled using programming barcode labels.

## LED and Beeper Indications

INDICATION	DESCRIPTION	LED	BEEPER
Power-up Beep	The reader is in the process of powering-up.		Reader beeps four times at highest frequency and volume upon power-up.
Good Read Beep	A label has been successfully scanned by the reader.	LED behavior for this indication is configurable via the feature <a href="#">“Good Read: When to Indicate”</a>	The reader will beep once at current frequency, volume, mono/bi-tonal setting and duration upon a successful label scan.
ROM Failure	There is an error in the reader's software/programming	Flashes	Reader sounds one error beep at highest volume.
Limited Scanning Label Read	Indicates that a host connection is not established when the IBM or USB interface is enabled.	N/A	Reader 'chirps' six times at the highest frequency and current volume.
Reader Active Mode	The reader is active and ready to scan.	The LED is lit steadily <sup>a</sup>	N/A
Reader Disabled	The reader has been disabled by the host.	The LED blinks continuously	N/A
Green Spot is on continuously	While in Stand Mode or Trigger Object Sense mode the green spot shall be on while in stand watch state.	N/A	N/A
Green Spot <sup>a</sup> flashes momentarily	Upon successful read of a label, the software shall turn the green spot on for the time specified by the configured value.	N/A	N/A

**Programming Mode** - The following indications ONLY occur when the reader is in Programming Mode.

Label Programming Mode Entry	A valid programming label has been scanned.	LED blinks continuously	Reader sounds four low frequency beeps.
Label Programming Mode Rejection of Label	A label has been rejected.	N/A	Reader sounds three times at lowest frequency & current volume.
Label Programming Mode Acceptance of Partial Label	In cases where multiple labels must be scanned to program one feature, this indication acknowledges each portion as it is successfully scanned.	N/A	Reader sounds one short beep at highest frequency & current volume.
Label Programming Mode Acceptance of Programming	Configuration option(s) have been successfully programmed via labels and the reader has exited Programming Mode.	N/A	Reader sounds one high frequency beep and 4 low frequency beeps followed by reset beeps.
Label Programming Mode Cancel Item Entry	Cancel label has been scanned.	N/A	Reader sounds two times at low frequency and current volume.

<sup>a</sup>. Except when in sleep mode or when a [Good Read LED Duration](#) other than 00 is selected



## Error Codes

Upon startup, if the reader sounds a long tone, this means the reader has not passed its automatic Selftest and has entered FRU<sup>1</sup> isolation mode. If the reader is reset, the sequence will be repeated. The following table describes the LED flashes/beep codes associated with an error found.

NUMBER OF LED FLASHES/BEEPS	ERROR	CORRECTIVE ACTION
1	Configuration	Contact Helpdesk for assistance
2	Interface PCB	
4	Reader Module	
5	Laser Pointer (if so equipped)	
6	Digital PCB	
14	CPLD/Code Mismatch	

1. Field Replaceable Unit (FRU)

---

## NOTES

# Appendix D

## Sample Barcodes

The sample barcodes in this appendix are typical representations for their symbology types.



**UPC-A**

**EAN-13**



**Code 39**

**Code 128**

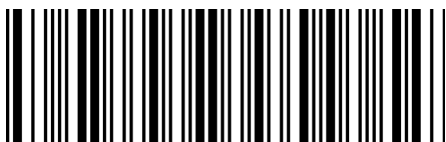


**Interleaved 2 of 5**

---

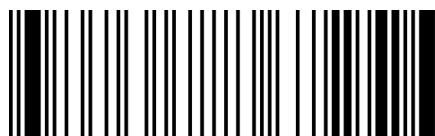
## Sample Barcodes — continued

**Code 32**



**Codabar**

**Code 93**



**Code 11**

## GS1 DataBar (RSS)



GS1 DataBar variants must be enabled to read the barcodes below (see [GS1 DataBar \(RSS\)](#) on page 359).

### NOTE



10293847560192837465019283746029478450366523  
(GS1 DataBar Expanded Stacked)



1234890hjio9900mnb  
(GS1 DataBar Expanded)



08672345650916  
(GS1 DataBar Limited)

## GS1 DataBar-14



55432198673467  
(GS1 DataBar Omnidirectional Truncated)



90876523412674  
(GS1 DataBar Omnidirectional Stacked)



78123465709811  
(GS1 DataBar Omnidirectional Stacked)







---




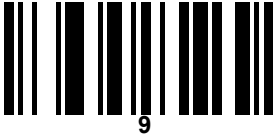
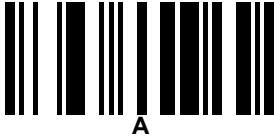
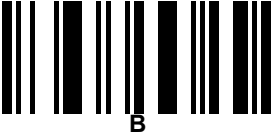

## NOTES

# Appendix E




## Keypad

Use the barcodes in this appendix to enter numbers as you would select digits/characters from a keypad.

 6	
	 7
 8	
	 9
 A	
	 B
 C	



	 D
 E	
	 F

---

## NOTES

# Appendix F

## Scancode Tables

---

### Control Character Emulation

Control character emulation selects from different scancode tables as listed in this appendix. Each of the control character sets below are detailed by interface type in the tables. These apply to Wedge and USB Keyboard platforms.

**Control Character 00** — Characters from 00 to 0x1F are sent as control character Ctrl+Keys, special keys are located from 0x80 to 0xA1.

**Control Character 01** — Characters from 00 to 0x1F are sent as control character Ctrl+Capital Key, special keys are located from 0x80 to 0xA1.

**Control Character 02** — Special keys are located from 00 to 0x1F and characters from 0x80 to 0xFE are intended as an extended ASCII table (Microsoft Windows Codepage 1252 — [see page 374](#)).

# Interface Type PC AT PS/2 or USB-Keyboar

Table 49. Scancode Set When Control Character is 00 or 01

	x0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	NULL C(S)+@	SOH C(S)+A	STX C(S)+B	ETX C(S)+C	EOT C+D	ENQ C(S)+E	ACK C(S)+F	BEL C(S)+G	BS C(S)+H	HT TAB	LF C(S)+J	VT C(S)+K	FF C(S)+L	CR Enter	SO C(S)+N	SI C(S)+O
1x	DLE C(S)+P	DC1 C(S)+Q	DC2 C(S)+R	DC3 C(S)+S	DC4 C(S)+T	NAK C(S)+U	SYN C(S)+V	ETB C(S)+W	CAN C(S)+X	EM C(S)+Y	SUB C(S)+Z	ESC Esc	FS C(S)+^	GS C+]	RS C(S)+^	US C(S)+_
2x	SP	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Del
8x	_	Sh↓	Sh↑	Ins	Ent (keyp)	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11
9x	F12	Home	End	Pg Up	Pg Dwn	↑	↓	←	→	Ar↓	Ar↑	AI↓	AI↑	CI↓	CI↑	Cr↓
Ax	Cr↑	—	‘	f	”	…	†	‡	^	%	Š	◀	Š	◀	Œ	—
Bx	°	±	²	³	´	µ	¶	·	,	¹	º	»	¼	½	¾	¿
Cx	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
Dx	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
Ex	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
Fx	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

Extended characters (sky blue) are sent via dedicated keys (when available in the selected country mode) or by an Alt Mode sequence.

# Interface Type PC AT PS/2 or USB-Keybaord — cont.

Table 50. Scancode Set When Control Character is 02

	x0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	Ar↓	Ar↑	Al↓	Al↑	Cl↓	Cl↑	Cr↓	Cr↑	BS	Tab	→	S+Tab	Enter Keypd	Enter	Ins	Pg Up
1x	Pg Dwn	Home	←	↓	↑	F6	F1	F2	F3	F4	F5	ESC	F7	F8	F9	F10
2x	Space	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Del
8x	—	—	‘	f	”	...	†	‡	^	%o	Š	◁	Š	◁	Œ	—
9x	—	‘	,	“	”	•	—	—	~	TM	š	▷	œ	—	—	Ÿ
Ax	NBSP	ı	¢	£	¤	¥	¦	§	¨	©	ª	«	¬	—	®	—
Bx	°	±	²	³	´	µ	¶	·	,	ı	º	»	¼	½	¾	¿
Cx	À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î	Ï
Dx	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
Ex	à	á	â	ã	ä	å	æ	ç	è	é	ê	ë	ì	í	î	ï
Fx	ð	ñ	ò	ó	ô	õ	ö	÷	ø	ù	ú	û	ü	ý	þ	ÿ

# Interface type PC AT PS/2 Alt Mode or USB-Keybaord Alt Mode

Table 51.1. Scancode Set When Control Character is 00 or 01

	x0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	Xf
0x	Alt+000	Alt+001	Alt+002	Alt+003	Alt+004	Alt+005	Alt+006	Alt+007	Alt+008	HT TAB	Alt+010	Alt+011	Alt+012	CR Enter	Alt+014	Alt+015
1x	Alt+016	Alt+017	Alt+018	Alt+019	Alt+020	Alt+021	Alt+022	Alt+023	Alt+024	Alt+025	Alt+026	ESC Esc	Alt+028	Alt+029	Alt+030	Alt+031
2x	A+032	A+033	A+034	A+035	A+036	A+037	A+038	A+039	A+040	A+041	A+042	A+043	A+044	A+045	A+046	A+047
3x	A+048	A+049	A+050	A+051	A+052	A+053	A+054	A+055	A+056	A+057	A+058	A+059	A+060	A+061	A+062	A+063
4x	A+064	A+065	A+066	A+067	A+068	A+069	A+070	A+071	A+072	A+073	A+074	A+075	A+076	A+077	A+078	A+079
5x	A+080	A+081	A+082	A+083	A+084	A+085	A+086	A+087	A+088	A+089	A+090	A+091	A+092	A+093	A+094	A+095
6x	A+096	A+097	A+098	A+099	A+100	A+101	A+102	A+103	A+104	A+105	A+106	A+107	A+108	A+109	A+110	A+111
7x	A+112	A+113	A+114	A+115	A+116	A+117	A+118	A+119	A+120	A+121	A+122	A+123	A+124	A+125	A+126	A+127
8x	-	Sh↓	Sh?	Ins	Ent (keyp)	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11
9x	F12	Home	End	Pg Up	Pg Dwn	↑	↓	←	→	Alt↓	Alt↑	Alt↓	Alt↑	CI ↓	CI ↑	Cr ↓
Ax	Cr↑	A+0161	A+0162	A+0163	A+0164	A+0165	A+0166	A+0167	A+0168	A+0169	A+0170	A+0171	A+0172	A+0173	A+0174	A+0175
Bx	A+0176	A+0177	A+0178	A+0179	A+0180	A+0181	A+0182	A+0183	A+0184	A+0185	A+0186	A+0187	A+0188	A+0189	A+0190	A+0191
Cx	A+0192	A+0193	A+0194	A+0195	A+0196	A+0197	A+0198	A+0199	A+0200	A+0201	A+0202	A+0203	A+0204	A+0205	A+0206	A+0207
Dx	A+0208	A+0209	A+0210	A+0211	A+0212	A+0213	A+0214	A+0215	A+0216	A+0217	A+0218	A+0219	A+0220	A+0221	A+0222	A+0223
Ex	A+0224	A+0225	A+0226	A+0227	A+0228	A+0229	A+0230	A+0231	A+0232	A+0233	A+0234	A+0235	A+0236	A+0237	A+0238	A+0239
Fx	A+0240	A+0241	A+0242	A+0243	A+0244	A+0245	A+0246	A+0247	A+0248	A+0249	A+0250	A+0251	A+052	A+0253	A+0254	A+0255

# Interface type PC AT PS/2 Alt Mode or USB-Keybaord Alt Mode — cont.

Table 52. Scancode Set When Control Character is 02

	x0	x1	x2	x3	x4	x5	X6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	Ar↓	Ar↑	Al↓	Al↑	Cl↓	Cl↑	Cr↓	Cr↑	BS	Tab	→	S+Tab	Enter Keypd	Enter	Ins	Pg Up
1x	Pg Dwn	Home	←	↓	↑	F6	F1	F2	F3	F4	F5	ESC	F7	F8	F9	F10
2x	A+032	A+033	A+034	A+035	A+036	A+037	A+038	A+039	A+040	A+041	A+042	A+043	A+044	A+045	A+046	A+047
3x	A+048	A+049	A+050	A+051	A+052	A+053	A+054	A+055	A+056	A+057	A+058	A+059	A+060	A+061	A+062	A+063
4x	A+064	A+065	A+066	A+067	A+068	A+069	A+070	A+071	A+072	A+073	A+074	A+075	A+076	A+077	A+078	A+079
5x	A+080	A+081	A+082	A+083	A+084	A+085	A+086	A+087	A+088	A+089	A+090	A+091	A+092	A+093	A+094	A+095
6x	A+096	A+097	A+098	A+099	A+100	A+101	A+102	A+103	A+104	A+105	A+106	A+107	A+108	A+109	A+110	A+111
7x	A+112	A+113	A+114	A+115	A+116	A+117	A+118	A+119	A+120	A+121	A+122	A+123	A+124	A+125	A+126	A+127
8x	A+0128	A+0129	A+0130	A+0131	A+0132	A+0133	A+0134	A+0135	A+0136	A+0137	A+0138	A+0139	A+0140	A+0141	A+0142	A+0143
9x	A+0144	A+0145	A+0146	A+0147	A+0148	A+0149	A+0150	A+0151	A+0152	A+0153	A+0154	A+0155	A+0156	A+0157	A+0158	A+0159
Ax	A+0160	A+0161	A+0162	A+0163	A+0164	A+0165	A+0166	A+0167	A+0168	A+0169	A+0170	A+0171	A+0172	A+0173	A+0174	A+0175
Bx	A+0176	A+0177	A+0178	A+0179	A+0180	A+0181	A+0182	A+0183	A+0184	A+0185	A+0186	A+0187	A+0188	A+0189	A+0190	A+0191
Cx	A+0192	A+0193	A+0194	A+0195	A+0196	A+0197	A+0198	A+0199	A+0200	A+0201	A+0202	A+0203	A+0204	A+0205	A+0206	A+0207
Dx	A+0208	A+0209	A+0210	A+0211	A+0212	A+0213	A+0214	A+0215	A+0216	A+0217	A+0218	A+0219	A+0220	A+0221	A+0222	A+0223
Ex	A+0224	A+0225	A+0226	A+0227	A+0228	A+0229	A+0230	A+0231	A+0232	A+0233	A+0234	A+0235	A+0236	A+0237	A+0238	A+0239
Fx	A+0240	A+0241	A+0242	A+0243	A+0244	A+0245	A+0246	A+0247	A+0248	A+0249	A+0250	A+0251	A+052	A+0253	A+0254	A+0255

# Digital Interface

Table 53. Scancode Set When Control Character is 00 or 01

	X0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	NULL C(S)+@	SOH C(S)+A	STX C(S)+B	ETX C(S)+C	EOT C+D	ENQ C(S)+E	ACK C(S)+F	BEL C(S)+G	BS C(S)+H	HT TAB	LF C(S)+J	VT C(S)+K	FF C(S)+L	CR Enter	SO C(S)+N	SI C(S)+O
1x	DLE C(S)+P	DC1 C(S)+Q	DC2 C(S)+R	DC3 C(S)+S	DC4 C(S)+T	NAK C(S)+U	SYN C(S)+V	ETB C(S)+W	CAN C(S)+X	EM C(S)+Y	SUB C(S)+Z	ESC Esc	FS C(S)+\	GS C+]	RS C(S)+^	US C(S)+_
2x	Space	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	,	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Del
8x		Sh↓	Sh↑	Ins	Ent (keyp)	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11
9x	F12	F13	F14	F15	F16	↑	↓	←	→					Ci↴	Ci↵	



Digital Interface — cont.

Table 54. Scancode Set When Control Character is 02

	X0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x					Cl↴	Cl↲			BS	Tab	→	S+Tab	Enter Keypd	Enter	Ins	
1x			←	↓	↑	F6	F1	F2	F3	F4	F5	ESC	F7	F8	F9	F10
2x	Space	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	,	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{		}	~	Del

# IBM31xx 102-key

Table 55. Scancode Set When Control Character is 00 or 01

	X0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	NULL C(S)+@	SOH C(S)+A	STX C(S)+B	ETX C(S)+C	EOT C+D	ENQ C(S)+E	ACK C(S)+F	BEL C(S)+G	BS C(S)+H	HT TAB	LF C(S)+J	VT C(S)+K	FF C(S)+L	CR Enter	SO C(S)+N	SI C(S)+O
1x	DLE C(S)+P	DC1 C(S)+Q	DC2 C(S)+R	DC3 C(S)+S	DC4 C(S)+T	NAK C(S)+U	SYN C(S)+V	ETB C(S)+W	CAN C(S)+X	EM C(S)+Y	SUB C(S)+Z	ESC Esc	FS C(S)+\	GS C+]	RS C(S)+^	US C(S)+_
2x	Space	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	<u>P</u>	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	‘	<u>a</u>	B	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	R	s	t	u	v	w	x	y	z	{		}		Del
8x		Sh↓	Sh↑	Ins	Ent (keyp)	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11
9x	F12	Enter	Reset	Insert	Delete	Field -	Field +	Enter paddle	Printl	Ar↓	Ar↑	Al↓	Al↑	Cl↓	Cl↑	Cr↓
Ax	Cr↑															

# IBM31xx 102-key — cont.

Table 56. Scancode Set When Control Character is 02

	X0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	Ar↓	Ar↑	Al↓	Al↑	Cl↓	Cl↑	Cr↓	Cr↑	BS	Tab	→	S+Tab	Enter Keypd	Enter	Ins	Pg Up
1x	Pg Dwn	Home	←	↓	↑	F6	F1	F2	F3	F4	F5	ESC	F7	F8	F9	F10
2x	Space	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	<u>P</u>	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	‘	<u>a</u>	B	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	R	s	t	u	v	w	x	y	z	{		}		<i>Del</i>

Table 57. Scancode Set When Control Character is 00 or 01

	X0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	NULL C(S)+@	SOH C(S)+A	STX C(S)+B	ETX C(S)+C	EOT C+D	ENQ C(S)+E	ACK C(S)+F	BEL C(S)+G	BS C(S)+H	HT TAB	LF C(S)+J	VT C(S)+K	FF C(S)+L	CR Enter	SO C(S)+N	SI C(S)+O
1x	DLE C(S)+P	DC1 C(S)+Q	DC2 C(S)+R	DC3 C(S)+S	DC4 C(S)+T	NAK C(S)+U	SYN C(S)+V	ETB C(S)+W	CAN C(S)+X	EM C(S)+Y	SUB C(S)+Z	ESC Esc	FS C(S)+\	GS C+]	RS C(S)+^	US C(S)+_
2x	Space	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	‘	a	B	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	R	s	t	u	v	w	x	y	z	{		}		Del
8x	Sh?	Sh?	Sh?	Ins	Ent (keyp)	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11
9x	F12	Home	End	Pg Up	Pg Dwn	↑	↓	←	→	Ar↵	Ar↑	Al↵	Al↑	Cl↵	Cl↑	Cr↵
Ax	Cr↑															

# IBM XT — cont.

Table 58. Scancode Set When Control Character is 02

	X0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
0x	Ar↓	Ar↑	Al↓	Al↑	Cl↓	Cl↑	Cr↓	Cr↑	BS	Tab	→	S+Tab	Enter Keypd	Enter	Ins	Pg Up
1x	Pg Dwn	Home	←	↓	↑	F6	F1	F2	F3	F4	F5	ESC	F7	F8	F9	F10
2x	Space	!	“	#	\$	%	&	‘	(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x	‘	a	B	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	R	s	t	u	v	w	x	y	z	{		}		Del

# Microsoft Windows Codepage 1252

Windows-1252 is a character encoding of the Latin alphabet, used by default in the legacy components of Microsoft Windows in English and some other Western languages.

	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
00	NUL 0000	STX 0001	SOT 0002	ETX 0003	EOT 0004	ENQ 0005	ACK 0006	BEL 0007	BS 0008	HT 0009	LF 000A	VT 000B	FF 000C	CR 000D	SO 000E	SI 000F
10	DLE 0010	DC1 0011	DC2 0012	DC3 0013	DC4 0014	NAK 0015	SYN 0016	ETB 0017	CAN 0018	EM 0019	SUB 001A	ESC 001B	FS 001C	GS 001D	RS 001E	US 001F
20	SP 0020	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/
30	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
40	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
50	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
60	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
70	p	q	r	s	t	u	v	w	x	y	z	{		}	~	DEL 007F
80	€ 20AC		ƒ 201A	Œ 0192	” 201E	… 2026	† 2020	‡ 2021	ˆ 02C6	‰ 2030	Š 0160	< 2039	Ǝ 0152		Ž 017D	
90		˘ 2018	˙ 2019	˚ 201C	˛ 201D	• 2022	— 2013	— 2014	˜ 02DC	™ 2122	Š 0161	> 203A	œ 0153		Ž 017E	Ÿ 0178
A0	NBSP 00A0	¡ 00A1	¢ 00A2	£ 00A3	¤ 00A4	¥ 00A5	¦ 00A6	§ 00A7	¨ 00A8	© 00A9	ª 00AA	« 00AB	¬ 00AC	­ 00AD	® 00AE	¯ 00AF
B0	° 00B0	± 00B1	² 00B2	³ 00B3	´ 00B4	µ 00B5	¶ 00B6	· 00B7	¸ 00B8	¹ 00B9	º 00BA	» 00BB	¼ 00BC	½ 00BD	¾ 00BE	¿ 00BF
C0	À 00C0	Á 00C1	Â 00C2	Ã 00C3	Ä 00C4	Å 00C5	Æ 00C6	Ç 00C7	È 00C8	É 00C9	Ê 00CA	Ë 00CB	Ì 00CC	Í 00CD	Î 00CE	Ï 00CF
D0	Ð 00D0	Ñ 00D1	Ò 00D2	Ó 00D3	Ô 00D4	Õ 00D5	Ö 00D6	× 00D7	Ø 00D8	Ù 00D9	Ú 00DA	Û 00DB	Ü 00DC	Ý 00DD	Þ 00DE	ß 00DF
E0	à 00E0	á 00E1	â 00E2	ã 00E3	ä 00E4	å 00E5	æ 00E6	ç 00E7	è 00E8	é 00E9	ê 00EA	ë 00EB	ì 00EC	í 00ED	î 00EE	ï 00EF
F0	ð 00F0	ñ 00F1	ò 00F2	ó 00F3	ô 00F4	õ 00F5	ö 00F6	÷ 00F7	ø 00F8	ù 00F9	ú 00FA	û 00FB	ü 00FC	ý 00FD	þ 00FE	ÿ 00FF

# NOTES

---

## NOTES



## A

Ambient Light Immunity 336

## B

bar codes

RS-232

baud rate 83

RS-232 parameters

parity 326, 328, 331, 333

barcodes

cancel 361

numeric barcodes 361

RS-232 parameters

parity 74

Beeper

Pitch, Good Read 25, 26

Volume, Good Read 28

Beeper Volume 336

Beeper, Good Read 23

## C

Cable Pinouts 337

clamshell retainer 6

Clear to Send 50

Code 39 Format 93

Conversion, case 121

Conversion, character 121

Convert to Code 128 98

Convert to Code 39 98

CTS 50

## D

Decode Capability 336

Defaults 339

Depth of Field 335

Dimensions 335

Drop Specifications 336

## E

Leading/trailing noise 99

Electrical Safety 336

EMI/RFI 336

Error Codes 355

Errors 355

## G

Good Read, Beeper 23

Pitch 25, 26

Volume 28

Good Read, Beeper – 23

Good Read, Beeper Pitch – 25, 26

Good Read, Beeper Volume – 28

Green Spot 353

## H

Handheld Scanner 86, 87, 94

Host Resets 90

Humidity 336

## I

IBM Connection 7

IBM interface selection 12

IBM Standard Format 93

Idle State (wand) 95

Indications 353

Interface Cable 6

Interface Type 8

Interfaces Supported 336

## K

keyboard support 72

KEYBOARD WEDGE (KBW) interface  
selection 13

Keyboard Wedge Connection 7

---

## L

Light Source 335

## M

Mixed OEM Standard + Code 39 Format 93

## N

numbers lock key 75

## O

Operating Temperature 336

## P

Performance Characteristics 335  
Physical Characteristics 335  
Pitch – Good Read, Beeper 25, 26  
Pitch Tolerance 335  
Polarity (wand) 96  
Prefix/Suffix 102  
Print Contrast Minimum 336  
Product Specifications 335  
Programming Barcodes 8

## R

Read, Beeper – Good 23  
Read, Beeper Pitch – Good 25, 26  
Read, Beeper Volume – Good 28  
Request to Send 50  
Roll (Tilt) Tolerance 335  
RS-232 interface selection 12  
RS-232 Serial Connection 6  
RTS 50

## S

sample bar codes  
    code 128 357  
    code 39 357  
    interleaved 2 of 5 358

select digits/characters 361  
Serial Output 337  
Signal Speed (wand) 97  
Skew (Yaw) Tolerance 335  
Standard Cable Pinouts 337  
Storage Temperature 336  
Suffix 102  
Symbology Conversion 98  
symbology types 357

## T

Table Top Scanner 86, 87, 94  
trailing noise 99

## U

UPC 126  
USB Connection 7  
USB interface selection 12  
User Environment 336

## V

Voltage & Current 335  
Volume – Good Read, Beeper 28

## W

Weight 335

## X

XON/XOFF 50

# ASCII Chart

ASCII Char.	Hex No.	ASCII Char.	Hex No.	ASCII Char.	Hex No.	ASCII Char.	Hex No.
NUL	00	SP	20	@	40	'	60
SOH	01	!	21	A	41	a	61
STX	02	"	22	B	42	b	62
ETX	03	#	23	C	43	c	63
EOT	04	\$	24	D	44	d	64
ENQ	05	%	25	E	45	e	65
ACK	06	&	26	F	46	f	66
BEL	07	'	27	G	47	g	67
BS	08	(	28	H	48	h	68
HT	09	)	29	I	49	i	69
LF	0A	*	2A	J	4A	j	6A
VT	0B	+	2B	K	4B	k	6B
FF	0C	,	2C	L	4C	l	6C
CR	0D	-	2D	M	4D	m	6D
SO	0E	.	2E	N	4E	n	6E
SI	0F	/	2F	O	4F	o	6F
DLE	10	0	30	P	50	p	70
DC1	11	1	31	Q	51	q	71
DC2	12	2	32	R	52	r	72
DC3	13	3	33	S	53	s	73
DC4	14	4	34	T	54	t	74
NAK	15	5	35	U	55	u	75
SYN	16	6	36	V	56	v	76
ETB	17	7	37	W	57	w	77
CAN	18	8	38	X	58	x	78
EM	19	9	39	Y	59	y	79
SUB	1A	:	3A	Z	5A	z	7A
ESC	1B	;	3B	[	5B	{	7B
FS	1C	<	3C	\	5C		7C
GS	1D	=	3D	]	5D	}	7D
RS	1E	>	3E	^	5E	~	7E
US	1F	?	3F	_	5F	DEL	7F

**Australia**

Datalogic Scanning Pty Ltd  
Telephone: [61] (2) 9870 3200  
australia.scanning@datalogic.com

**France and Benelux**

Datalogic Scanning SAS  
Telephone: [33].01.64.86.71.00  
france.scanning@datalogic.com

**Germany**

Datalogic Scanning GmbH  
Telephone: 49 (0) 61 51/93 58-0  
germany.scanning@datalogic.com

**India**

Datalogic Scanning India  
Telephone: 91- 22 - 64504739  
india.scanning@datalogic.com

**Italy**

Datalogic Scanning SpA  
Telephone: [39] (0) 39/62903.1  
italy.scanning@datalogic.com

**Japan**

Datalogic Scanning KK  
Telephone: 81 (0)3 3491 6761  
japan.scanning@datalogic.com

**Latin America**

Datalogic Scanning, Inc  
Telephone: (305) 591-3222  
latinamerica.scanning@datalogic.com

**Singapore**

Datalogic Scanning Singapore PTE LTD  
Telephone: (65) 6435-1311  
singapore.scanning@datalogic.com

**Iberia**

Datalogic Scanning SAS Sucursal en España  
Telephone: 34 91 746 28 60  
spain.scanning@datalogic.com

**United Kingdom**

Datalogic Scanning LTD  
Telephone: 44 (0) 1582 464900  
uk.scanning@datalogic.com



[www.scanning.datalogic.com](http://www.scanning.datalogic.com)

**Datalogic Scanning, Inc.**

959 Terry Street  
Eugene, OR 97402  
USA  
Telephone: (541) 683-5700  
Fax: (541) 345-7140

